

HINGE

Accessories - Extrusions/Fixtures


Dimensions

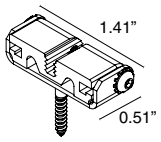


HMB-S

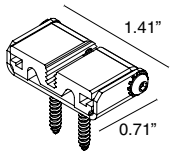

HMB-M

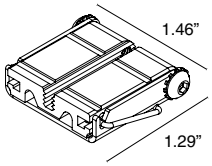

HMB-L

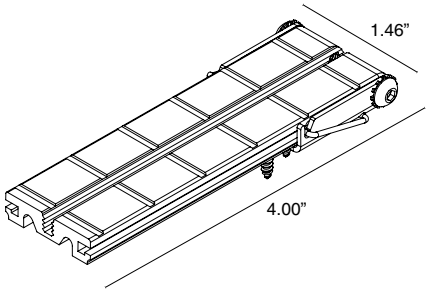

HMB-XL

Part Number Builder

Product	Options	Quantity
HMB	**S** **M** **L** **XL**	Sold individually

Features

- Hinge mounting bracket accessory for QTL extrusions & fixtures
- Aluminum and stainless steel construction
- Hinge base can be locked into varying angles up to 0-120°
- Brackets are fully assembled
- Wall, floor, or surface mounted
- Indoor/Outdoor use
- Satin finish

HMB-S
- Small bracket design for MICRO 5 fixtures and small extrusions

HMB-M
- Bracket sized to fit the majority of QTL fixtures and extrusions

HMB-L
- Mount QTL fixtures and extrusions with pre-set angle option

HMB-XL
- Large mounting arm to accomodate multiple fixtures
- Have pre-set angle options or be able to cantilever a fixture further from the mounting point

Included Parts

- Assembled bracket
- ¾" long mounting screw(s)
- 6-32 x ¼” undercut flat head mounting clip screw
- Allen key 5/64" (for HMB-S & HMB-M) or 3/32" (for HMB-L & HMB-XL)

- Compatible with most MICRO 5 linear fixtures
- Compatible with most extrusions
- Compatible with all VERS linear fixtures

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

HINGE


Accessories - Extrusions/Fixtures

Additional Dimensions


HMB-S



TOP VIEW



SIDE VIEW

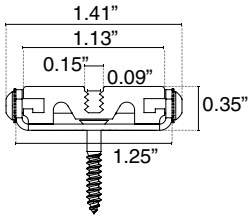


COMPATIBLE WITH

ATOM
ALTA
TILT
THIN
ROND


HMB-M



TOP VIEW

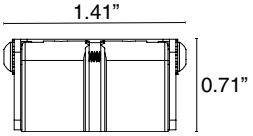

SIDE VIEW

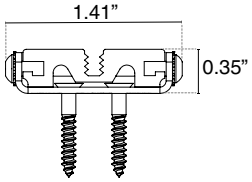


COMPATIBLE WITH

ATOM
ALTA
TILT
THIN
ROND
TORQ
LALO
LATO
VEVE
FLUR
ARKA
TELA
TALO
TRE3
WIDE
OPTI
VERS


HMB-L



TOP VIEW

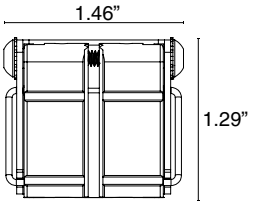


SIDE VIEW

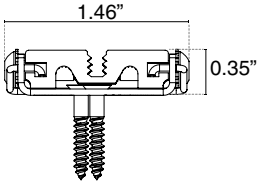


HMB-XL



TOP VIEW

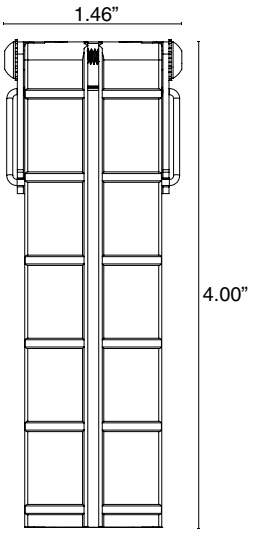

SIDE VIEW



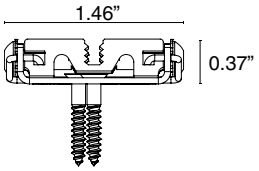


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

HINGE

Accessories - Extrusions/Fixtures

COMPATIBLE MOUNTING CLIPS








		HMB-S	HMB-M	HMB-L	HMB-XL
 CC-01	VERS		✓	✓	✓
 CC-02	VERS with Louver Accessory		✓	✓	✓
 SST-01	TORQ LALO VEVE LATO FLUR THIN OPTI		✓	✓	✓
 SST-02	TALO TRE3		✓	✓	✓
 SST-03	ARKA TELA		✓	✓	✓
 SST-07	ROND	✓	✓	✓	✓
 SST-08	ATOM ALTA TILT	✓	✓	✓	✓
 PLC-02	ARKA TELA		✓	✓	✓
 PLC-03	WIDE		✓	✓	✓

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

HINGE

Accessories - Extrusions/Fixtures

PRE-SET ANGLES FOR HMB-L & HMB-XL

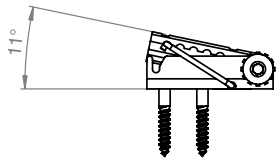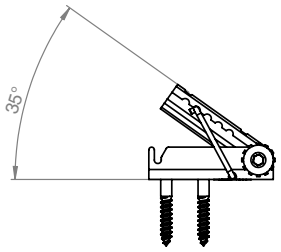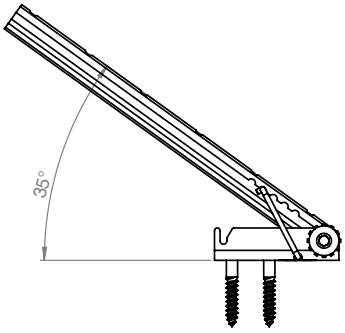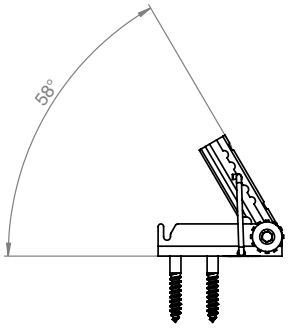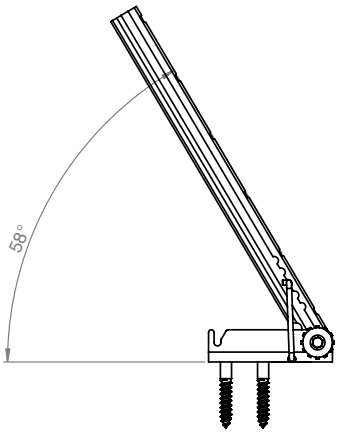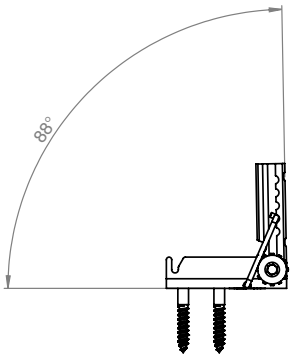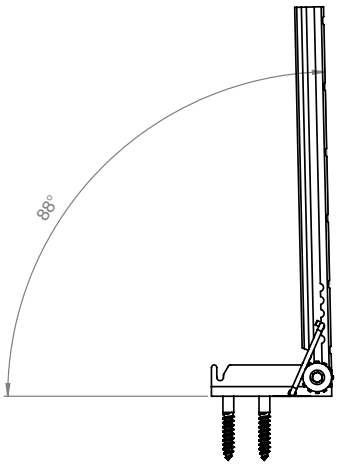	HMB-L	HMB-XL
1ST NOTCH		
2ND NOTCH		
3RD NOTCH		
4TH NOTCH		


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE


Installation Instruction

ATTENTION: Please read all instructions BEFORE installation


- Product to be installed by a licensed electrician - Field modifications void warranty
- Not recommended for use with flexible encapsulated fixtures
- Mount to drywall with drywall anchors
- Diagrams for representation only and not to scale.

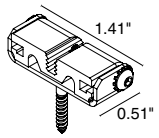


HMB-S

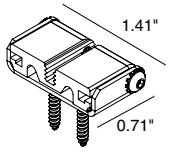

HMB-M

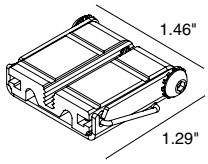

HMB-L

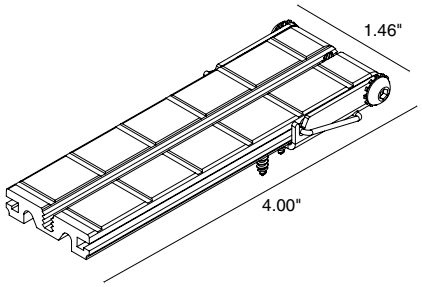

HMB-XL


HMB-S COMPATIBLE FIXTURES
• ATOM • ALTA • TILT • THIN • ROND

HMB-M/L/XL COMPATIBLE FIXTURES	
• ATOM • ALTA • TILT • THIN • ROND • TORQ • LALO • LATO • VEVE	• FLUR • ARKA • TELA • TALO • TRE3 • WIDE • OPTI • VERS

Mounting Method

- HMB-S (page 3)
- HMB-M (page 4)
- HMB-L (page 5)
- HMB-XL (page 6)

COMPONENTS & HARDWARE








INCLUDED HARDWARE	
FIXTURES SPECIFIC CLIP	HINGE SCREWS
 SST-09 Included: Flat Head Screw #4x5/8"  • Provided with compatible fixture	6-32 x 1/4" undercut flat head mounting clip screw  3/4" long mounting screw(s)  • 5/64" Allen key provided for HMB-S & HMB-M • 3/32" Allen Key provided for HMB-L & HMBL-XL

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE

Installation Instruction

PRE-SET ANGLES FOR HMB-L & HMB-XL

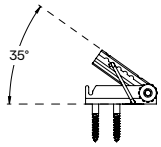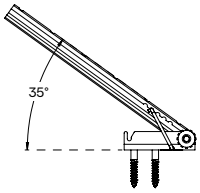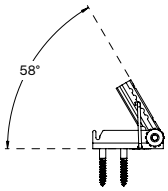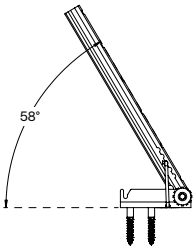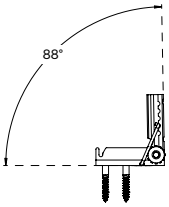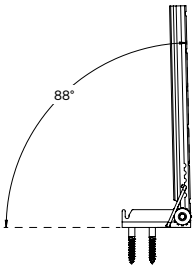
	HMB-L	HMB-XL
1ST NOTCH		
2ND NOTCH		
3RD NOTCH		
4TH NOTCH		

HMB-XL

FIELD MOUNT AND CUSTOM INSTALL FEATURES


CUSTOM CUTS

- Field cuttable to smaller lengths

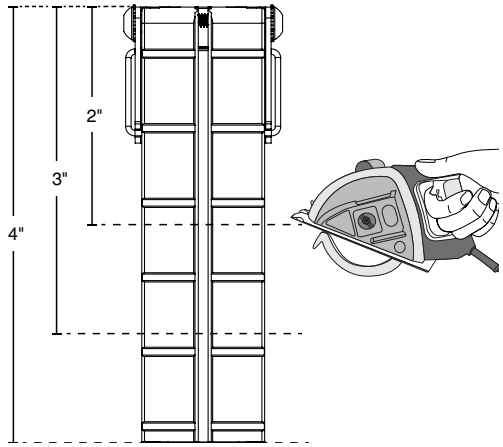

CUSTOM FIXTURE MOUNT

- Custom install 3 fixtures on wall or floor at 24" spacing
- Available for MICRO 5 standard/encapsulated fixtures or standard linear fixtures

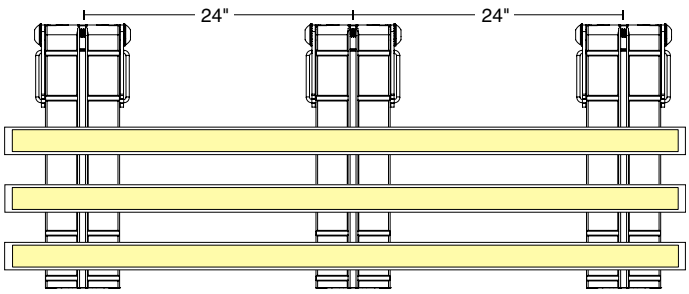

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE


Installation Instruction

RECOMMENDED BRACKET DISTRIBUTION

HMB-S — FOR MICRO 5 SERIES ONLY

STANDARD & ENCAPSULATED - Ceiling, Wall & Floor Mount


- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

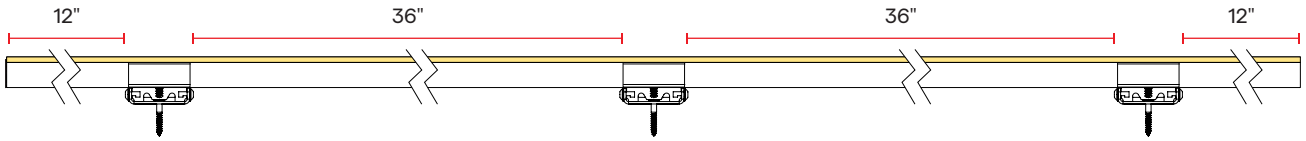

HMB-M — FOR MICRO 5 SERIES & STANDARD LINEAR FIXTURES


STANDARD - Ceiling, Wall & Floor Mount

- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

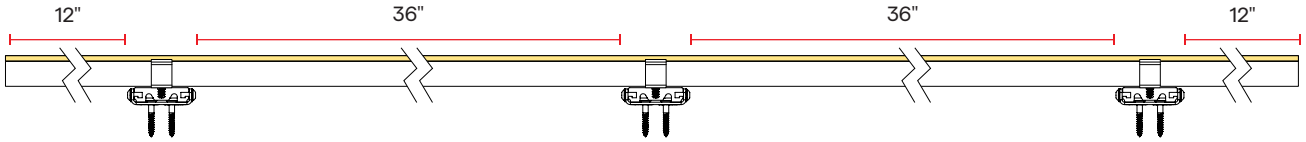

ENCAPSULATED - Ceiling, Wall & Floor Mount


- 2 brackets for 4' or less; 4 brackets for greater than 4' (3 total for 8' fixture)

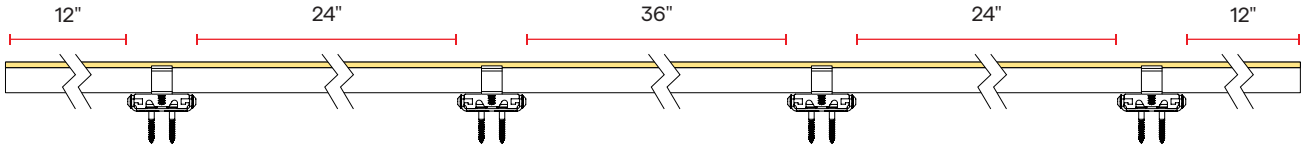

HMB-L & HMB-XL — FOR MICRO 5 SERIES STANDARD & ENCAPSULATED FIXTURES


STANDARD - Wall & Floor Mount

- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

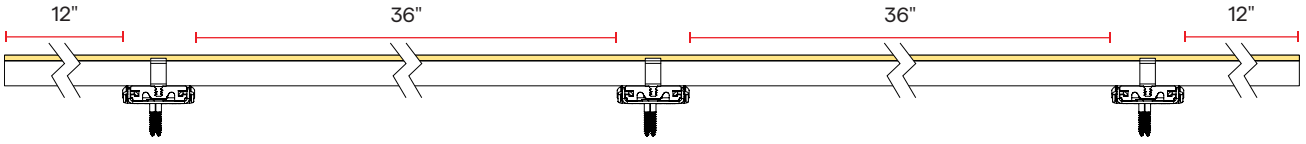

ENCAPSULATED - Ceiling, Wall & Floor Mount

- 2 brackets for 4' or less; 4 brackets for greater than 4' (3 total for 8' fixture)
- Additional bracket recommended at center of run when mounting multiple fixtures

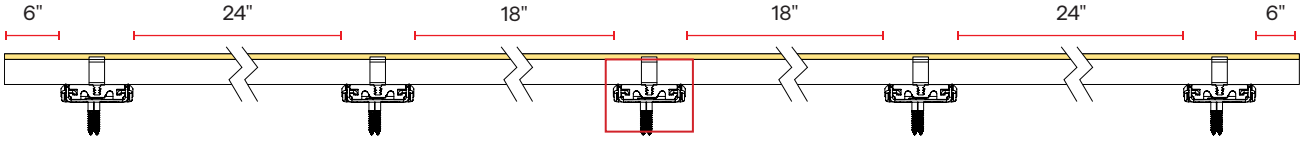

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-S**

- Ceiling, wall, or floor mounting


1

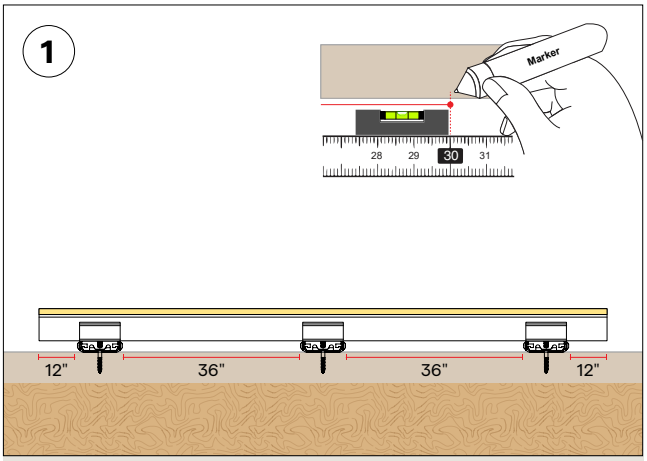

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets.

NOTE: Additional brackets can be used if needed.


2

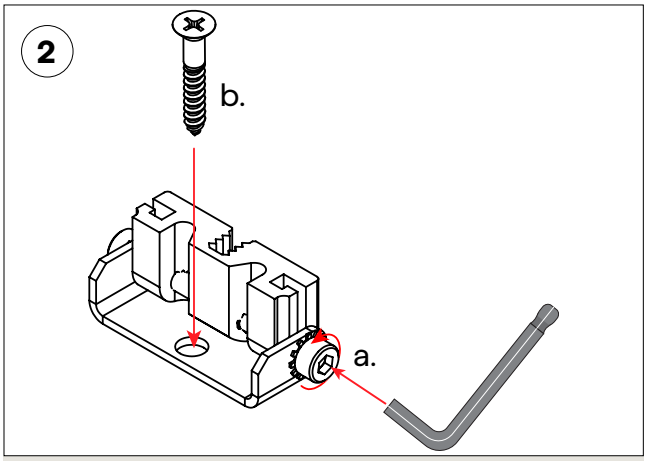

a. Loosen the hinge side screws with 5/64 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

3

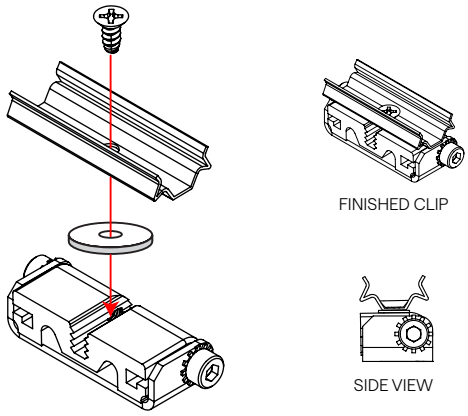


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw. For stability, add washer (.75" x .05") under mounting clips (washer not included).

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

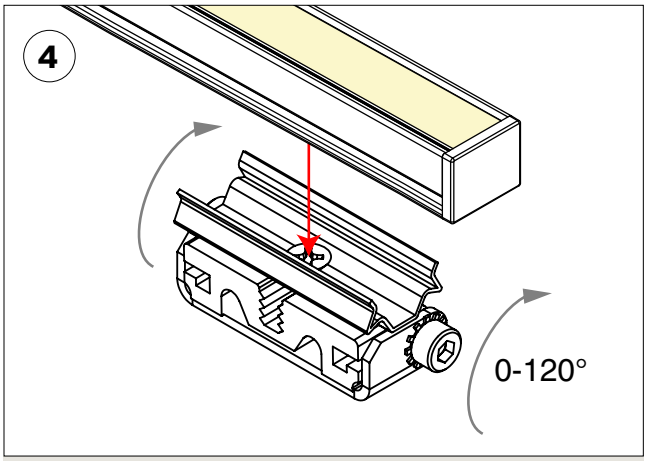

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-M**

- Ceiling, wall, or floor mounting


1

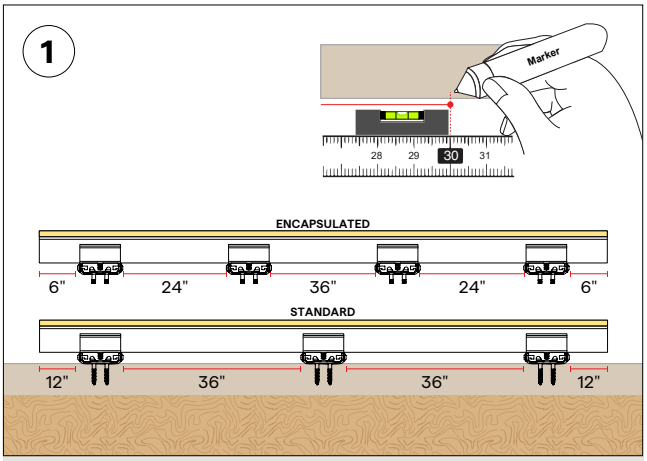

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.


2

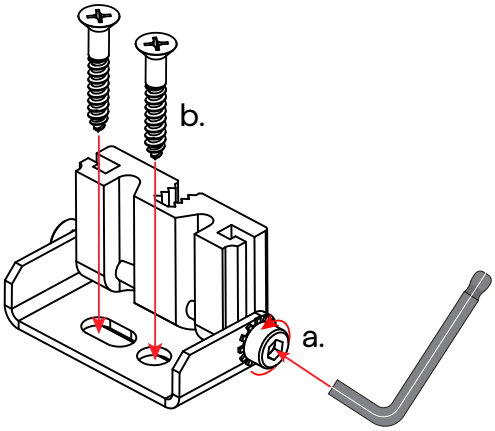

a. Loosen the hinge side screws with 5/64 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

3

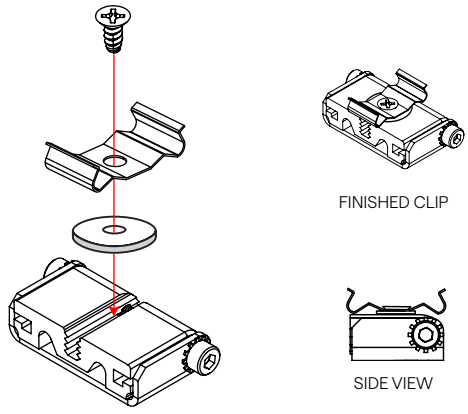


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw. For stability, add washer (.75" x .05") under mounting clips (washer not included).

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

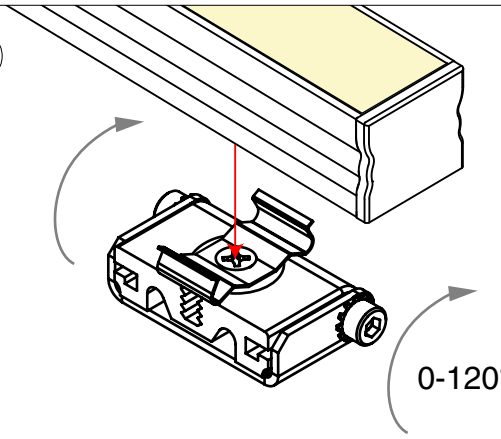

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-L**

- Floor or wall mount for standard fixtures
- Ceiling, wall, or floor mount for encapsulated fixtures


1

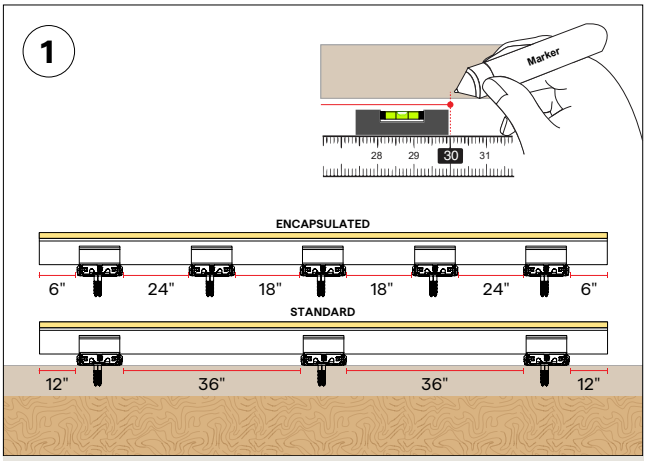

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.

2

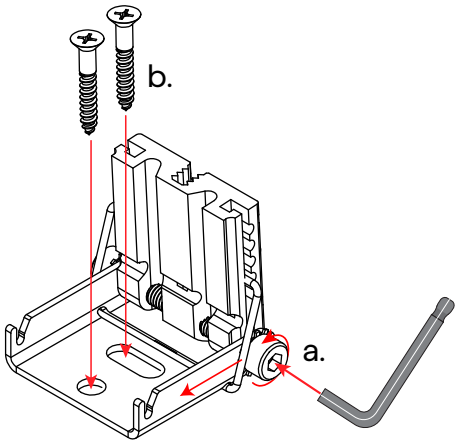


a. Loosen the hinge side screws with 3/32 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

NOTE: To lower down, push the anchor in the arrows direction. Lock back into place by pushing anchor in opposite direction.

3

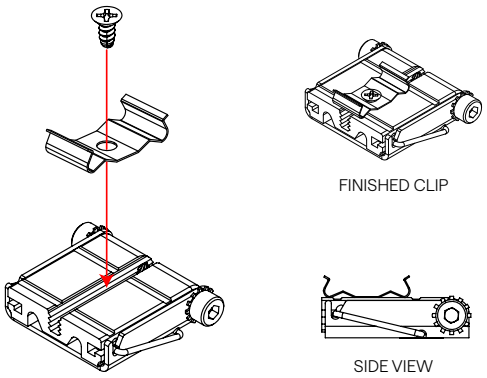


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw.

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

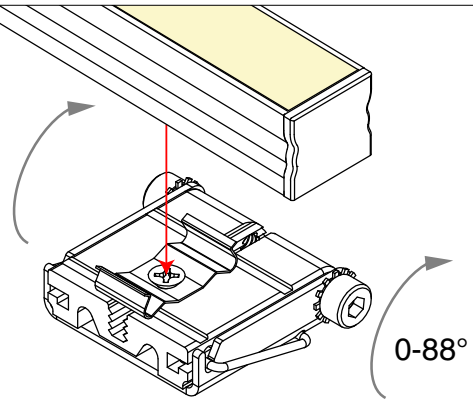

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-XL**

- Floor or wall mount for standard fixtures
- Ceiling, wall, or floor mount for encapsulated fixtures


1

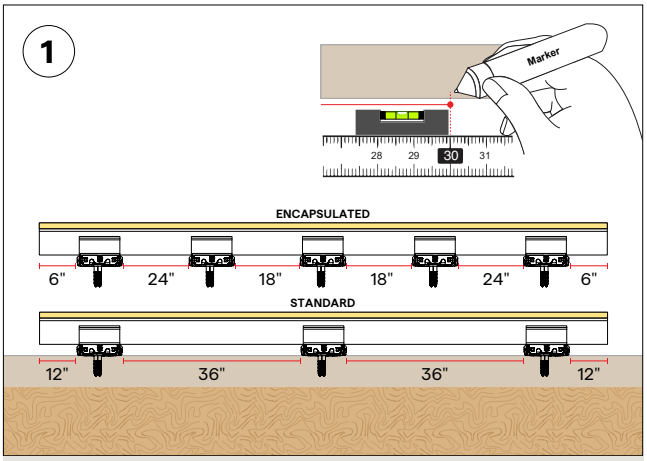

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.

2

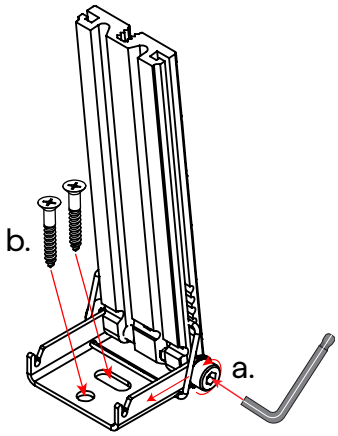


a. Loosen the hinge side screws with 3/32 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

NOTE: To lower down, push the anchor in the arrows direction. Lock back into place by pushing anchor in opposite direction.

3

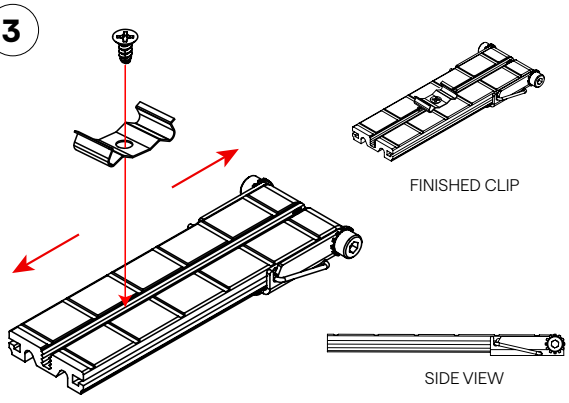


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw.

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

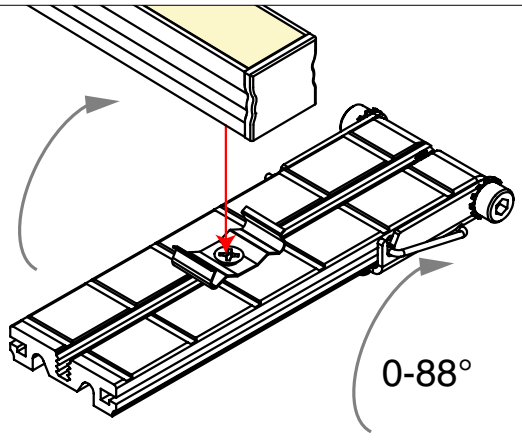

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE


Installation Instruction

ATTENTION: Please read all instructions BEFORE installation


- Product to be installed by a licensed electrician - Field modifications void warranty
- Not recommended for use with flexible encapsulated fixtures
- Mount to drywall with drywall anchors
- Diagrams for representation only and not to scale.

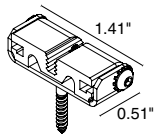


HMB-S

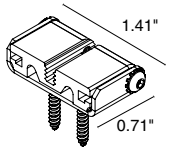

HMB-M

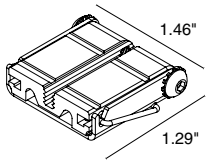

HMB-L

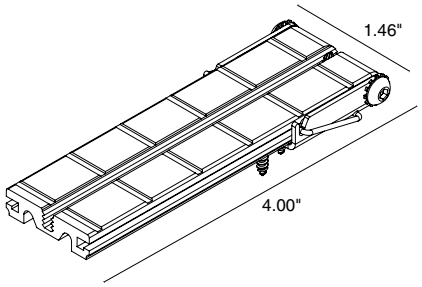

HMB-XL


HMB-S COMPATIBLE FIXTURES
• ATOM • ALTA • TILT • THIN • ROND

HMB-M/L/XL COMPATIBLE FIXTURES	
• ATOM • ALTA • TILT • THIN • ROND • TORQ • LALO • LATO • VEVE	• FLUR • ARKA • TELA • TALO • TRE3 • WIDE • OPTI • VERS

Mounting Method

- HMB-S (page 3)
- HMB-M (page 4)
- HMB-L (page 5)
- HMB-XL (page 6)

COMPONENTS & HARDWARE








INCLUDED HARDWARE	
FIXTURES SPECIFIC CLIP	HINGE SCREWS
 SST-09 Included: Flat Head Screw #4x5/8"  • Provided with compatible fixture	6-32 x 1/4" undercut flat head mounting clip screw  3/4" long mounting screw(s)  • 5/64" Allen key provided for HMB-S & HMB-M • 3/32" Allen Key provided for HMB-L & HMBL-XL

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE

Installation Instruction

PRE-SET ANGLES FOR HMB-L & HMB-XL

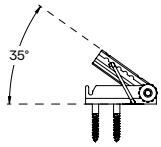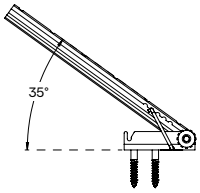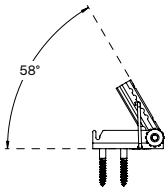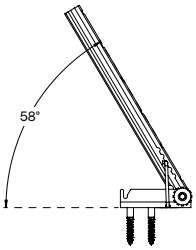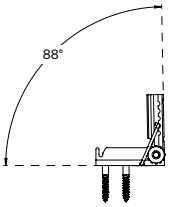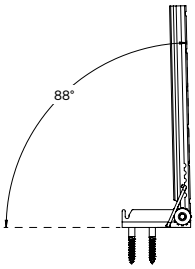
	HMB-L	HMB-XL
1ST NOTCH		
2ND NOTCH		
3RD NOTCH		
4TH NOTCH		

HMB-XL

FIELD MOUNT AND CUSTOM INSTALL FEATURES


CUSTOM CUTS

- Field cuttable to smaller lengths

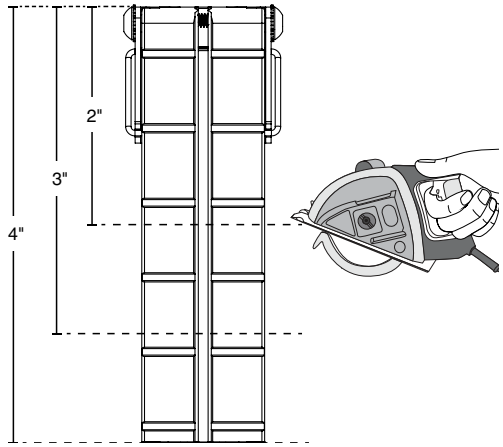

CUSTOM FIXTURE MOUNT

- Custom install 3 fixtures on wall or floor at 24" spacing
- Available for MICRO 5 standard/encapsulated fixtures or standard linear fixtures

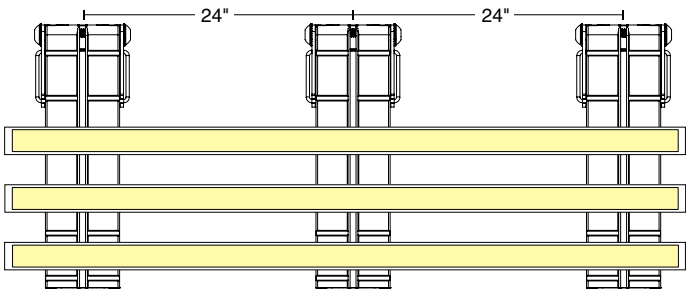

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - HINGE


Installation Instruction

RECOMMENDED BRACKET DISTRIBUTION

HMB-S — FOR MICRO 5 SERIES ONLY

STANDARD & ENCAPSULATED - Ceiling, Wall & Floor Mount


- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

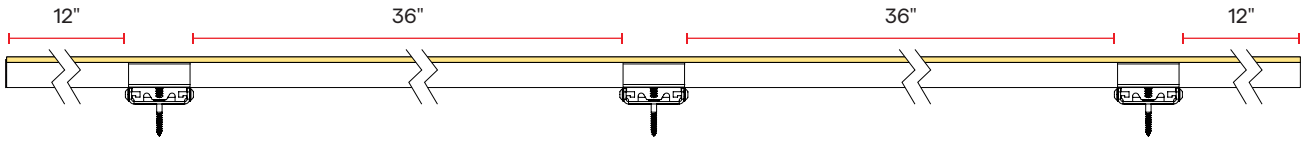

HMB-M — FOR MICRO 5 SERIES & STANDARD LINEAR FIXTURES


STANDARD - Ceiling, Wall & Floor Mount

- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

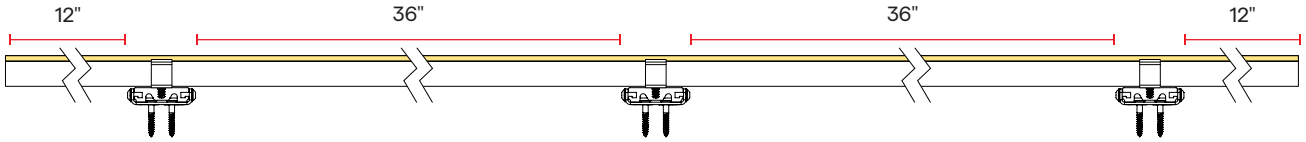

ENCAPSULATED - Ceiling, Wall & Floor Mount


- 2 brackets for 4' or less; 4 brackets for greater than 4' (3 total for 8' fixture)

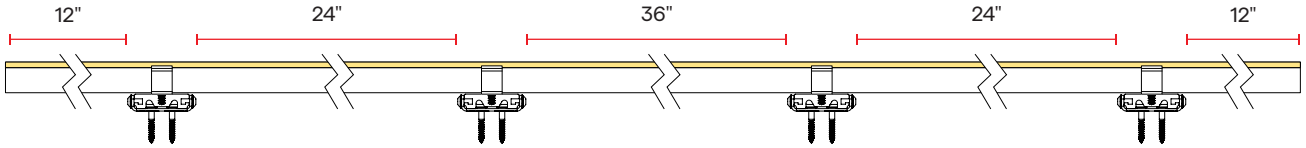

HMB-L & HMB-XL — FOR MICRO 5 SERIES STANDARD & ENCAPSULATED FIXTURES


STANDARD - Wall & Floor Mount

- 2 brackets for 4' or less; 3 brackets for greater than 4' (3 total for 8' fixture)

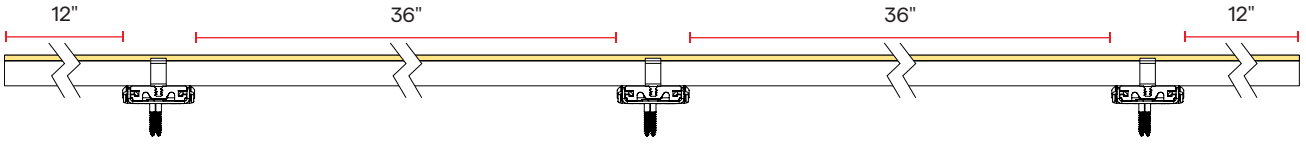

ENCAPSULATED - Ceiling, Wall & Floor Mount

- 2 brackets for 4' or less; 4 brackets for greater than 4' (3 total for 8' fixture)
- Additional bracket recommended at center of run when mounting multiple fixtures

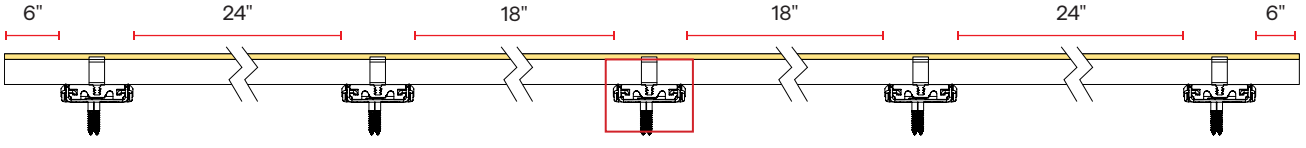

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-S**

- Ceiling, wall, or floor mounting


1

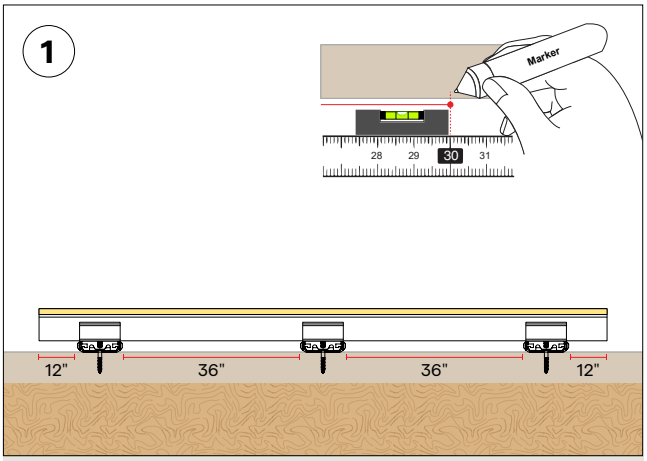

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets.

NOTE: Additional brackets can be used if needed.


2

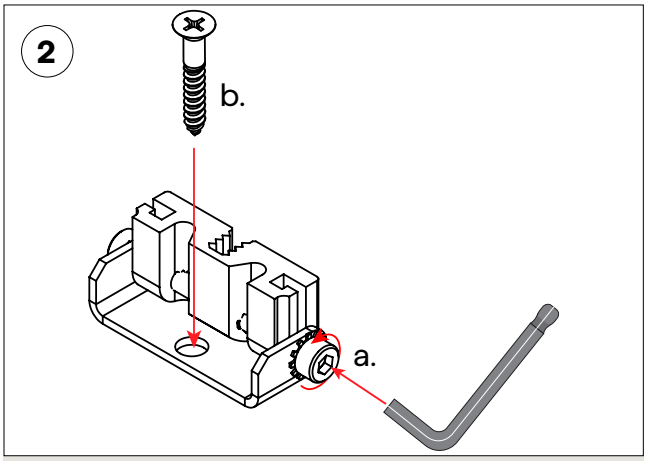

a. Loosen the hinge side screws with 5/64 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

3

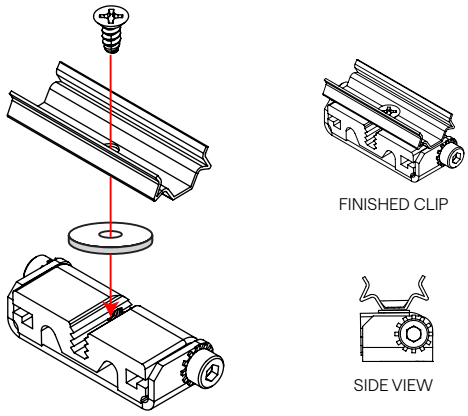


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw. For stability, add washer (.75" x .05") under mounting clips (washer not included).

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

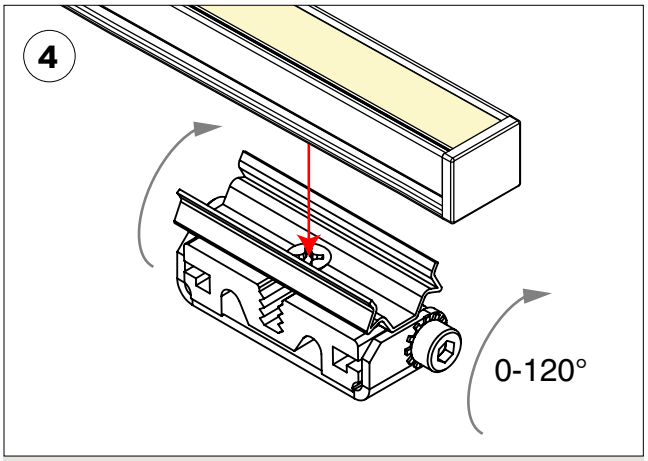

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-M**

- Ceiling, wall, or floor mounting


1

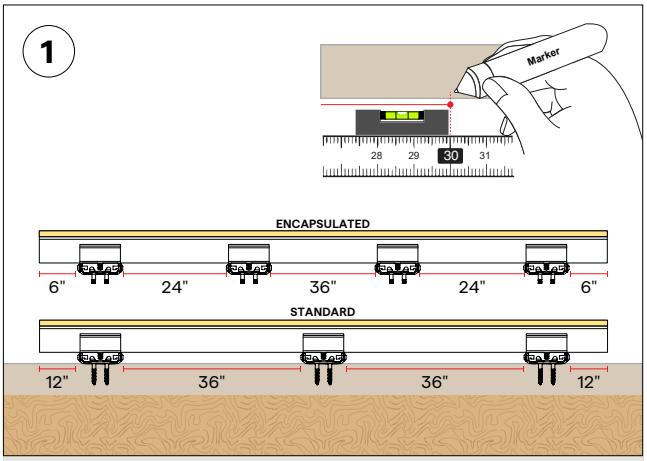

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.


2

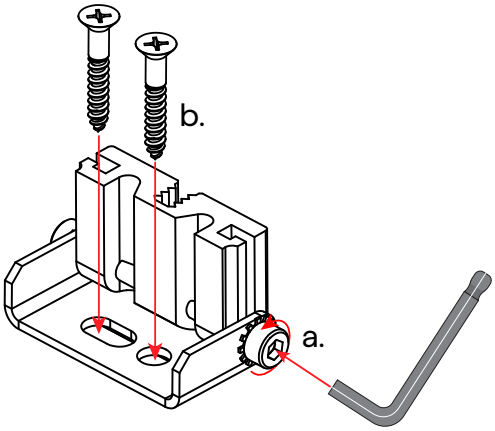

a. Loosen the hinge side screws with 5/64 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

3

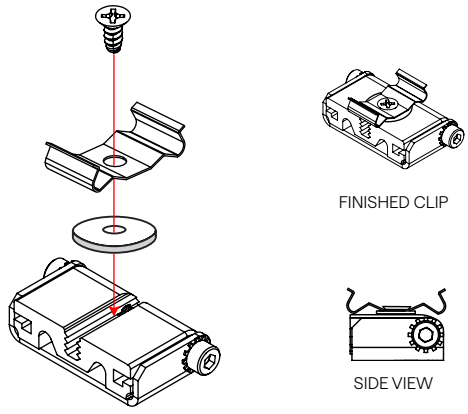


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw. For stability, add washer (.75" x .05") under mounting clips (washer not included).

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

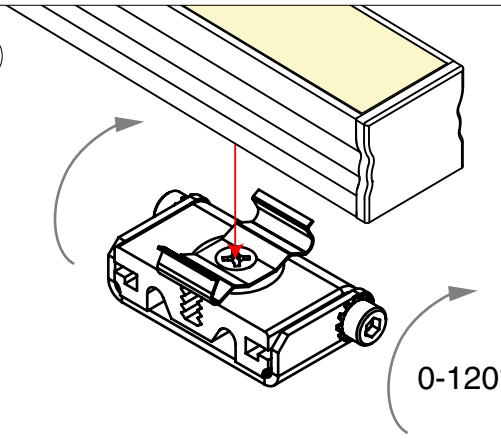

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-L**

- Floor or wall mount for standard fixtures
- Ceiling, wall, or floor mount for encapsulated fixtures


1

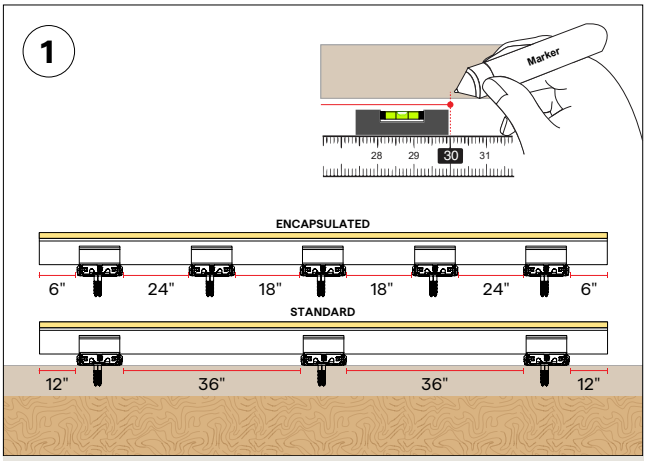

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.

2

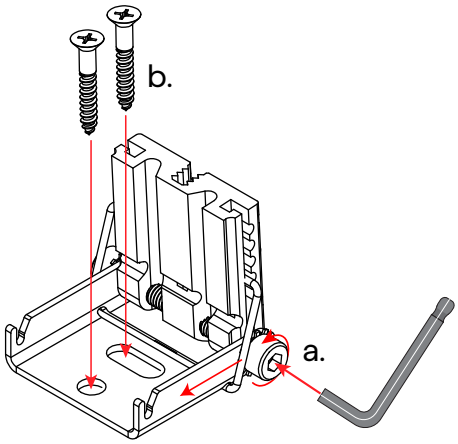


a. Loosen the hinge side screws with 3/32 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

NOTE: To lower down, push the anchor in the arrows direction. Lock back into place by pushing anchor in opposite direction.

3

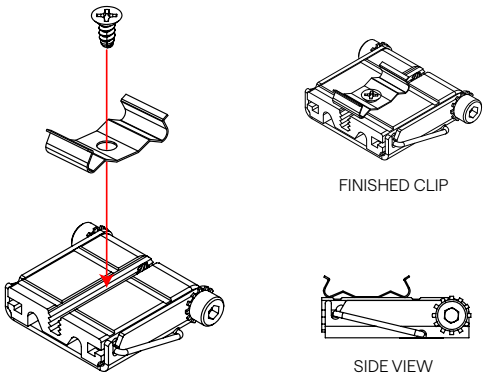


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw.

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

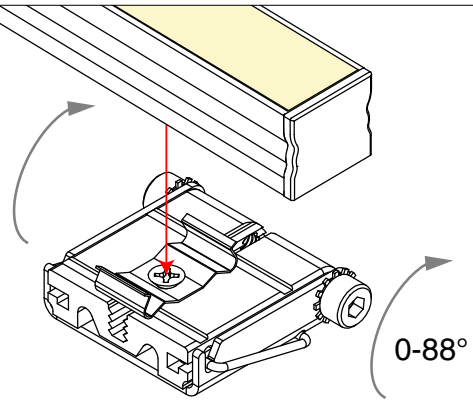

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


ACCESSORIES - HINGE

Installation Instruction

SURFACE MOUNTING METHOD: **HMB-XL**

- Floor or wall mount for standard fixtures
- Ceiling, wall, or floor mount for encapsulated fixtures


1

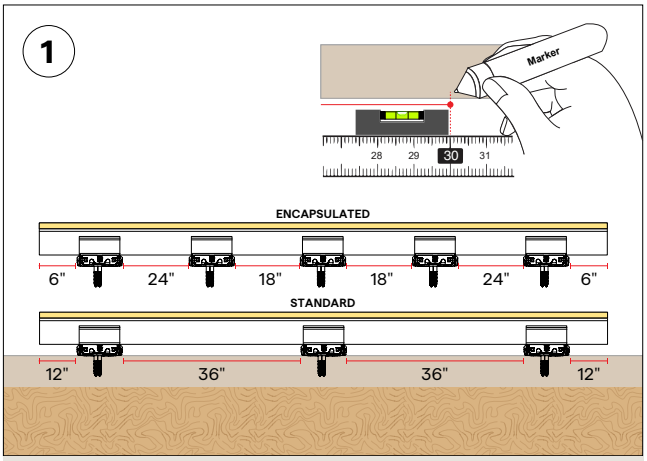

Determine the fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where each bracket is to be secured in place. See page 3 for recommended distribution of brackets

NOTE: Additional brackets can be used if needed.

2

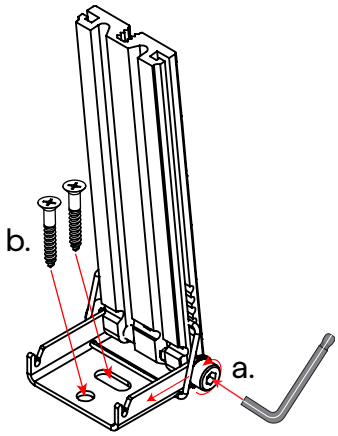


a. Loosen the hinge side screws with 3/32 allen wrench and rotate inner bracket to reveal mounting hole.

b. Screw down the base bracket with provided 3/4" long mounting screw or equivalent screw

NOTE: To lower down, push the anchor in the arrows direction. Lock back into place by pushing anchor in opposite direction.

3

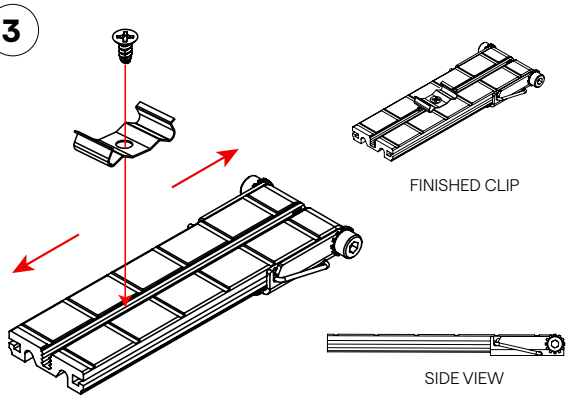


a. Loosen the hinge side screw and rotate the inner bracket down.

b. Install the fixture mount clip with provided SS #6 flat head screw.

NOTE: Screw can only be installed once so make sure correct position is configured. Do not over torque. Hand tighten until firm.

4

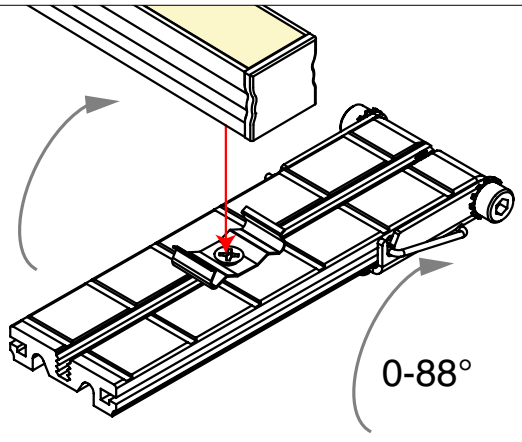

Snap fixture onto bracket. Rotate inner bracket to desired angle then tighten side screws to lock angle.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting