PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures



- Smaller, smarter, sleeker perimeter lighting fixture
- 2" tall and 2.48" wide main housing, perfect for shallow plenums
- Two mounting options for an integral power supply and several optional feed locations on main housing allows installers to avoid obstacles
- Modular assembly consists of housing that can be shipped early in the construction of the project and snap in lighting fixture, allowing contractors to rough in the main housing without any concern with damaging the light source, and providing flexibility in the scheduling of installation
- Designed for interior dry applications
- UL924 Compliant - when used with CC/EM
- All housings are ASTM E283 Air Leakage Certified
- Meets CCEA requirements

PERI ORDERING PROCESS

A Specify main housing
Housing will be shipped first

B Specify light engine
Light module lengths can be updated based on final field measurements if changes are requested prior to light module production.

C Specify driver
Integral option avaliable

A. MAIN HOUSING

A1 PRODUCT	A2 LENS	A3 LOUVER	A4 FINISH	A5 FLANGE TYPE	A6 FLANGE POSITION	A7 WALL MOUNT	A8 DRIVER LOCATION	A9 NUMBER OF TOTAL LENGTHS (EA)
PERI			ST					

Sample Part Number: **PERI-DF-L1-WH-ST-TBAR-FL-NS-TP-48"**

A1 PRODUCT

PERI	

A2 LENS

PR	Polar
DF	Diffused
PM	Prismatic

A3 LOUVER

L1-WH	White
L1-BK	Black
L1-GY	Grey
N/A	No louver

A4 FINISH

ST	Satin

A5 FLANGE TYPE / A6 FLANGE POSITION

A5 FLANGE TYPE	A6 FLANGE POSITION	
TBAR	**FL**	Flush
	1.5"	
	3.0"	
TSLOT	**1.5"**	
	3.0"	

A7 WALL MOUNT

S-3/16-R	Standoff 3/16" Regressed
S-1/2-R	Standoff 1/2" Regressed
S-1-F	Standoff 1" Flush
S-1-R	Standoff 1" Regressed
S-3-F	Standoff 3" Flush
S-3-R	Standoff 3" Regressed
NS	No Standoff

A8 DRIVER LOCATION

TP	Top (Integral)
SE	Side (Integral)

Side-not available with Flush and T-SLOT 1.5".
See compatible power supplies on following pages.

A9 NUMBER OF TOTAL LENGTHS (EA)

Housing will be shipped in full 98.43" lengths to field cut unless otherwise specified. Enter decimal number for length less than 98.43".
If pre-cut piece is requested, fixture length min 12".
Tolerance +0-1/8". Consult factory for lengths under 12".

Shop drawings required.

5 year warranty | Field modifications void warranty | Data subject to change, all data has +/- 5% tolerance | Compatible for use with QTL power supplies

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures

B. LIGHT MODULE

B1 PRODUCT	B2 WATTS/FT	B3 CCT	B4 OPTICS	B5 WIRE INPUT/OUTPUT	B6 CONNECTOR/WIRE IN	B7 CONNECTOR/WIRE OUT	B8 WIRE TYPE	B9 LENGTH (IN)
PERI-SWCC					CON6			

Sample Part Number: **PERI-SWCC-6.0-30-N/A-S2A-CON6-CLS-CL2-48.16"**

B1 PRODUCT

PERI-SWCC
Constant Current

Contact factory for custom wattage options for CC.
Emergency Driver only compatible with CC.

Not available with remote driver.

B2 WATTS/FT

3.0	3.0W/ft
6.0	6.0W/ft
9.0	9.0W/ft
12.0	12.0W/ft

B3 CCT

27	2700K
30	3000K
35	3500K
40	4000K

B4 OPTICS

ASYM	Asymmetric
N/A	No optics (Lambertian)

B5 WIRE INPUT/OUTPUT

SINGLE (Input only)

S2A	Bottom Feed
S2B	Bottom Feed

PASS THROUGH (Input/Output)

P2A	Bottom Feed
P2B	Bottom Feed

B6 CONNECTOR/WIRE IN

CON6	Connector 6"
CON6	Connector 6"

B7 CONNECTOR/WIRE OUT

CLS	Closed End (No Feed)
CON6	Connector 6"

B8 WIRE TYPE

CL2	Class 2
CL2P	Plenum Rated

CL2P only available with bare wire leads (BW)

B9 LENGTH (IN)

12.16"-98.16"

2" increments
Lengths for modules should be an even number and end in 0.16" to allow for end caps.
Fixture length min 12", Tolerance +0 – 1/8".
Consult factory for lengths under 12"

C. INTEGRAL DRIVER

C1 PRODUCT	C2 VOLTAGE	C3 DRIVER LOCATION	C4 DRIVER TYPE	C5 WATTAGE	C6 CONTROL + DIMMING
PERI	UNV				

Sample Part Number: **PERI-UNV-TP-CC-75W-0-10V**

C1 PRODUCT

PERI

C2 VOLTAGE

UNV	Universal (120-277V)

C3 DRIVER LOCATION

TP	Top
SE	Side

C4 DRIVER TYPE

CC	Constant Current
CC	Constant Current
CC/ EM	Constant Current with Emergency Driver

C5 WATTAGE

40W **75W**
40W **75W** **95W**
75W

C6 CONTROL + DIMMING

0-10V	0-10V Dimming (Dims to 1%)
0-10V **0-10V-AWN**	0-10V Dimming (Dims to 1%) 0-10V Dimming With Athena Node (Dims to 1%)
0-10V	0-10V Dimming (Dims to 1%)

DRIVER WATTAGE/LENGTH COMPATIBILITY


DRIVER	WATTAGE	LENGTH
40W	3.0	12.16-96.16"
	6.0	12.16-71"
	9.0	12.16-49"
	12.0	12.16-37"
75W	6.0	72-96.16"
	9.0	49-90"
	12.0	37-68"
95W	9.0	91-96.16"
	12.0	69-96.16"


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

PERI STATIC WHITE CONSTANT CURRENT


Perimeter Fixtures

A2 LENS VISIBILITY

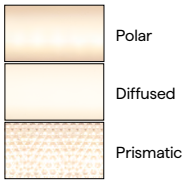




Outer roll-up lens profile
(Continuous lens up to 50 feet)




Louver with lens profile


A3 LOUVER

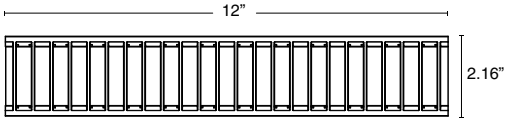

Provided in 4ft segments

L1-XX

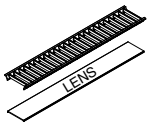



A4 FINISH




Satin

A5 FLANGE TYPE


Powder coated matte white finish standard for all flange types

TBAR

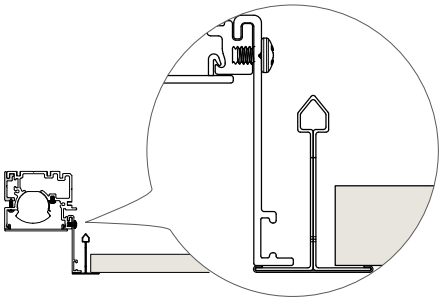

Grid - 9/16" or 15/16"


TSLOT

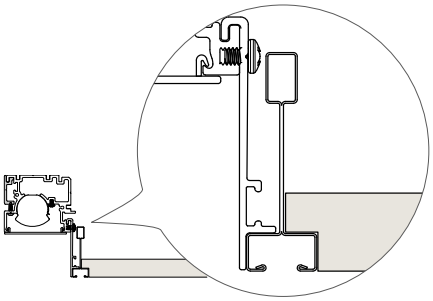

9/16" slot
1.5" version requires top mounted or remote driver


A6 FLANGE POSITION

FL

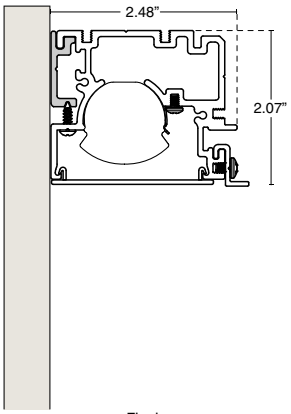


Flush
Requires top mounted or remote driver

1.5"

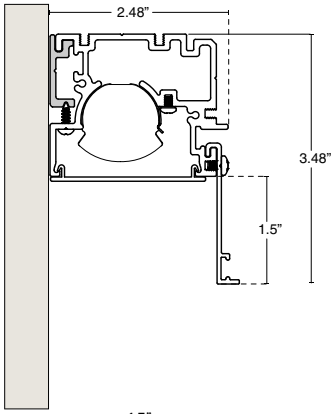

1.5" regress

3.0"

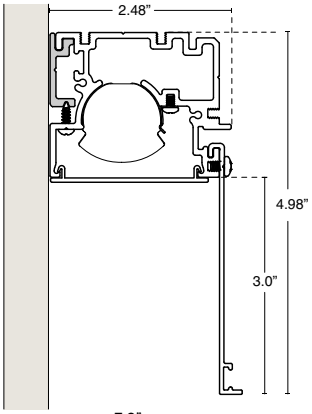

3.0" regress

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


Specification subject to change. Rev-09-25-26

PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures


A7 WALL MOUNT (shown with 1.5 regress TBAR Flange)

NS

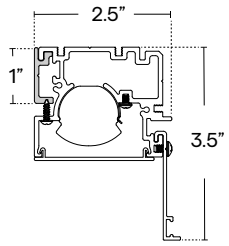


No Standoff

S-3/16-R

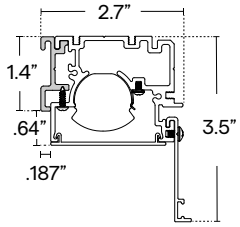


Standoff (3/16”) Regressed

S-1/2-R

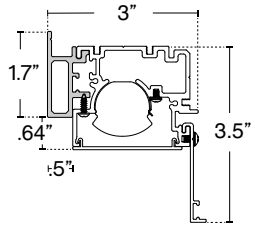


Standoff 1/2”
Regressed

S-1-F

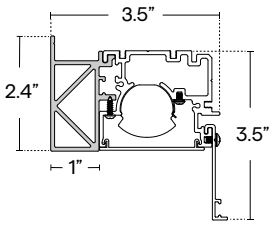


Standoff 1” Flush

S-1-R

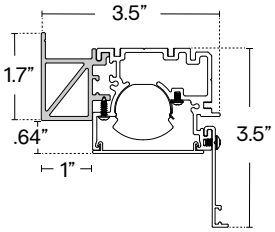


Standoff 1”
Regressed

S-3-F

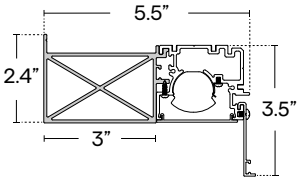

Standoff 3” Flush


S-3-R

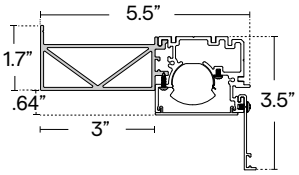

Standoff 3”
Regressed


A8 DRIVER

TP

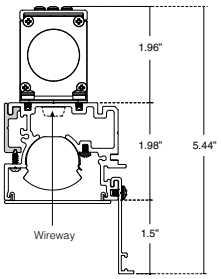

Top Mounted

SE

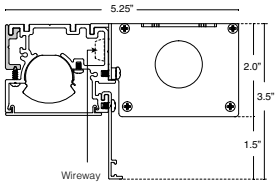

Side Mounted

Side Mounted-not available with Flush and T-SLOT 1.5”.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

PERI STATIC WHITE CONSTANT CURRENT


Perimeter Fixtures

B4 OPTICS

Optics with flush flange being shown

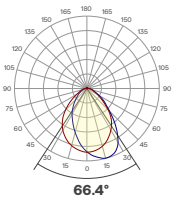


ASYM

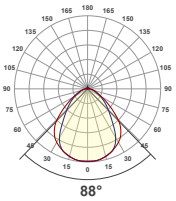

NO OPTICS
(Lambertian)


QTL RECOMMENDATIONS

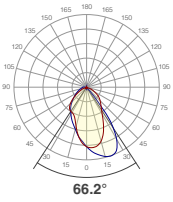

Lens: Prismatic with white louver
Flange Position:1.5"
Optic: Asymmetric

SWCC	LM/FT
12W	880
ASYM-PM-L1-WH	

Optimal Space Illumination:
PERI-SWCC-12.0-30-ASYM-PM-L1-WH-TBAR-1.5

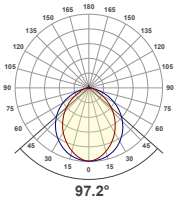

Lens: Diffused with white louver
Flange Position: Flush
Optic: No optics


SWCC	LM/FT
12W	921
DF-L1-WH	

Optimal Glow Illumination:
PERI-SWCC-12.0-30-N/A-DF-L1-WH-TBAR-FL

B5 WIRE INPUT/OUTPUT


ASYMMETRIC ONLY SINGLE (Input)

S2A



Bottom Feed


S2B



Bottom Feed


ASYMMETRIC ONLY PASS THROUGH (Input/Output)

P2A

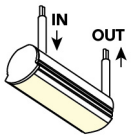

Bottom Feed


P2B

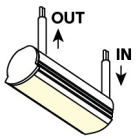

Bottom Feed


B6/B7 CONNECTOR/WIRE – IN/OUT

BW

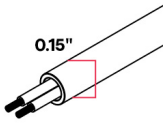

Bare Wire 24"
22 AWG

CON6/CON24

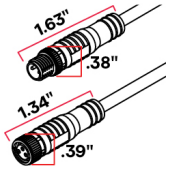

6" or 24" Overall
Wire Connector | 22 AWG
UL Listed

JOINER/CONNECTORS


Connectors are compatible with the main housing and the following wall mounts: S-1/2-R, S-1-F, S-1-R, S-3-F, S-3-R

PERI-INLINE-BR




Inline Bracket
(2 per length included)

PERI-CORNER-BR-I



Inner Corner
(Sold separately for field cut corner)


PERI-CORNER-BR-O



Outer Corner
(Sold separately for field cut corner)

MOUNTING BRACKETS


PERI-SUS-BR



Suspension Support Bracket
Ideal for applications with seismic risk
(Sold separately)


CORNERS (brackets included)

PERI-ILC

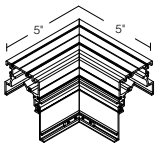

Preassembled
Inside Corner
(Sold separately)

PERI-OLC

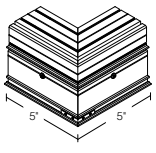

Preassembled
Outside Corner
(Sold separately)


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-09-25-26

PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures

ASSEMBLY

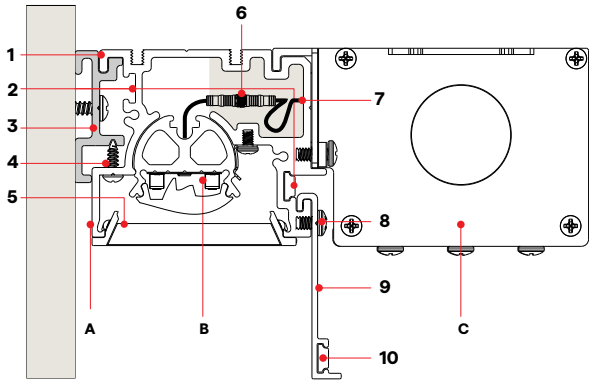


A - Main Housing
B - Light Module
C - Driver


1. Easy-drop hook (primary mount)
2. Connector Slot
3. Wall Mount Bracket
4. Screw Stopper
5. Louver/ Lens Combo
6. CON6
7. Wire Way: Tuck wires into main housing for clean install
8. Flange Mount
9. Flange
10. Connector Slot

MAIN HOUSING ENDCAPS

PFIX-EC-MACH-2-OTR-01-ST

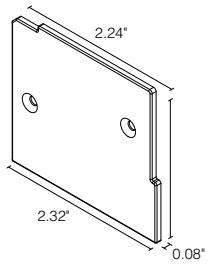

PFIX-EC-MACH-2-OTR-02-ST

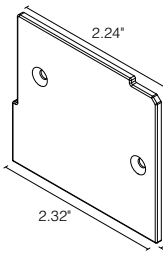

TECHNICAL INFORMATION

Static White Constant Current
[Calculated L70 = 70000 hrs]
Tested with PERI-SWCC-30-***-**-**-**, Flush flange


Without Louver												
SWCC	3.0CC W/FT			6.0CC W/FT			9.0CC W/FT			12.0CC W/FT		
	LM/FT	CRI	UGR	LM/FT	CRI	UGR	LM/FT	CRI	UGR	LM/FT	CRI	UGR
PR	187	97	N/A	659	96	N/A	933	96	N/A	1298	94	N/A
DF	180	95	N/A	641	94	N/A	906	94	N/A	1225	94	N/A
PM	207	95	≤ 14.9	717	94	≤ 19.2	1020	94	≤ 20.5	1387	93	≤ 21.6
ASYM-PR	161	97	N/A	571	97	N/A	792	97	N/A	1092	97	N/A
ASYM-PM	165	96	≤ 14.2	575	95	≤ 18.5	809	95	≤ 19.7	1145	95	≤ 20.9

With Louver									
SWCC-12.0	L1-WH			L1-BK			L1-GY		
	LM/FT	CRI	UGR	LM/FT	CRI	UGR	LM/FT	CRI	UGR
PR	993	96	N/A	744	96	N/A	960	96	N/A
DF	921	94	N/A	694	94	N/A	916	94	N/A
PM	1057	95	≤ 20.2	807	95	≤ 18.1	1028	96	≤ 20.5
ASYM-PR	868	95	N/A	669	95	N/A	851	95	N/A
ASYM-PM	931	94	≤ 19.8	724	94	≤ 17.8	916	94	≤ 19.7

SWCC CCT Multiplier	
2700K	0.99
3000K	1.00
3500K	1.05
4000K	1.05

PERFORMANCE


CORRIDOR 8'

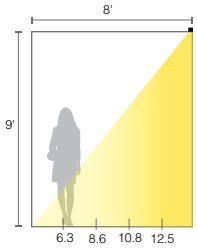

FOOT CANDLES

ASYM
W/FT: SWCC 3.0 W/FT
CCT: 3000K
OPTIC: ASYMMETRIC
LENS: PRISMATIC WITH WHITE LOUVER
FLANGE POSITION:1.5"
AVERAGE ILLUMINANCE (Fc): 9.65
MAX: 12.7
MIN: 6.3
AVG/MIN: 1.53
MAX/MIN: 2.02
W/SQFT: 0.38
ROOM SIZE: 8'X50'


CORRIDOR 10'

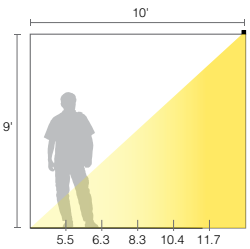

FOOT CANDLES

ASYM
W/FT: SWCC 3.0 W/FT
CCT: 3000K
OPTIC: ASYMMETRIC
LENS: PRISMATIC WITH WHITE LOUVER
FLANGE POSITION:1.5"
AVERAGE ILLUMINANCE (Fc): 8.51
MAX: 11.8
MIN: 5.5
AVG/MIN: 1.55
MAX/MIN: 2.15
W/SQFT: 0.30
ROOM SIZE: 10'X50'


CORRIDOR 15'

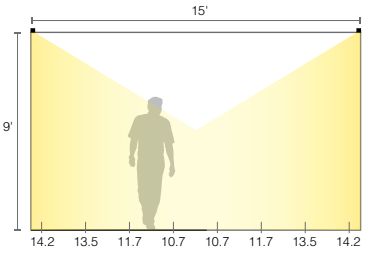

FOOT CANDLES

ASYM
W/FT: SWCC 3.0 W/FT
CCT: 3000K
OPTIC: ASYMMETRIC
LENS: PRISMATIC WITH WHITE LOUVER
FLANGE POSITION:1.5"
AVERAGE ILLUMINANCE(Fc): 12.67
MAX: 14.4
MIN: 10.8
AVG/MIN: 1.17
MAX/MIN: 1.33
W/SQFT: 0.40
ROOM SIZE: 15'X50'

RESTROOM

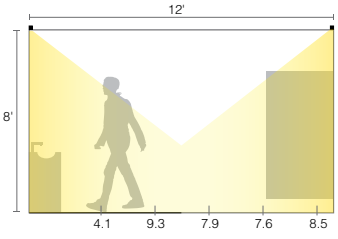

FOOT CANDLES

ASYM
W/FT: SWCC 3.0 W/FT
CCT: 3000K
OPTIC: ASYMMETRIC
LENS: PRISMATIC WITH WHITE LOUVER
FLANGE POSITION:1.5"
AVERAGE ILLUMINANCE (Fc): 7.05
MAX: 10.7
MIN: 3.1
AVG/MIN: 2.27
MAX/MIN: 3.45
W/SQFT: 0.50
ROOM SIZE: 12'X20'


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-09-25-26


PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures

WIRING DIAGRAM

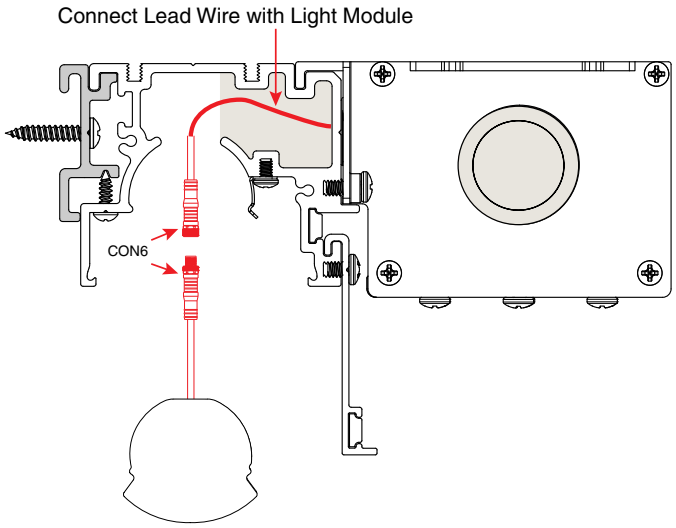

Section View

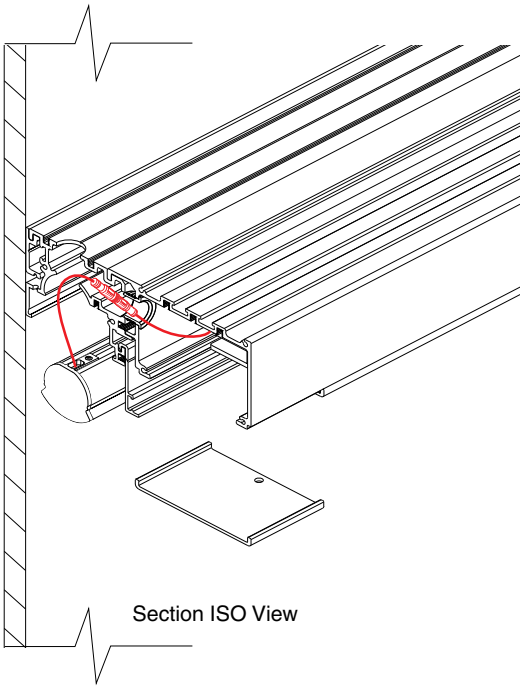

Section ISO View


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

PERI STATIC WHITE CONSTANT CURRENT


Perimeter Fixtures

WALL CONFIGURATION

Accurate wall-to-wall dimensions must be provided during shop drawings for QTL applications team review to ensure bill of material is configured to provide uniform illumination

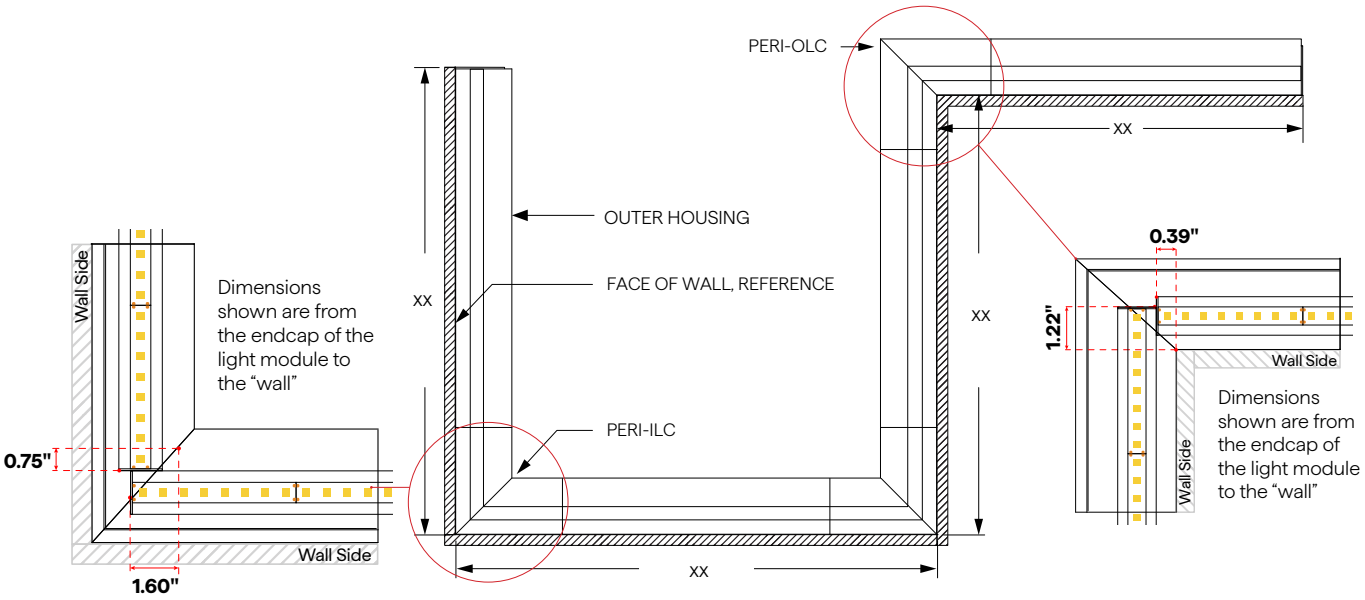

TOP VIEW

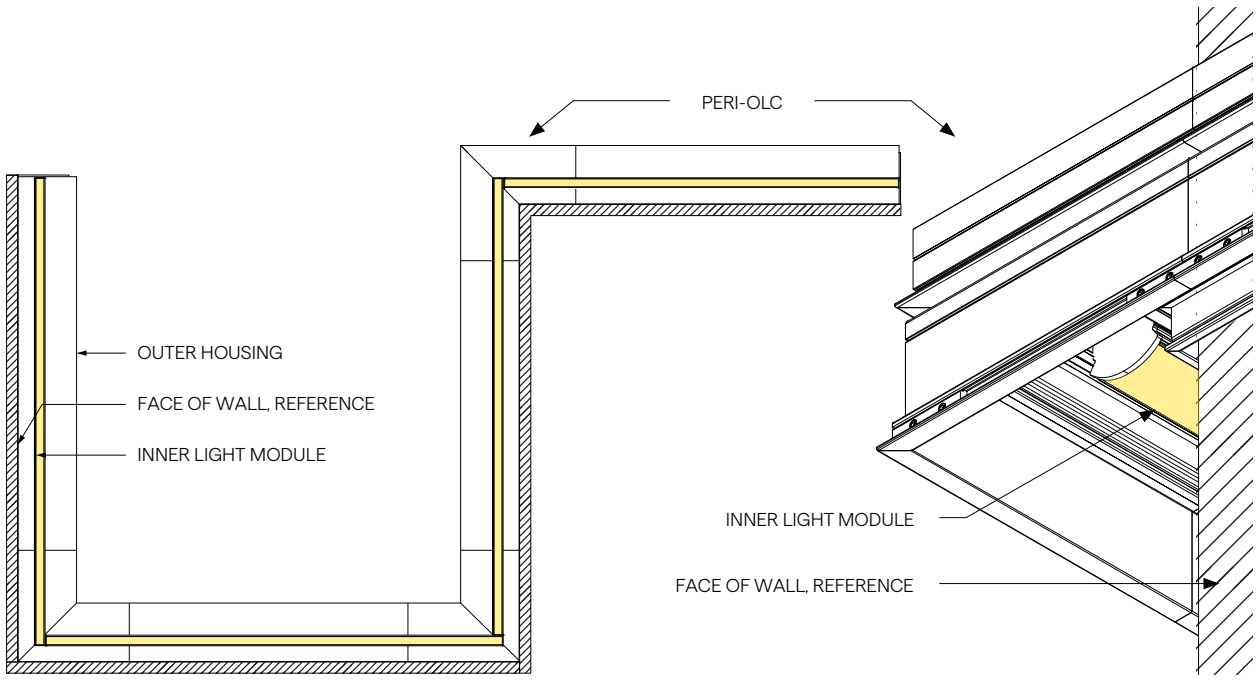

TOP VIEW

ISO VIEW

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures


C3 DRIVER LOCATION

INTEGRAL TOP MOUNTED

TP

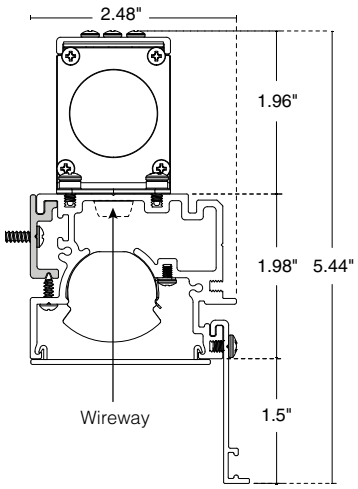


NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

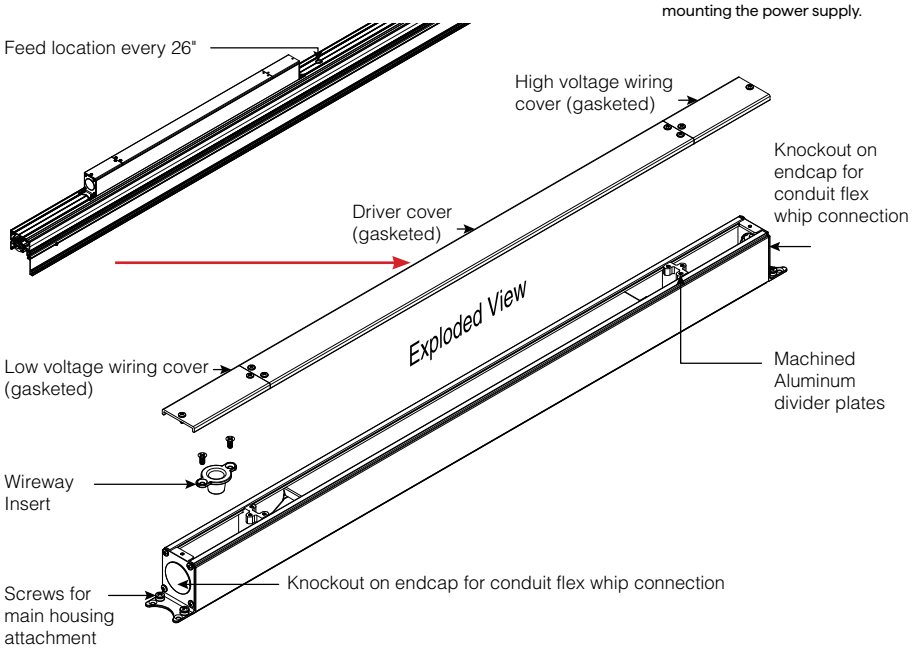


INTEGRAL SIDE MOUNTED: Side-not available with Flush and T-SLOT 1.5".

SE

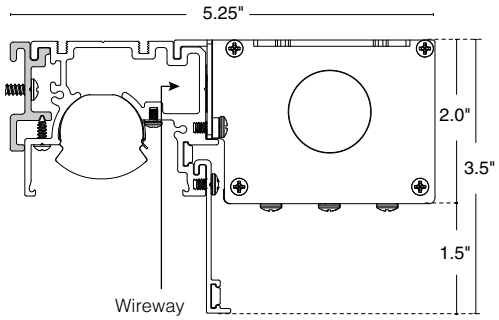

NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

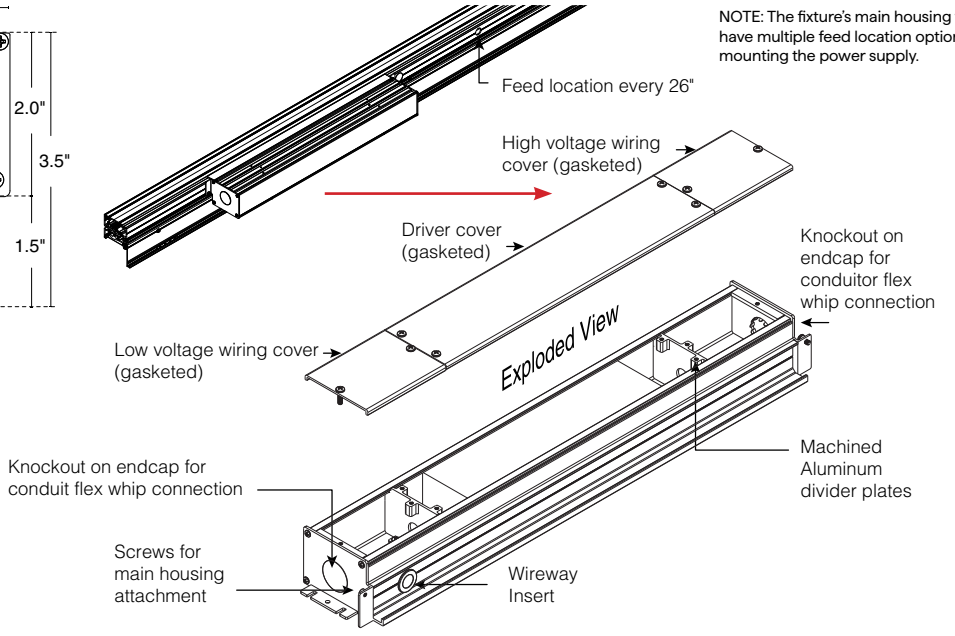

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI STATIC WHITE CONSTANT CURRENT

Perimeter Fixtures

C4 DRIVER TYPE

See Technical Information for specs


TOP MOUNTED DRIVER (CC)

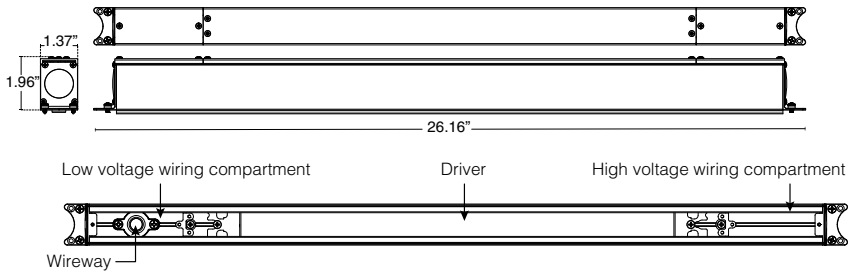

Technical Information:

Output Type	CC
Available Wattage(s) (W)	40, 75
Input (VAC)	120-277 (UNV)
Input F (Hz)	50-60
Input Current Max @120V (A)	0.7
Input Current Max @277V (A)	0.3
PF At Full Load	0.95
Minimum Dimming Level	1%
Ambient Operating Range (°F)	-4-104
Driver Lifetime Hours	50000

SIDE MOUNTED DRIVER (CC or CC/EM)

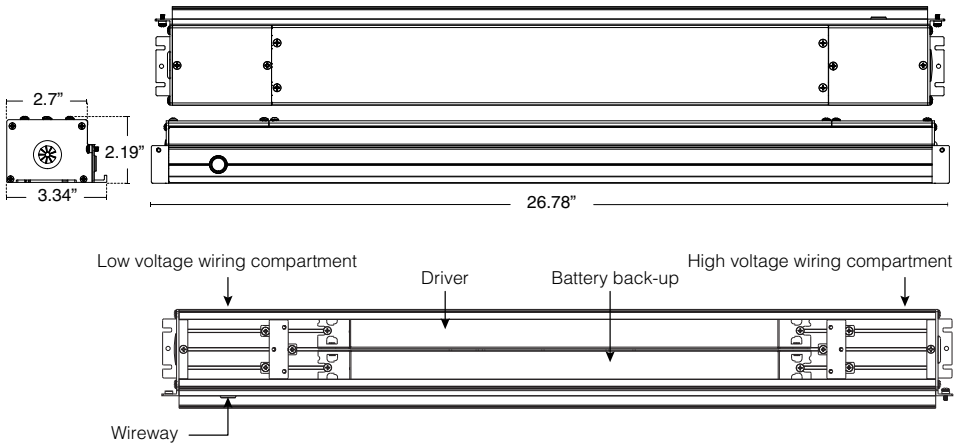

Technical Information:


Output Type	CC
Available Wattage(s) (W)	40, 75
Input (VAC)	120-277 (UNV)
Input F (Hz)	50-60
Input Current Max @120V (A)	0.7
Input Current Max @277V (A)	0.3
PF At Full Load	0.95
Minimum Dimming Level	1%
Ambient Operating Range (°F)	-4-104
Driver Lifetime Hours	50000

Technical Information: Emergency Driver

Driver	Wattage Out	Runtime
	(W)	(Mins)
75W/40W	14	90

EM: Lithium-ion-phosphate (LiFePO4) battery chemistry(compatible with CC only).

SIDE MOUNTED DRIVER (CC) - 95W

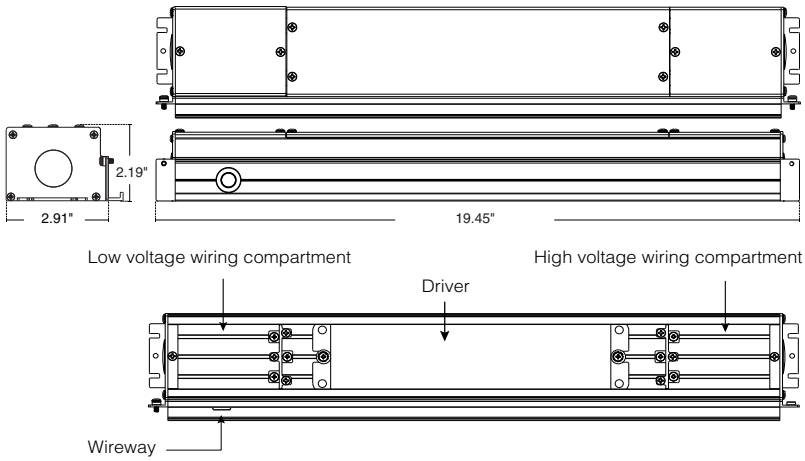


Technical Information:

Output Type	CC
Available Wattage(s) (W)	95
Input (VAC)	120-277 (UNV)
Input F (Hz)	50-60
Input Current Max @120V (A)	0.92
Input Current Max @277V (A)	0.4
PF At Full Load	0.9
Minimum Dimming Level	1%
Ambient Operating Range (°F)	-4-104
Driver Lifetime Hours	50000

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

C4 DRIVER TYPE CONTINUED

0-10V DIMMING

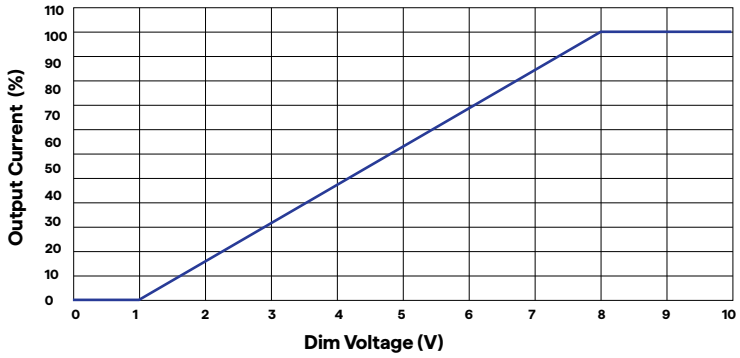

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI

Perimeter Fixtures Installation Instructions

ATTENTION: Please read all instructions BEFORE installation

- Product to be installed by a licensed electrician - Field modifications void warranty
- Use only with Class 2 power supply unit — Warranty only valid with QTL power supplies
- Cove mount
- Input Voltage: 24VDC
- Diagrams for representation only and not to scale.

METHODS OF INSTALLATION

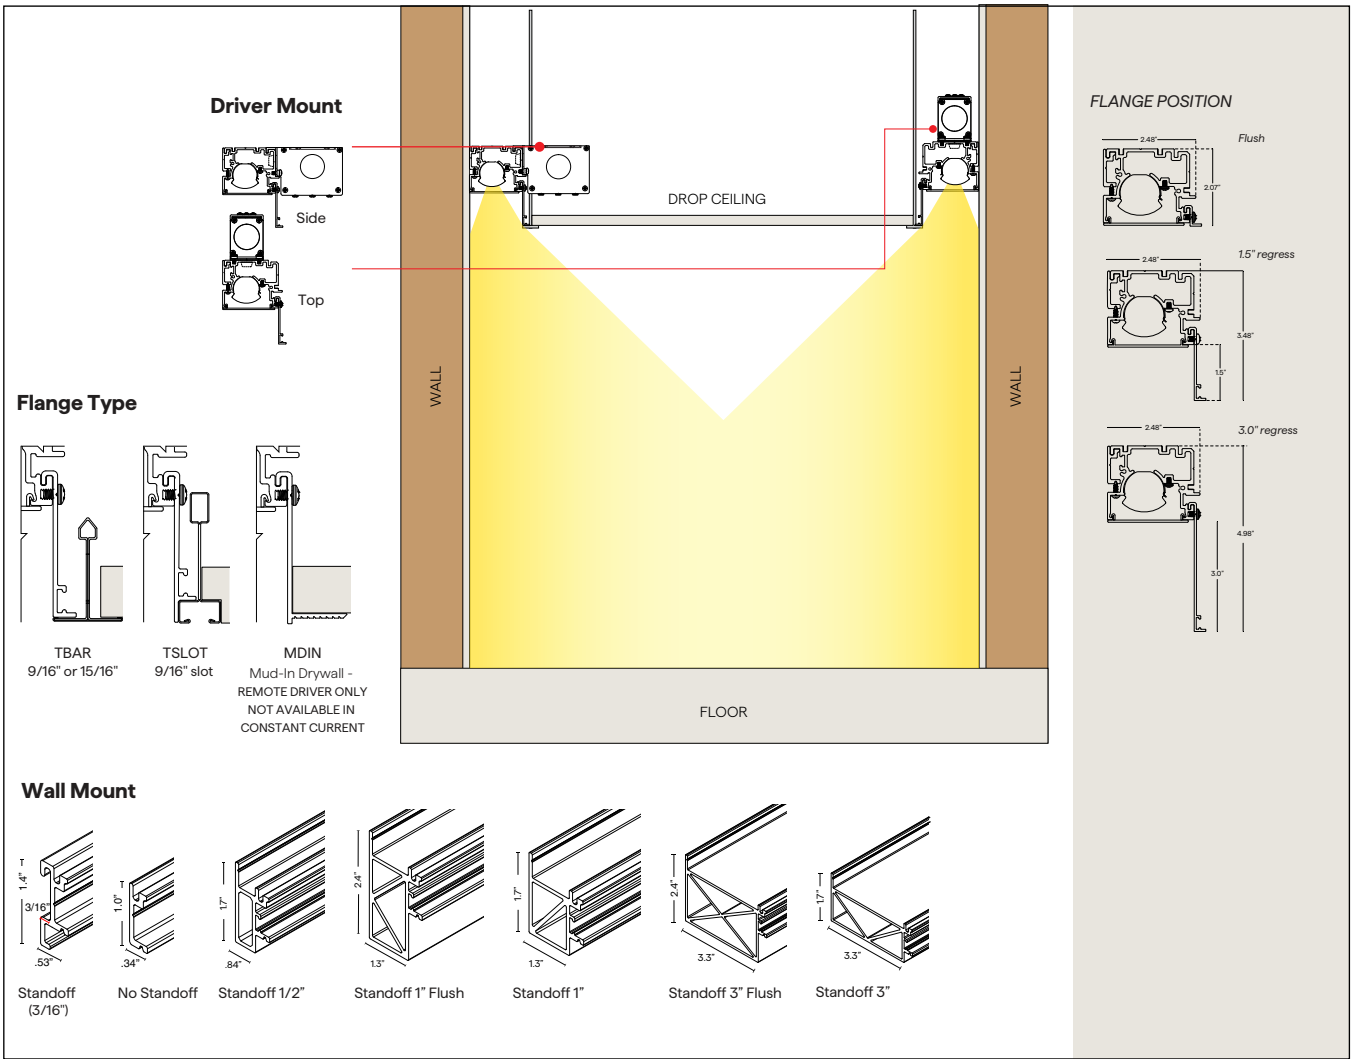


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI

Perimeter Fixtures Installation Instructions


PERIMETER
Flush

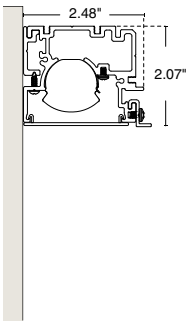


PERIMETER
1.5" regress

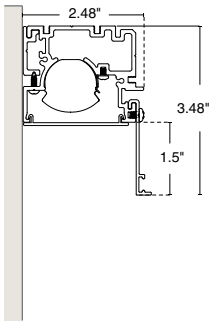


PERIMETER
3.0" regress

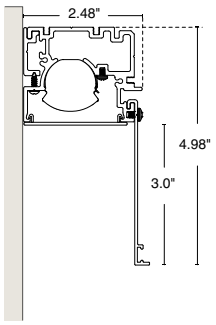


PERIMETER
With Driver Top Mounted

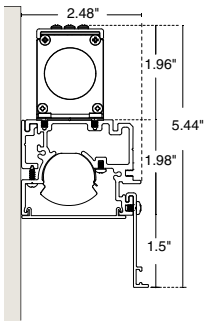


PERIMETER
With Driver Side Mounted

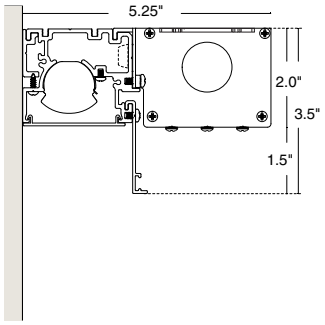


COMPONENTS & HARDWARE

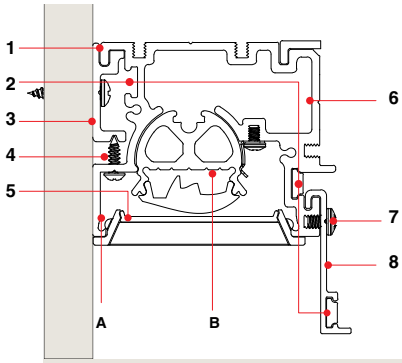

C - End Cap

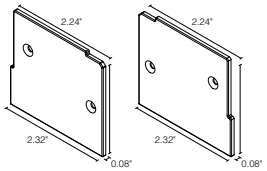


Main Housing End Cap



Inner End Cap


D - Corner
(brackets included)

PERI-ILC

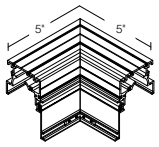

Inside Corner

PERI-OLC

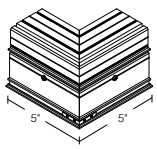

Outside Corner

(Preassembled, Sold separately)

A - Main Housing

B - Light Module

C - End Plate & Inner End Cap

D - Inside Corner & Outside Corner

1 - Easy-drop hook (primary mount)

2 - Connector Slot

3 - Wall Mount Bracket

4 - Screw Stopper


5 - Louver/ Lens Combo

6 - Wire Way: Tuck wires into main housing for clean install


7 - Flange Mount

8 - Flange


FLANGE TYPE: Powder coated matte white finish standard for all flange types

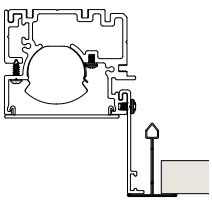

TBAR
(Grid - 9/16" or 15/16")

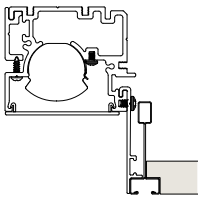

TSLOT
(9/16" slot)

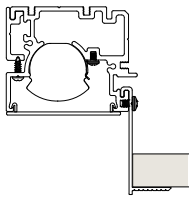


MDIN
(REMOTE DRIVER ONLY)
(NOT AVAILABLE IN CONSTANT CURRENT)


JOINER/CONNECTORS




INLINE BRACKET
(2 per length included)



Inner Corner




Outer Corner

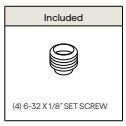


CORNER BRACKET
(Sold separately for field cut corner)


WALL MOUNT




No Standoff

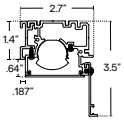


Standoff (3/16") Regressed

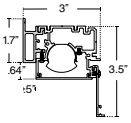


Standoff 1/2" Regressed

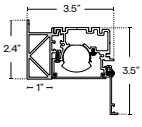


Standoff 1" Flush

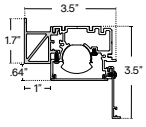

Standoff 1"Regressed

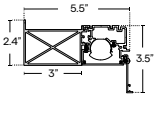


Standoff 3" Flush



Standoff 3" Regressed

ADDITIONAL MOUNTING BRACKETS

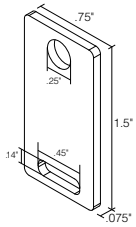


SUSPENSION SUPPORT BRACKET
(Sold separately)

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


Specification subject to change. Rev-08-27-26

WALL CONFIGURATION

Accurate wall-to-wall dimensions must be provided during shop drawings for QTL applications team review to ensure bill of material is configured to provide uniform illumination

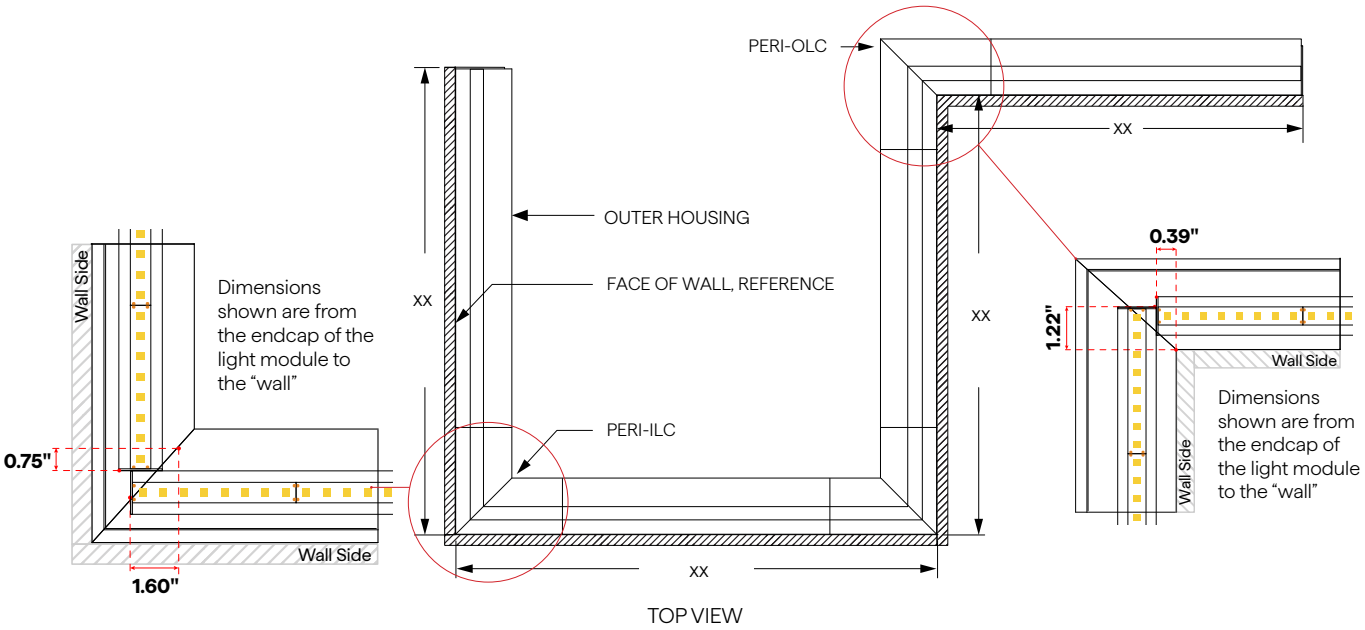


TOP VIEW

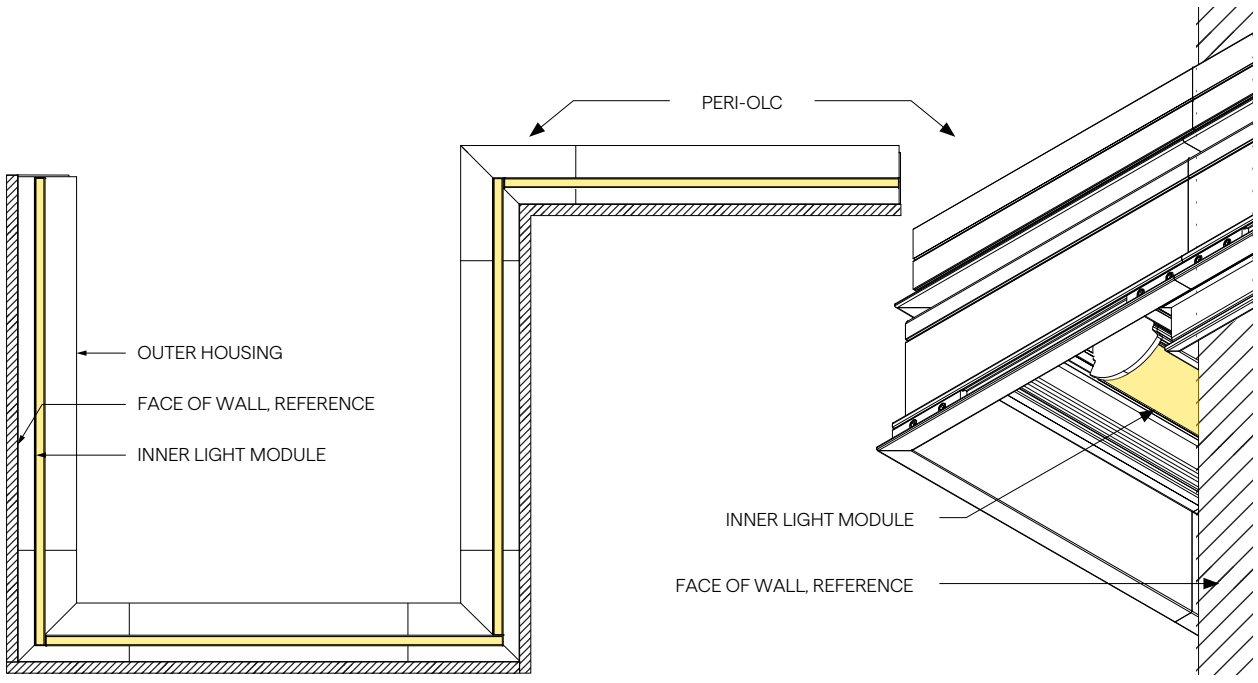

TOP VIEW ISO VIEW


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **STANDOFF WALL MOUNT** S-3/16-R, S-1/2-R, S-1-R, AND S-3-R.

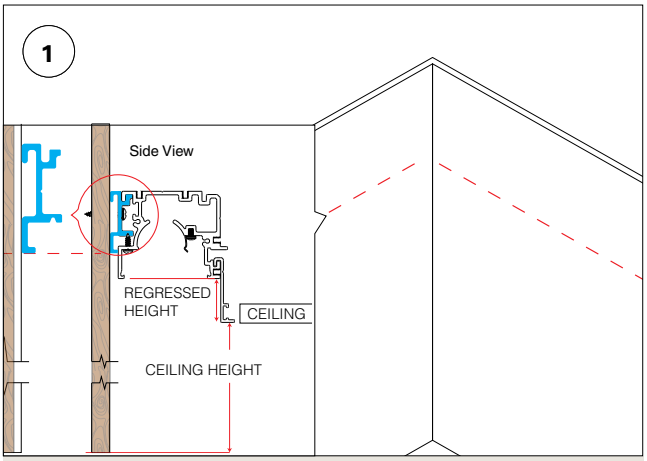


Draw a level line around perimeter of the area. This height should be calculated by the following formula:

Line Height = Finished Ceiling Height + Regressed Height ((Flange Height Choice) + 9/16")

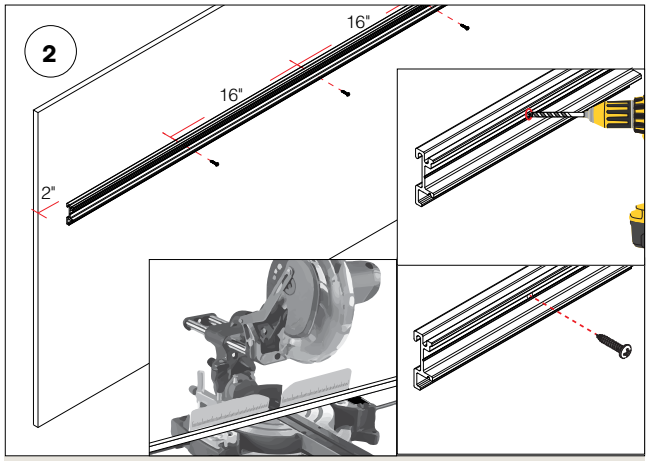


Line up the bottom of the wall mounting bracket with the reference line made. Drill the hole through wall mount and install the #6 x 3/4" pan head tapping screws along the V groove every 16".

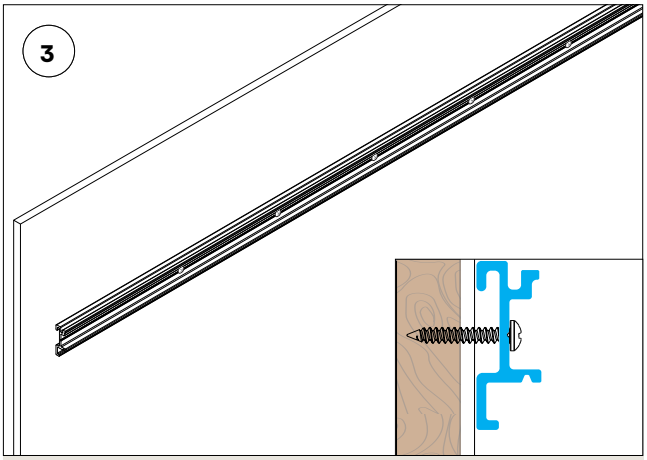

Ensure wall mounting bracket is properly installed before moving onto the main housing installation.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **NO STANDOFF WALL MOUNT**

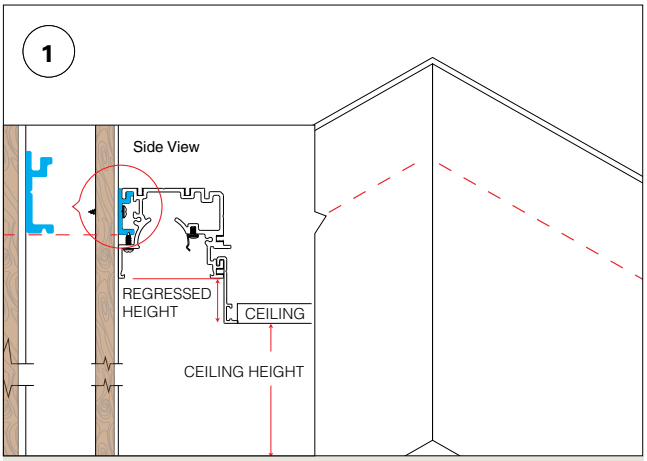


Draw a level line around perimeter of the area. This height should be calculated by the following formula:

Line Height = Finished Ceiling Height + Regressed Height ((Flange Height Choice) + 1")

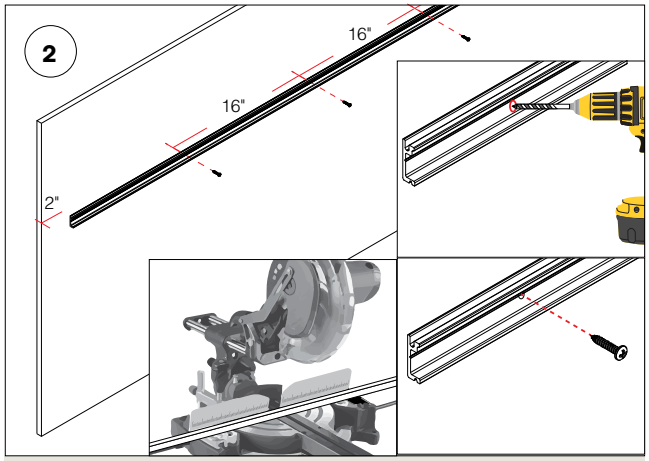

Line up the bottom of the wall mounting bracket with the reference line made. Drill the hole through wall mount and install the #6 x 3/4" pan head tapping screws along the V groove every 16".

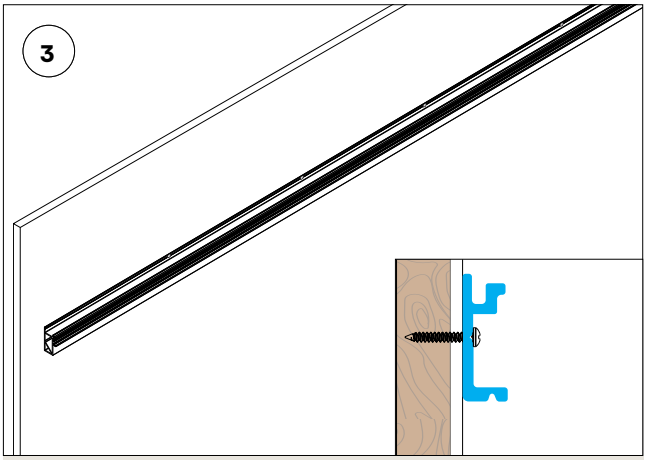


Ensure wall mounting bracket is properly installed before moving onto the main housing installation.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **STANDOFF FLUSH WALL MOUNT** S-1-F, S-3-F.


1

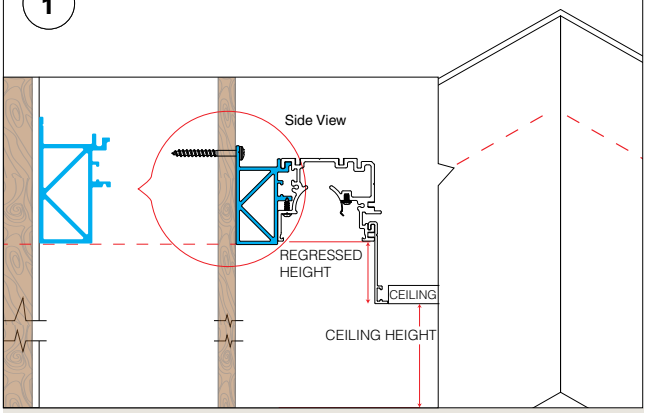

Draw a level line around perimeter of the area. This height should be calculated by the following formula:


Line Height = Finished Ceiling Height + Regressed Height ((Flange Height Choice) - 1/16")

2

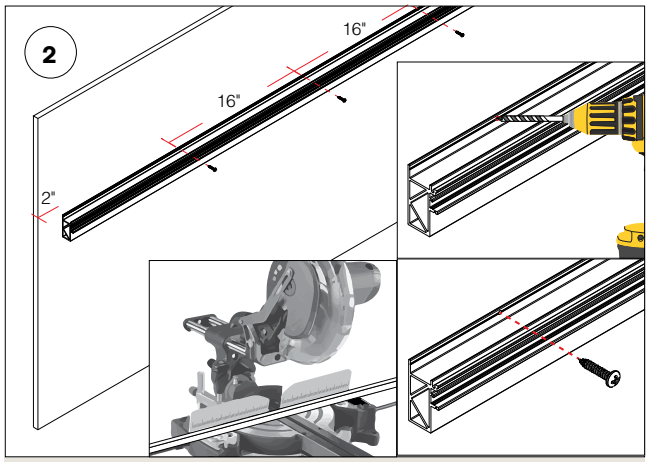

Line up the bottom of the wall mounting bracket with the reference line made. Drill the hole through wall mount and install the #6 x 3/4" pan head tapping screws along the V groove every 16".

3

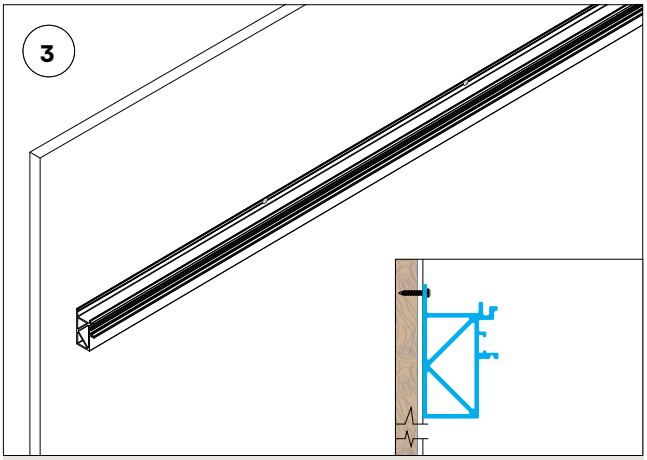


Ensure wall mounting bracket is properly installed before moving onto the main housing installation.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **MAIN HOUSING MOUNT**

NOTE: Main housings are field cuttable.

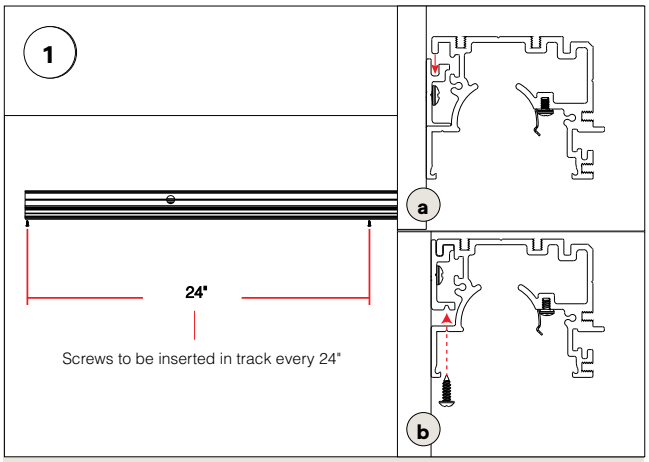

a. Hang the main housing on the wall mounting bracket by means of easy-drop the hook.

b. Install the #4 x 3/8" pan head screw through the main housing and wall mounting bracket at screw stopper points (every 24").

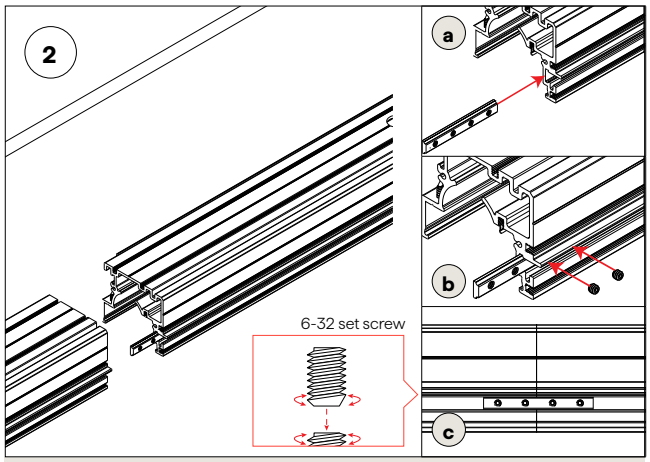


Where making connections with another run:

a. Place inline connector in the connector slot.

b. Screw down the first side of the inline connector.


c. Align the runs and tighten down remaining screws.

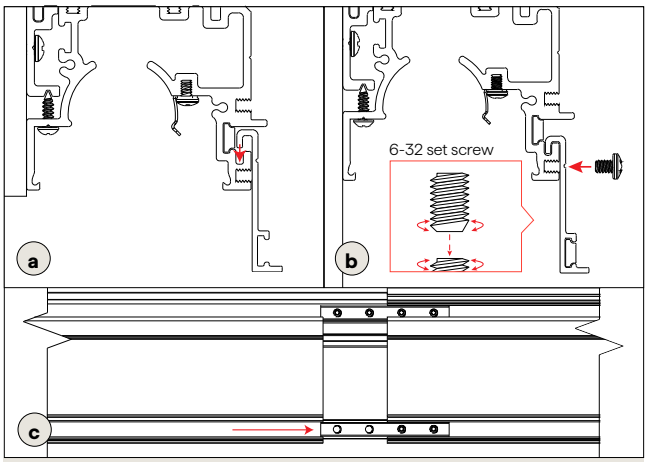

a. Install flange types by dropping into the easy-drop hook on the main housing.

b. Fasten the flange to the main housing every 24", using 6-32 x 3/16" pan head screws.


c. Where making connections with another run: place in inline connector inside the flange's connector slot, screw down the first side of the inline connector, align runs, and tighten down remaining screws.

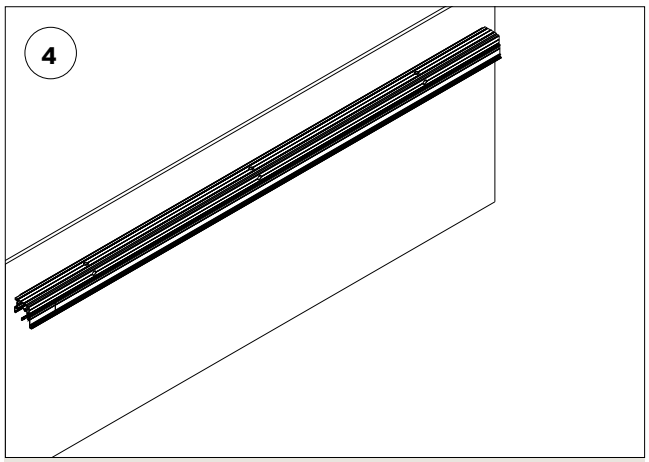


Ensure main housing is properly installed before moving onto driver installation.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **SIDE MOUNTED DRIVER**

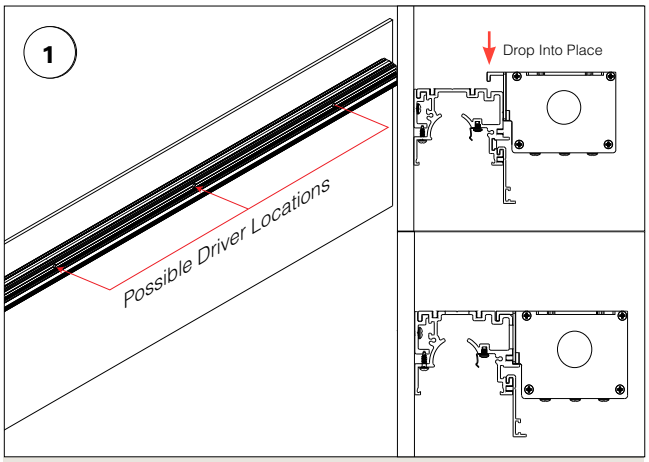

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

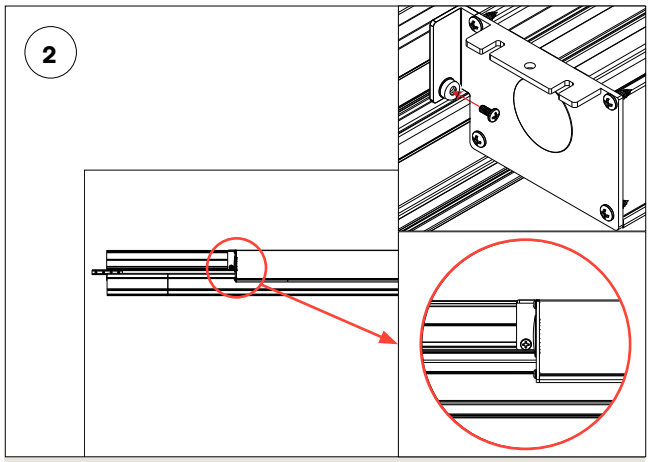


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

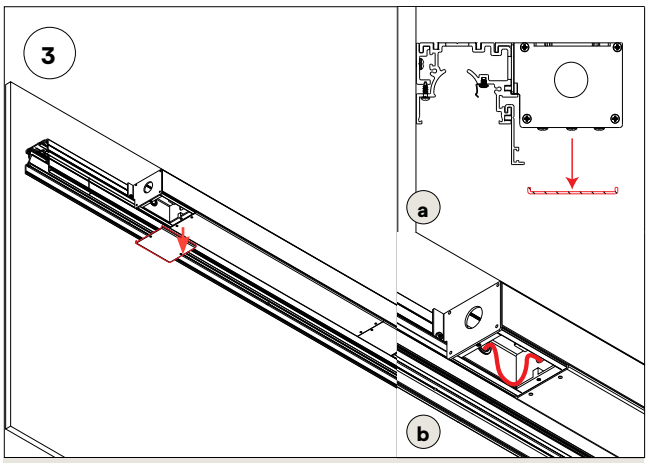

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

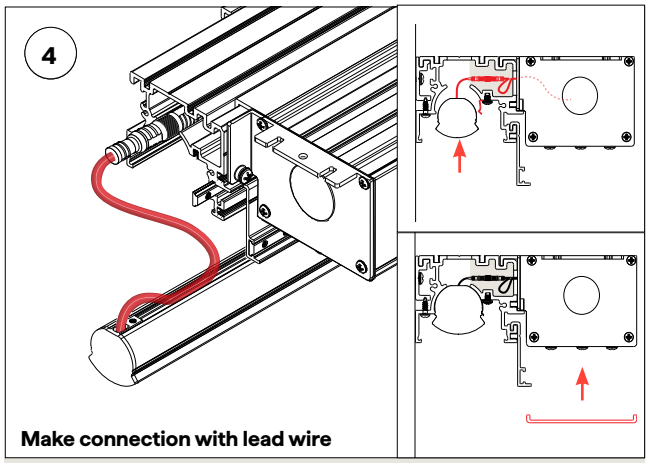


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **SIDE MOUNTED DRIVER**

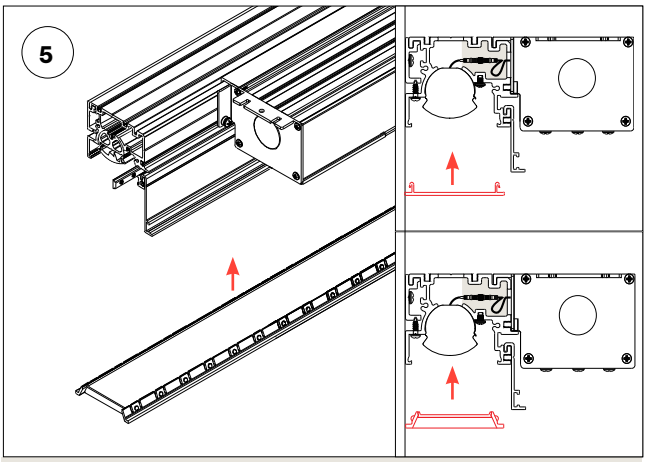


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

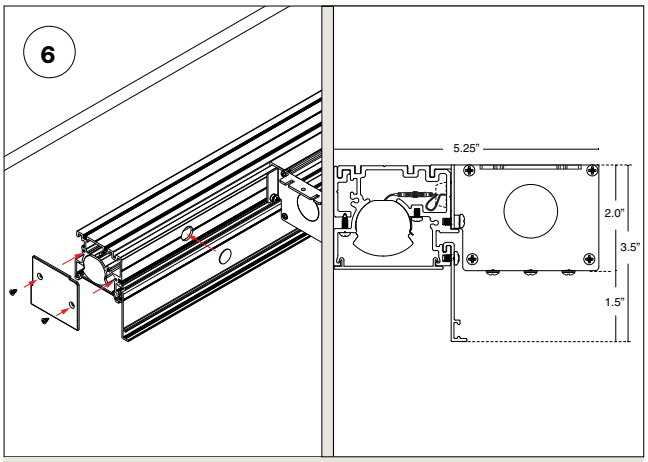


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **TOP MOUNTED DRIVER**

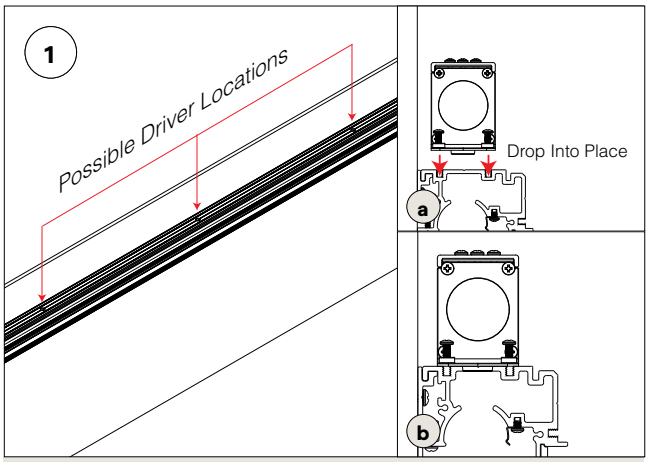

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

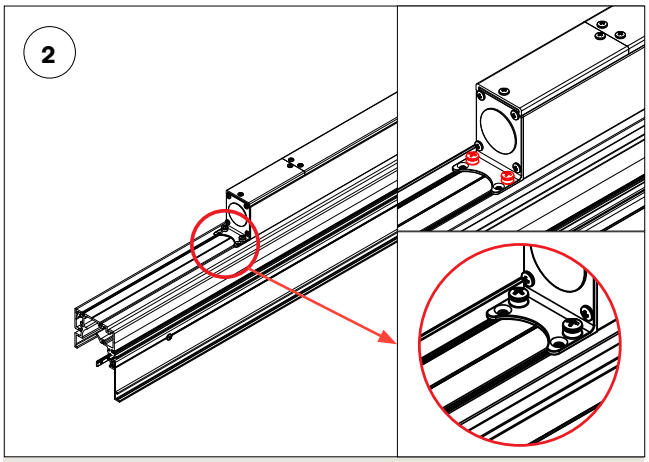


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

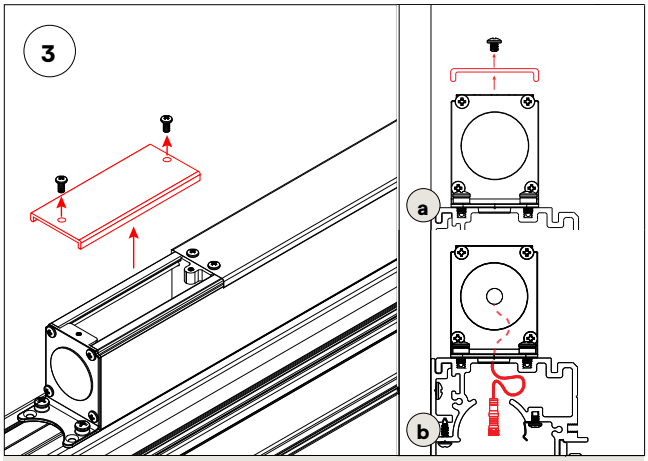

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

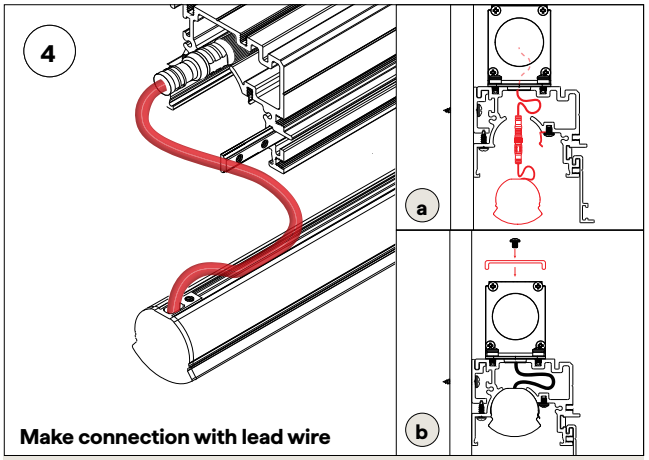


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **TOP MOUNTED DRIVER**

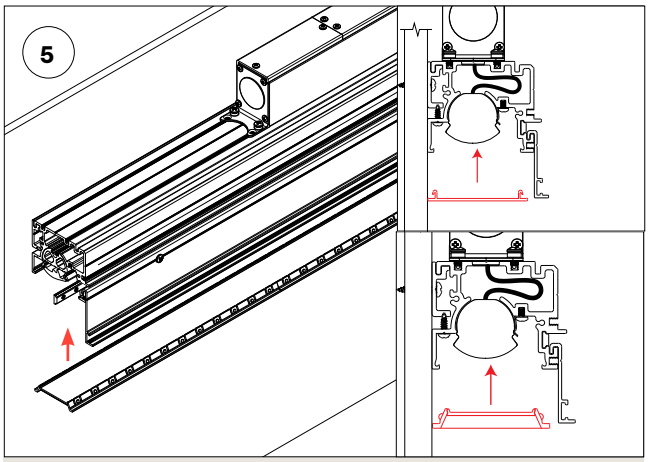


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

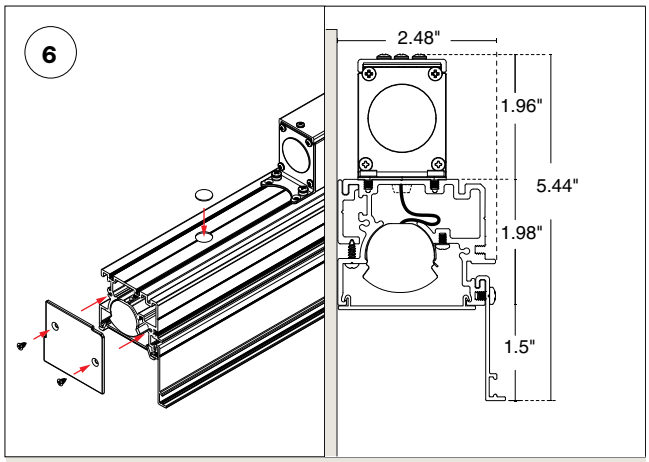


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **EMERGENCY DRIVER**

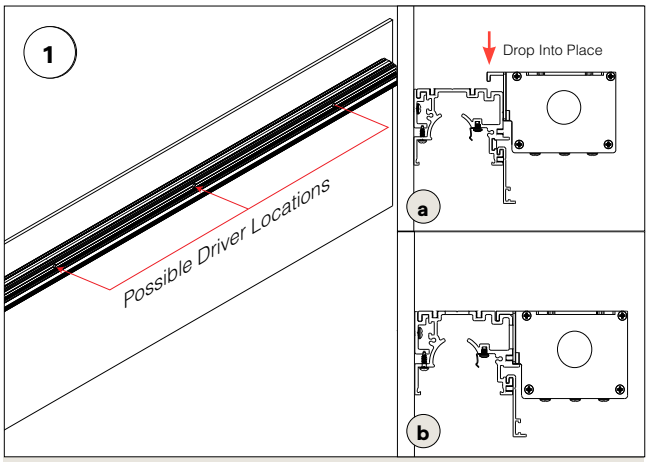

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

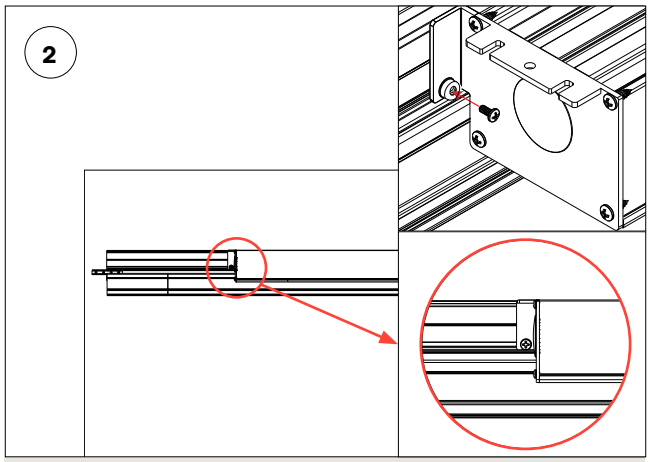


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

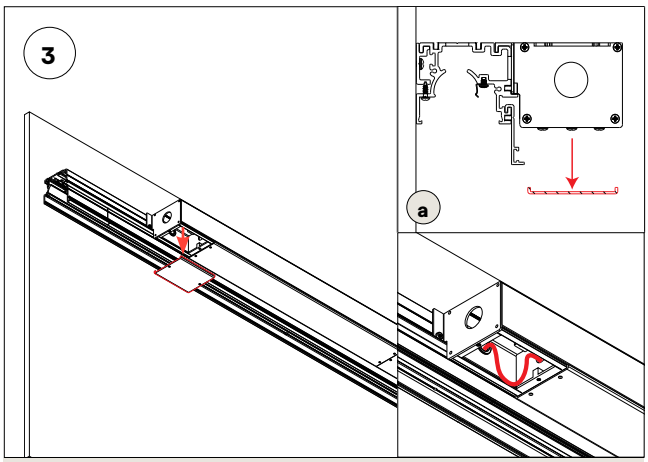

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

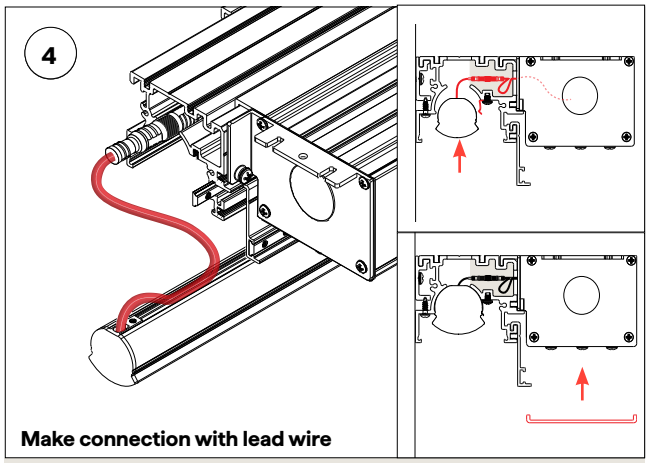


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **EMERGENCY DRIVER**

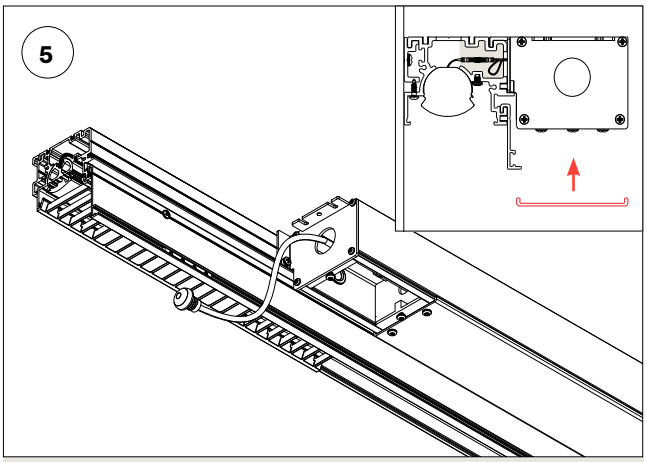

Feed button tester through knockout and reinstall the low voltage side cover.

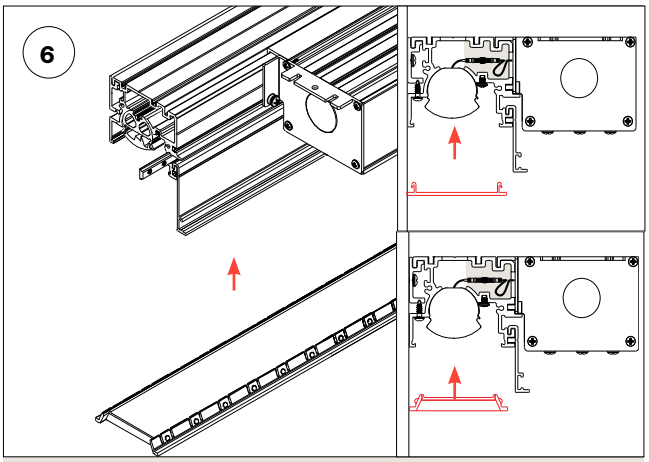


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

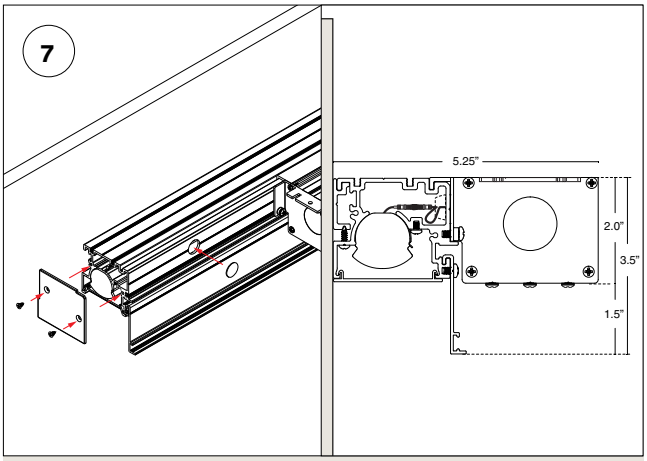


Insert theprovided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE DRIVER**

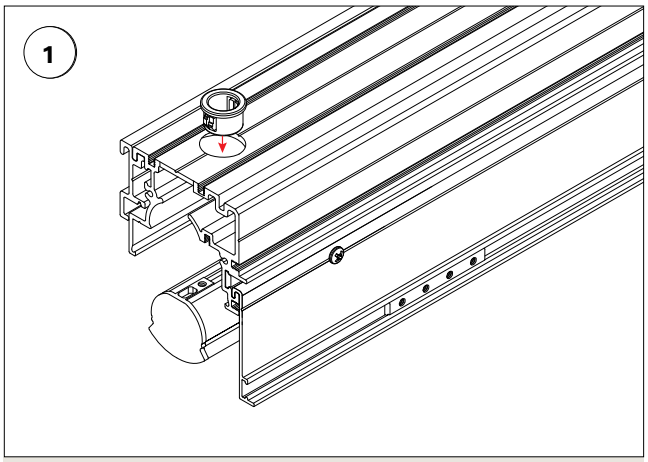


Snap the wire bushing into selected wire exit.

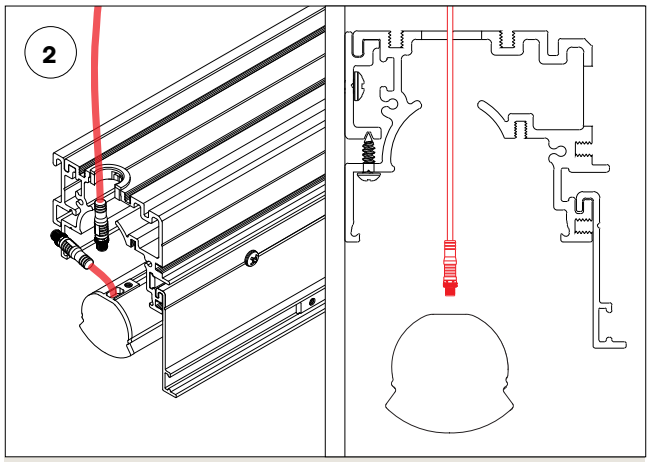

Feed the connector from the remote driver through the main housing's wire bushing.

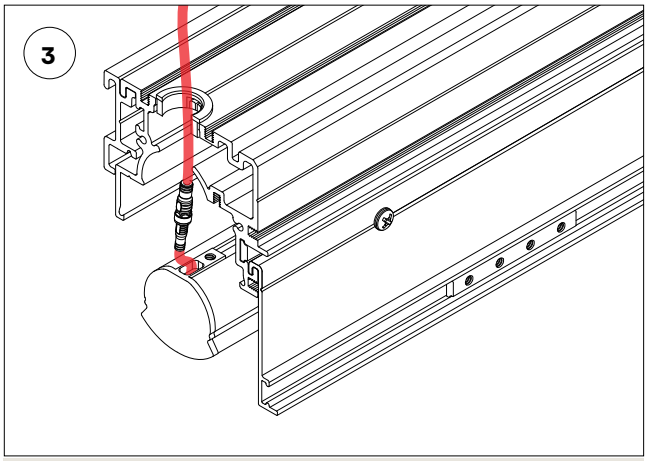


Make connection between light module and remote driver.

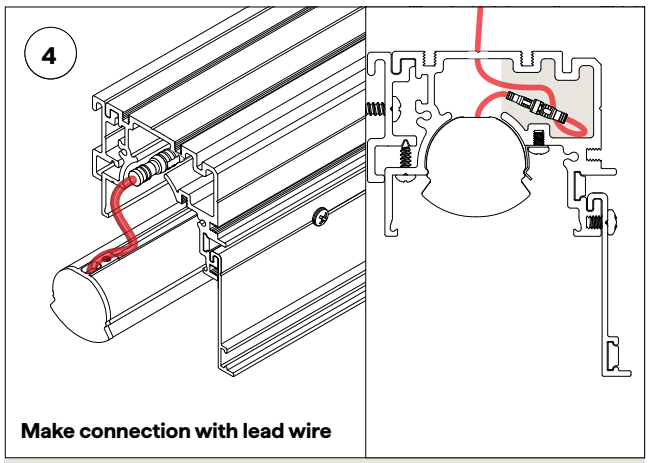


Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away into (shown above in the upper right portion of the main housing).

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE DRIVER**

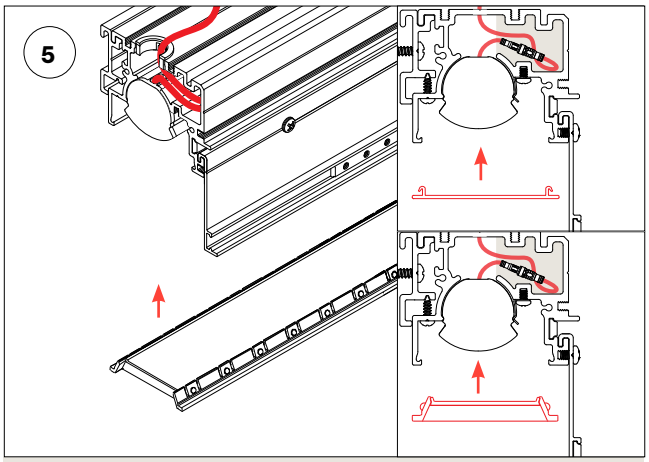


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

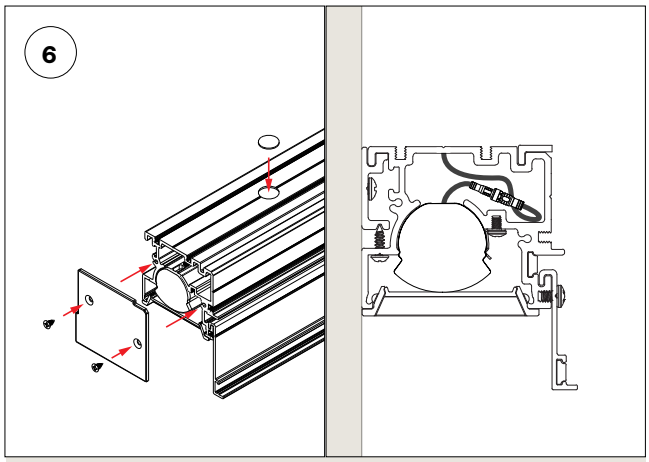


Insert theprovided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **DRIVER (CONSTANT CURRENT ONLY)**

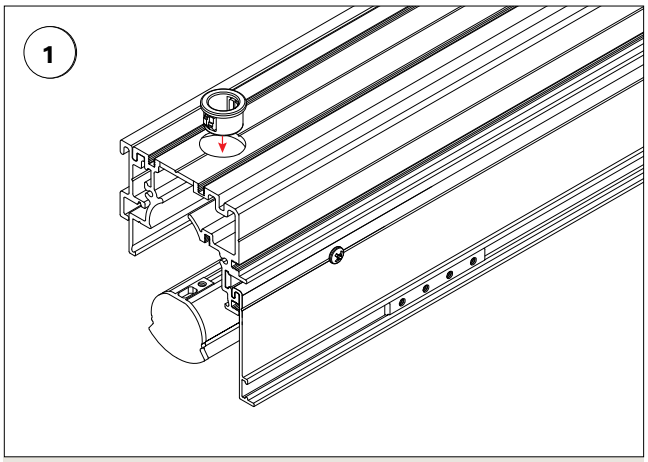


Snap the wire bushing into selected wire exit.

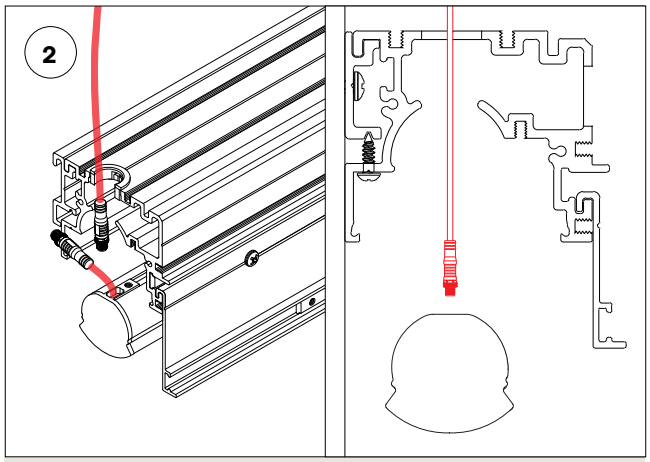

Feed the connector from the driver through the main housing's wire bushing.

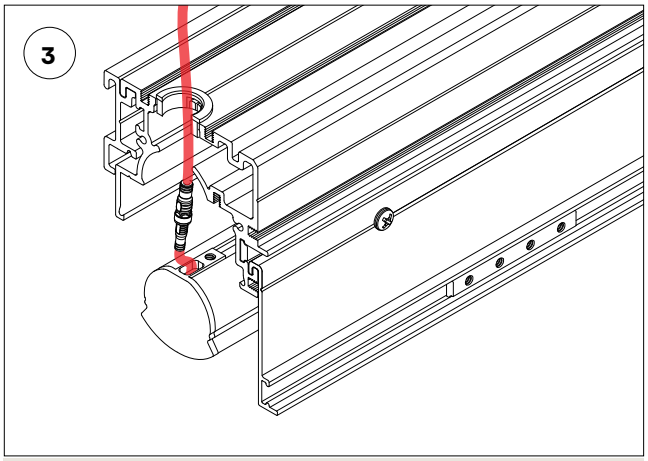

Make connection between light module and driver.

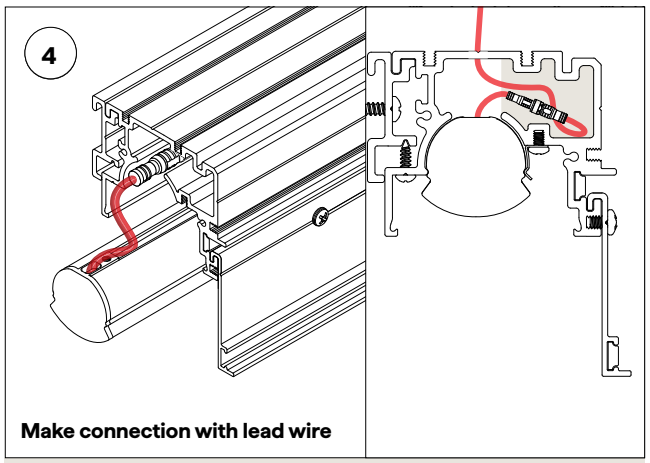


Make connection with lead wire


Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away into (shown above in the upper right portion of the main housing).

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DRIVER (CONSTANT CURRENT ONLY)**

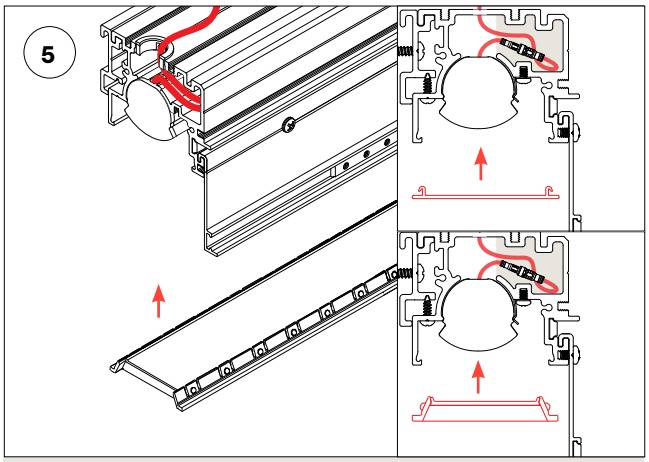


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

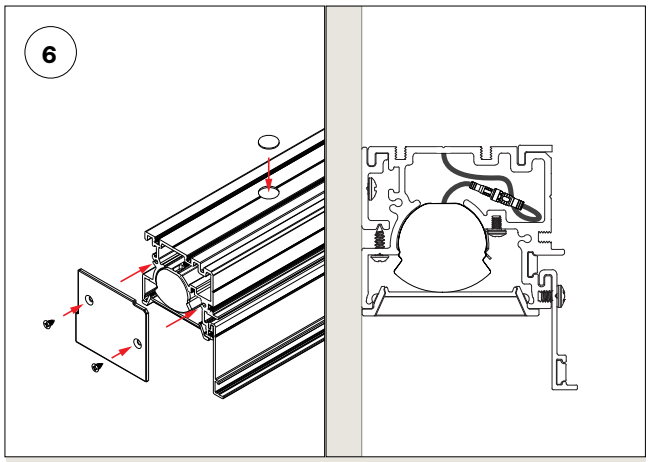


Insert theprovided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE CHICAGO PLENUM SIDE MOUNTED**

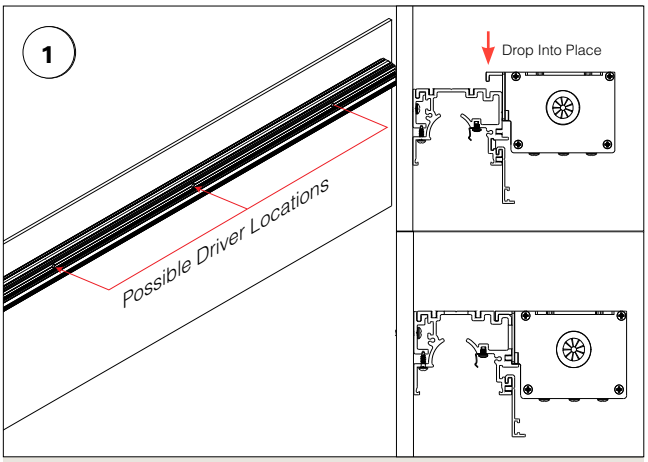

Select the optimal feed location. Align the wiring compartment an existing hole location, drop into place. The wiring compartment should snap into existing hole location.

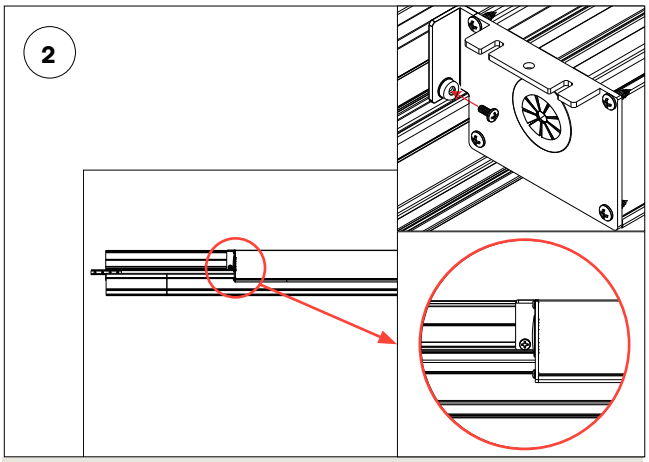


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the compartment in place.

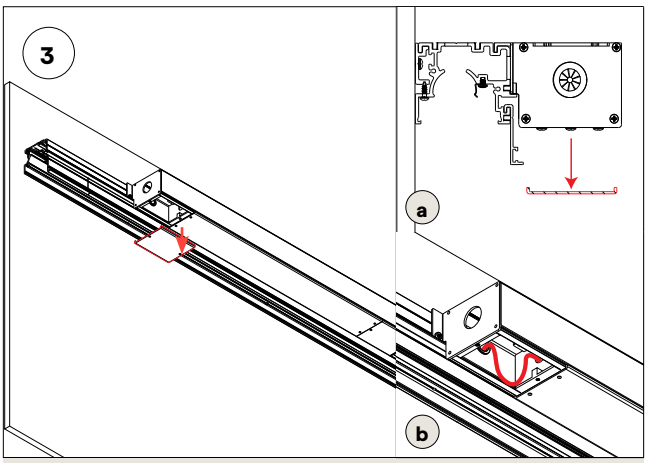

a. Open up the cover toward the feed location of the wiring compartment.

b. Feed the lead wire through the wire way accessory into the main housing.

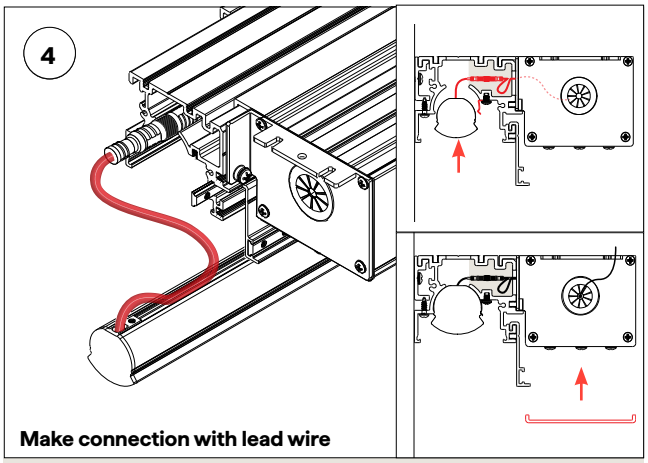


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the feed cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE CHICAGO PLENUM SIDE MOUNTED**

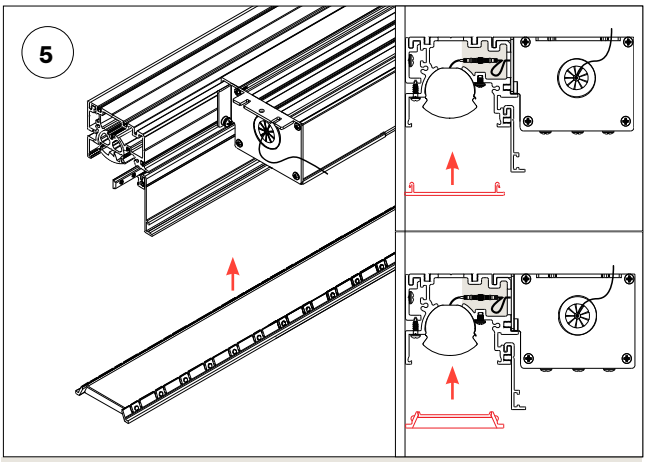


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

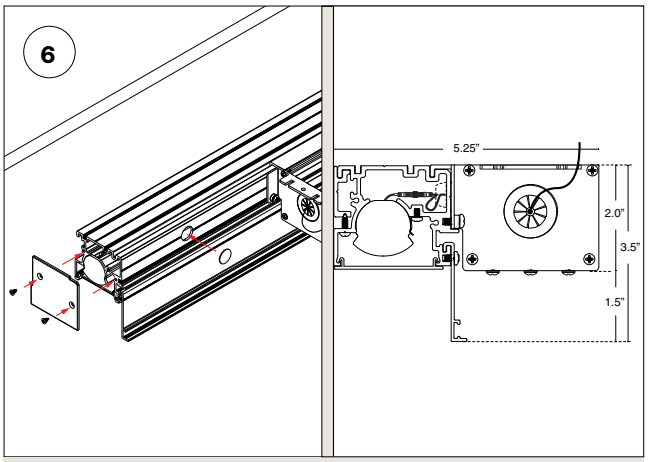


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **CHICAGO PLENUM SIDE MOUNTED (CONSTANT CURRENT ONLY)**

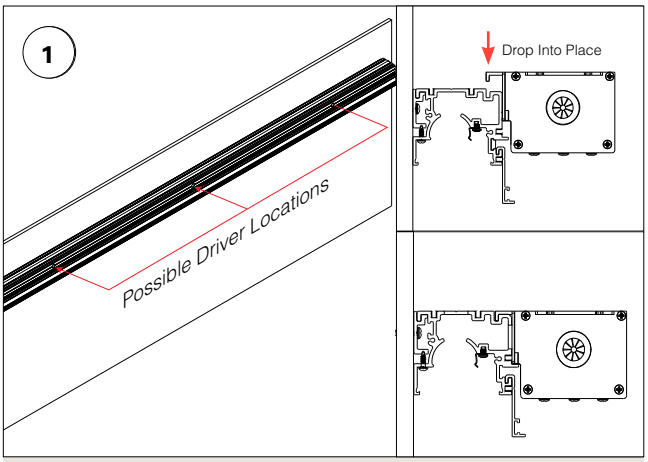

Select the optimal feed location. Align the wiring compartment an existing hole location, drop into place. The wiring compartment should snap into existing hole location.

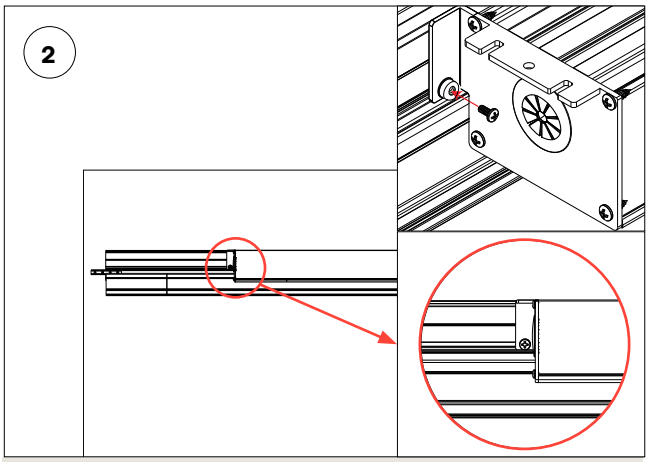


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the compartment in place.

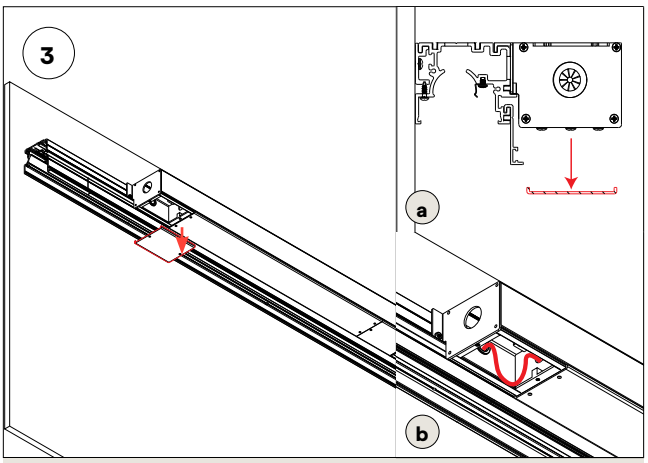

a. Open up the cover toward the feed location of the wiring compartment.

b. Feed the lead wire through the wire way accessory into the main housing.

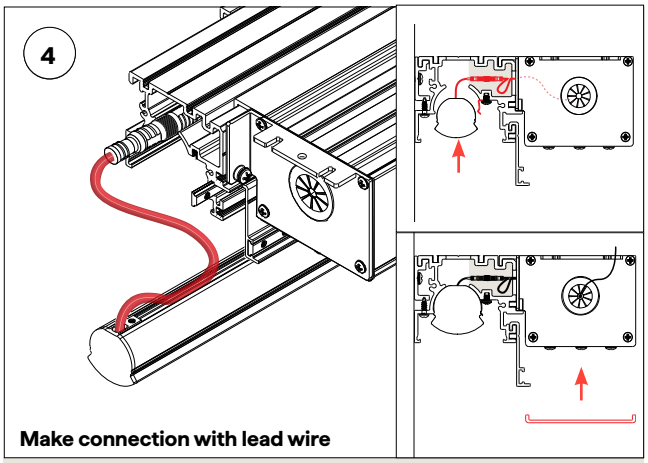


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the feed cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **CHICAGO PLENUM SIDE MOUNTED (CONSTANT CURRENT ONLY)**

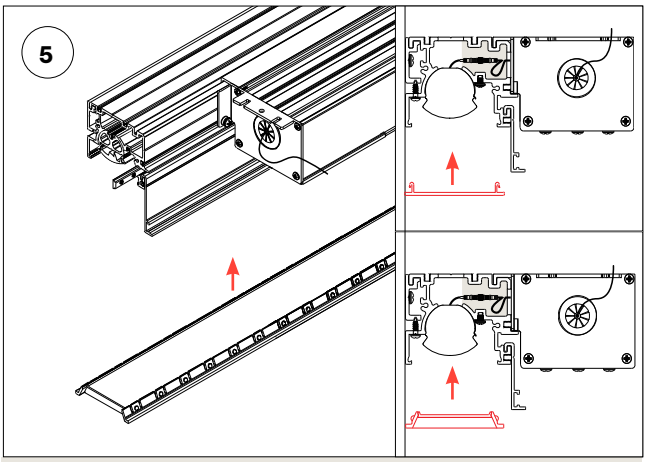


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

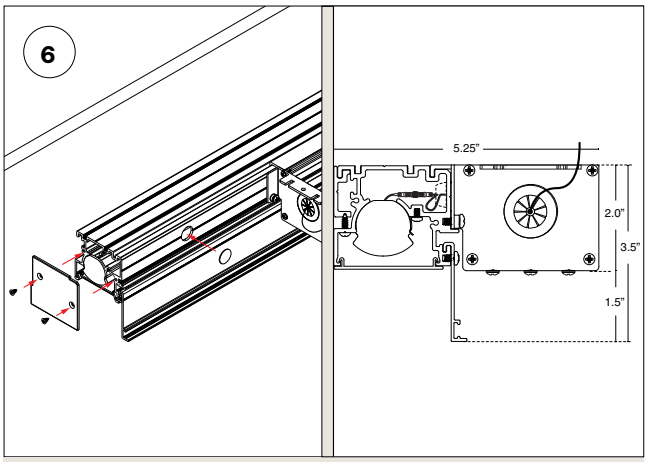


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE CHICAGO PLENUM TOP MOUNTED**

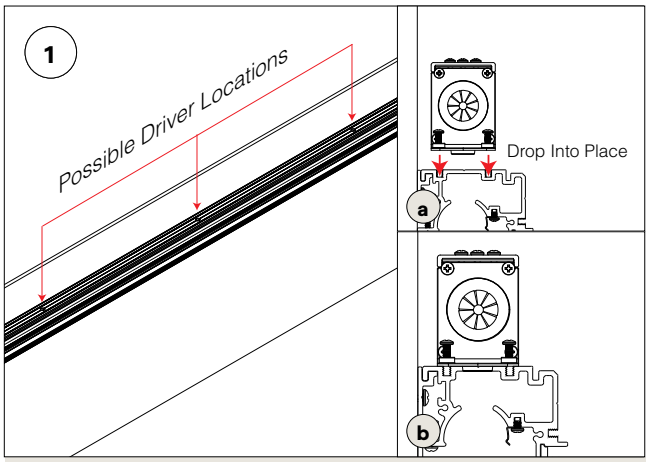

Select the optimal feed location. Align the wiring compartment an existing hole location, drop into place. The wiring compartment should snap into existing hole location.

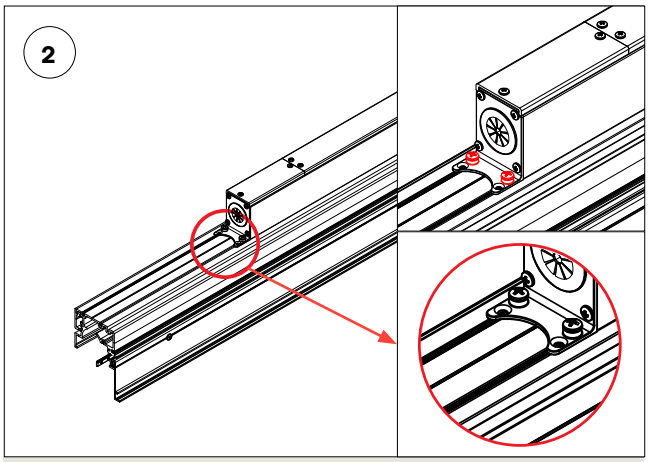


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the compartment in place.

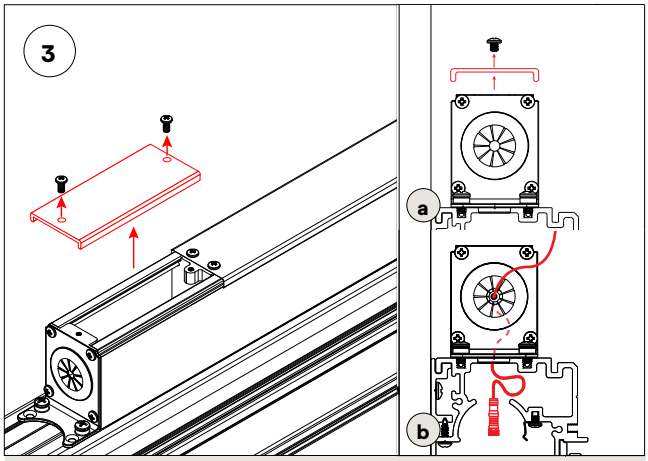

a. Open up the cover toward the feed location of the wiring compartment.

b. Feed the lead wire through the wire way accessory into the main housing.

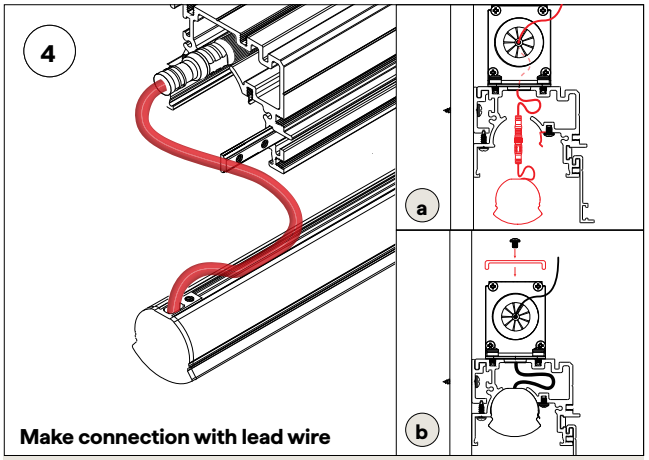


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the feed cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE CHICAGO PLENUM TOP MOUNTED**

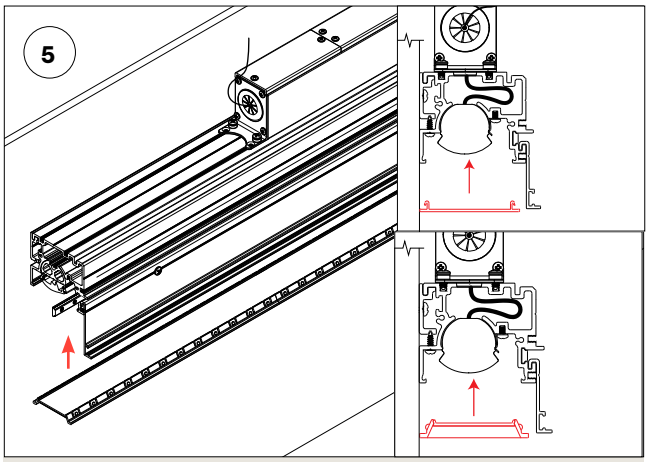

Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

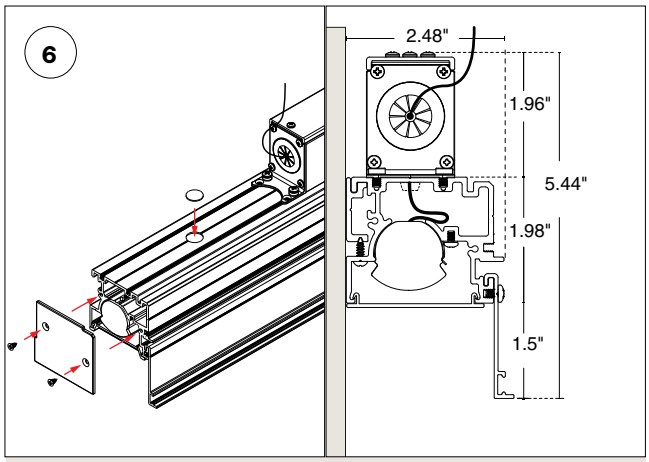


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


DRIVER LOCATION

INTEGRAL TOP MOUNTED: Integral versions come standard as Chicago Plenum CCEA compliant.

TP

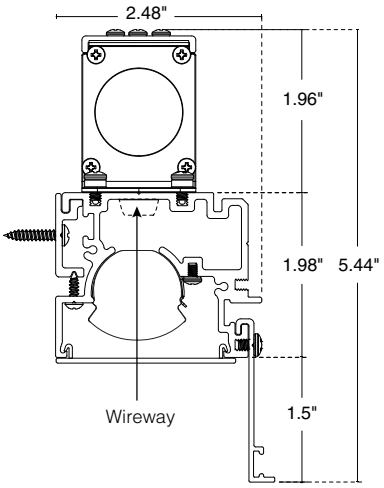


NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

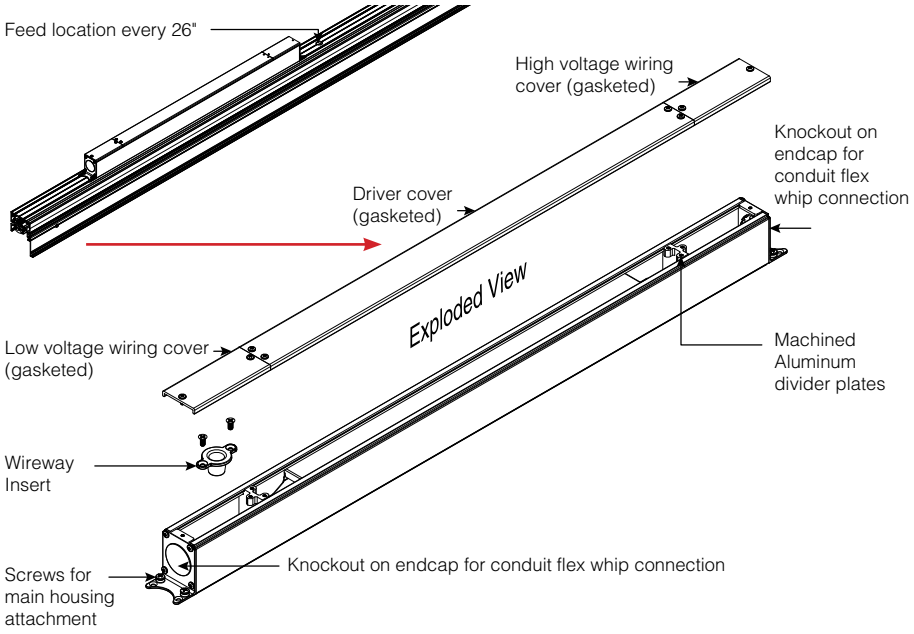


INTEGRAL SIDE MOUNTED: Integral versions come standard as Chicago Plenum CCEA compliant.

SE

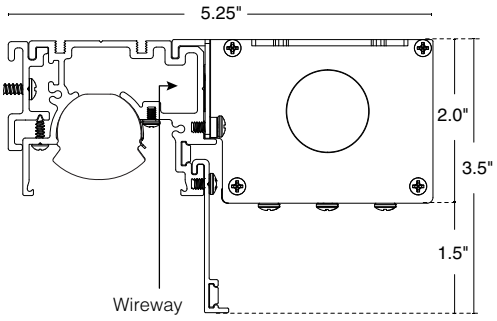

NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

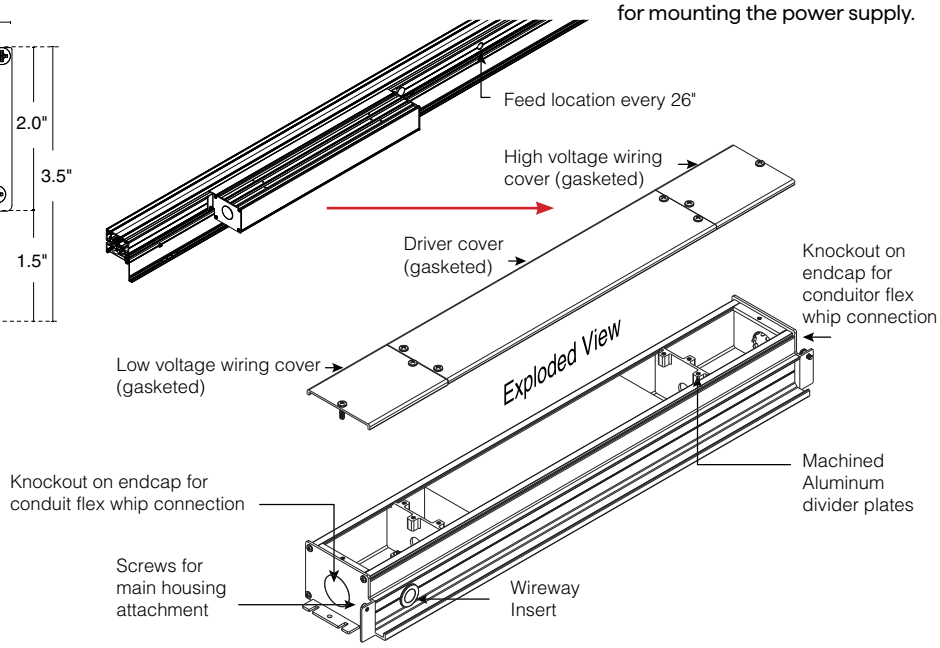

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI-CORNER

Perimeter Fixtures Installation Instructions

ATTENTION: Please read all instructions BEFORE installation

- Product to be installed by a licensed electrician - Field modifications void warranty
- Use only with Class 2 power supply unit — Warranty only valid with QTL power supplies
- Cove mount
- Input Voltage: 24VDC
- Diagrams for representation only and not to scale.

METHODS OF INSTALLATION

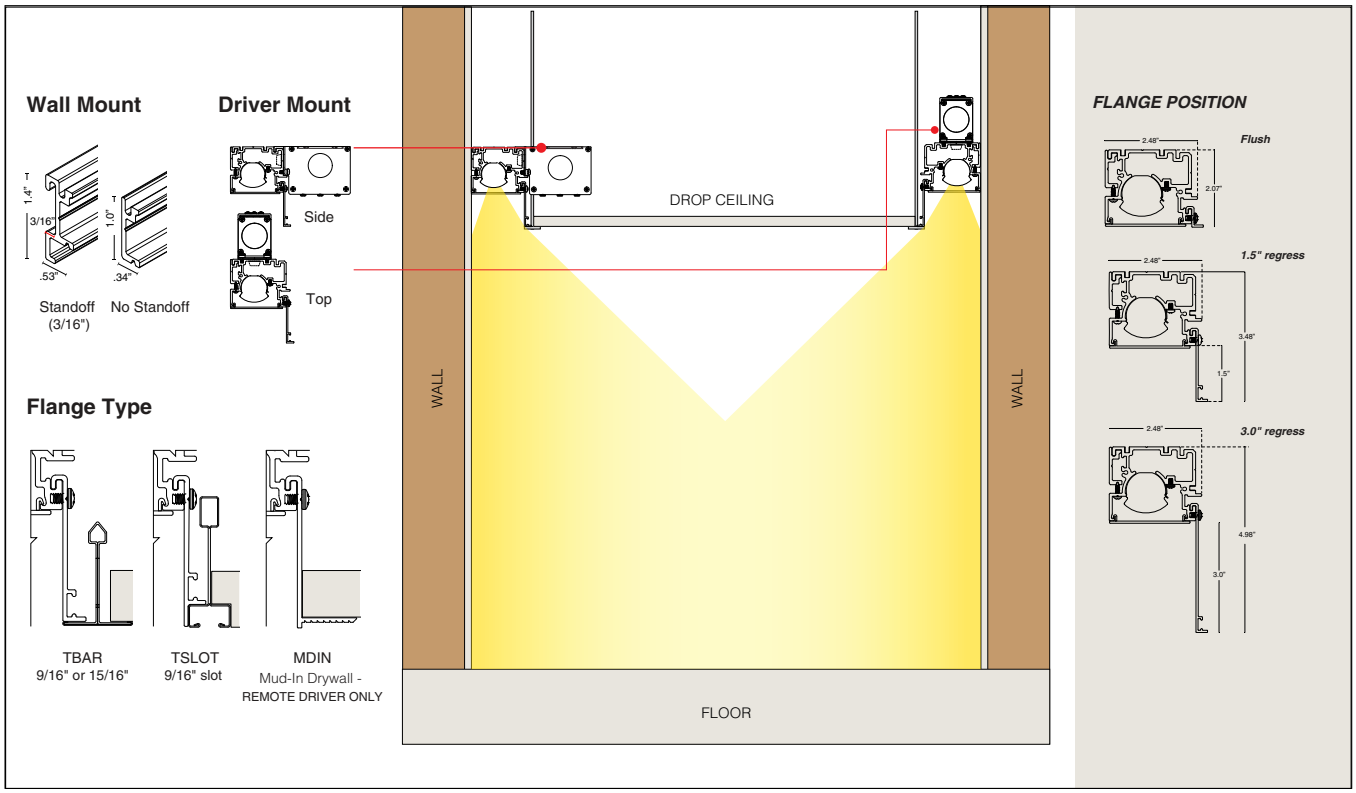


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PERI-CORNER

Perimeter Fixtures Installation Instructions


PERIMETER
Flush

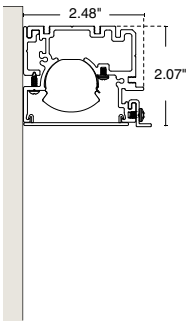


PERIMETER
1.5" regress

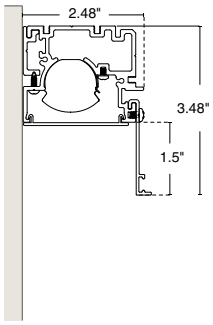


PERIMETER
3.0" regress

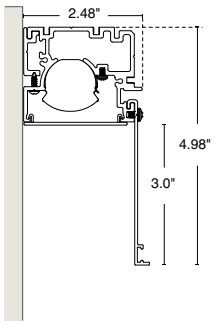


PERIMETER
With Driver Top Mounted

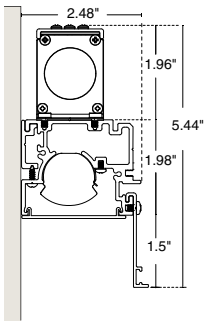


PERIMETER
With Driver Side Mounted

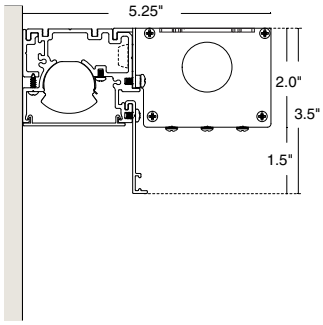


COMPONENTS & HARDWARE

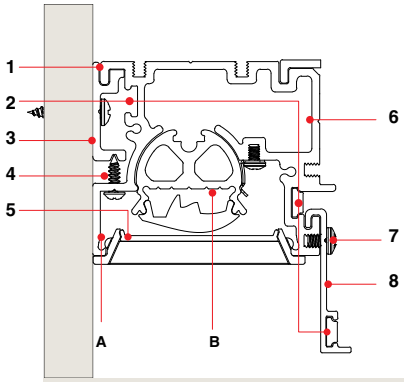

C - End Cap

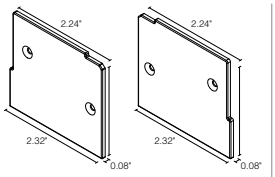


Main Housing End Cap



Inner End Cap


D - Corner
(brackets included)

PERI-ILC

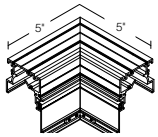

Inside Corner

PERI-OLC

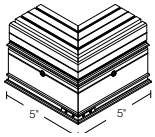

Outside Corner

(Preassembled, Sold separately)

A - Main Housing

B - Light Module

C - End Plate & Inner End Cap

D - Inside Corner & Outside Corner

1 - Easy-drop hook (primary mount)

2 - Connector Slot

3 - Wall Mount Bracket

4 - Screw Stopper


5 - Louver/ Lens Combo

6 - Wire Way: Tuck wires into main housing for clean install


7 - Flange Mount

8 - Flange


JOINER/CONNECTORS




INLINE BRACKET
(2 per length included)



Inner Corner




Outer Corner

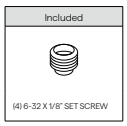


CORNER BRACKET
(Sold separately for field cut corner)


FLANGE TYPE: Powder coated matte white finish standard for all flange types

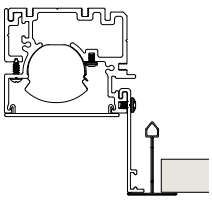

TBAR
(Grid - 9/16" or 15/16")

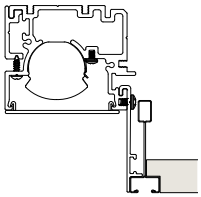


TSLOT
(9/16" slot)

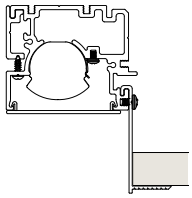


MDIN
(REMOTE DRIVER ONLY)

WALL MOUNT

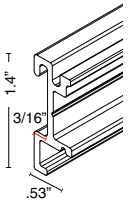


STANDOFF (3/16")
(Secure with screw)

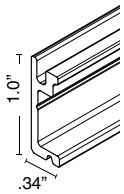

NO STANDOFF
(Secure with screw)

ADDITIONAL MOUNTING BRACKETS

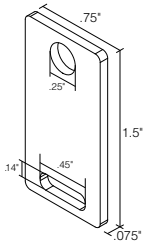


SUSPENSION SUPPORT BRACKET
(Sold separately)

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


Specification subject to change. Rev-08-27-26

WALL CONFIGURATION

Accurate wall-to-wall dimensions must be provided during shop drawings for QTL applications team review to ensure bill of material is configured to provide uniform illumination

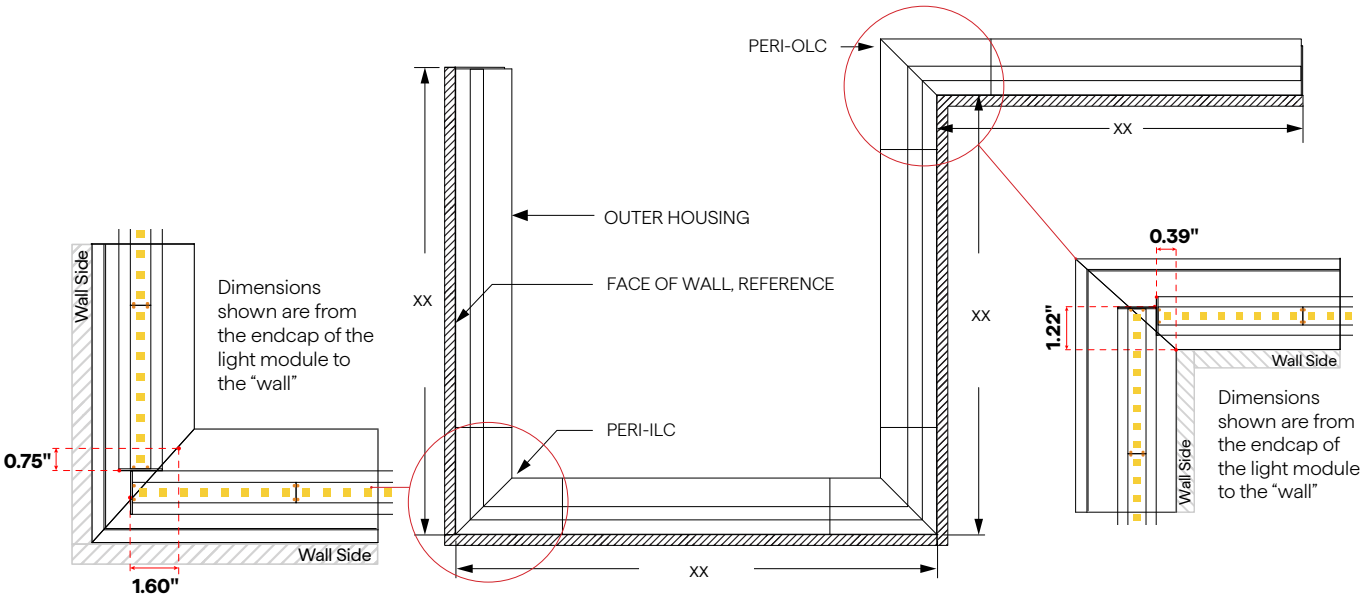

TOP VIEW

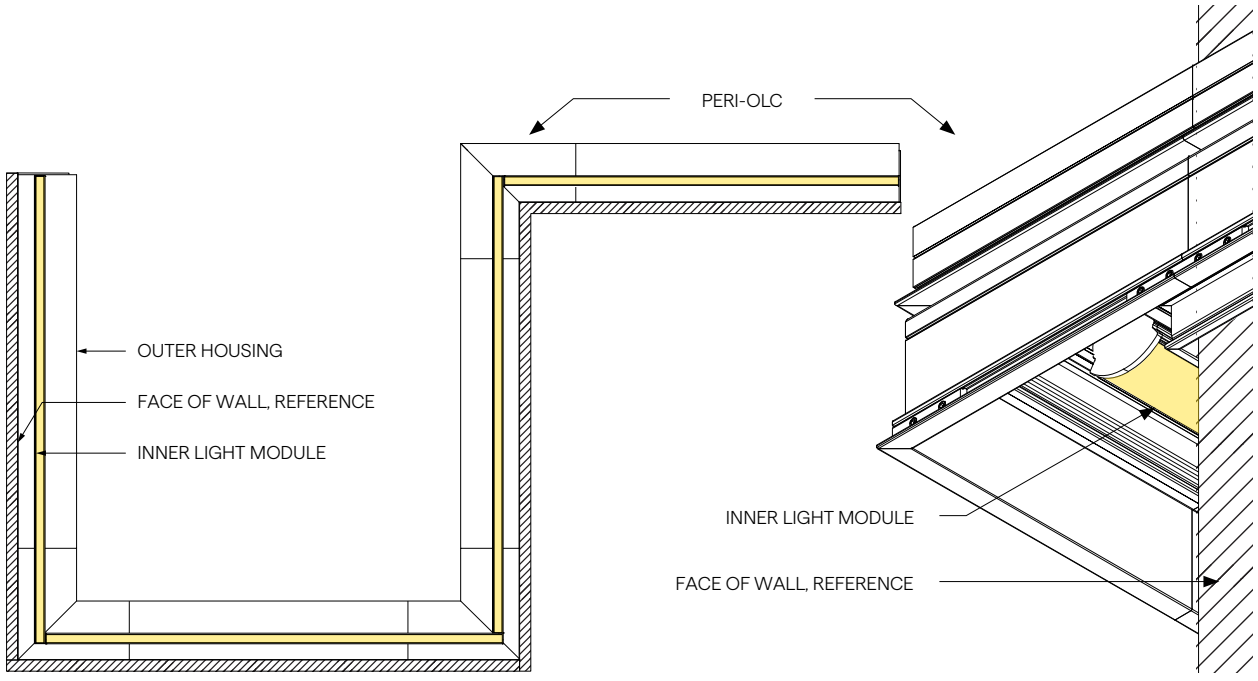


TOP VIEW

ISO VIEW


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **STANDOFF WALL MOUNT**

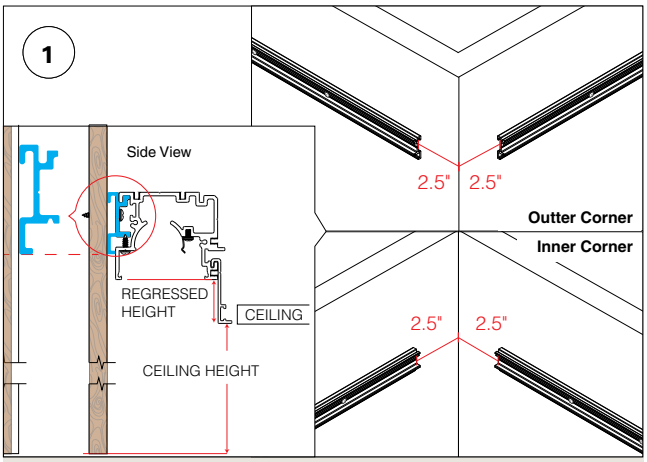


Draw a level line around perimeter of the area. This height should be calculated by the following formula:

Line Height = Finished Ceiling Height + Regressed Height ((Flange Height Choice) + 9/16")

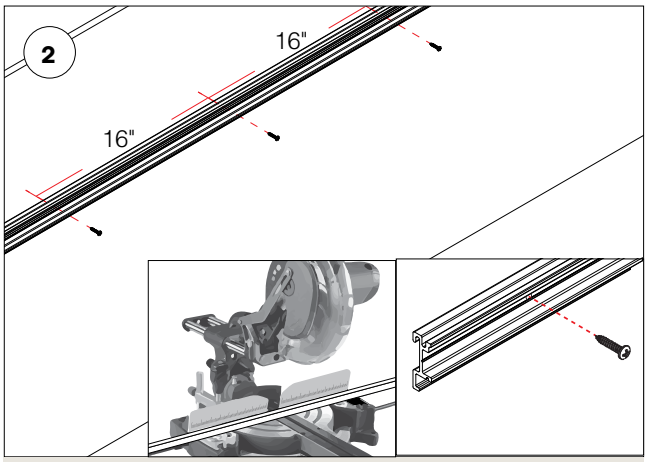


Line up the bottom of the wall mounting bracket with the reference line made. Install the #6 x 3/4" pan head tapping screws along the V Groove every 16".

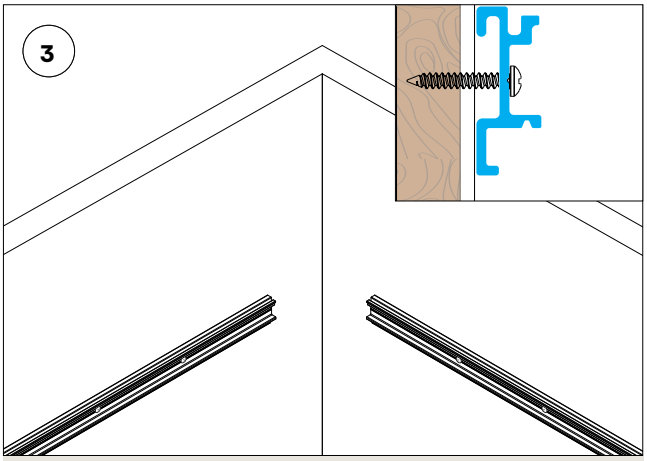

Ensure wall mounting bracket is properly installed before moving onto the main housing installation.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **NO STANDOFF WALL MOUNT**

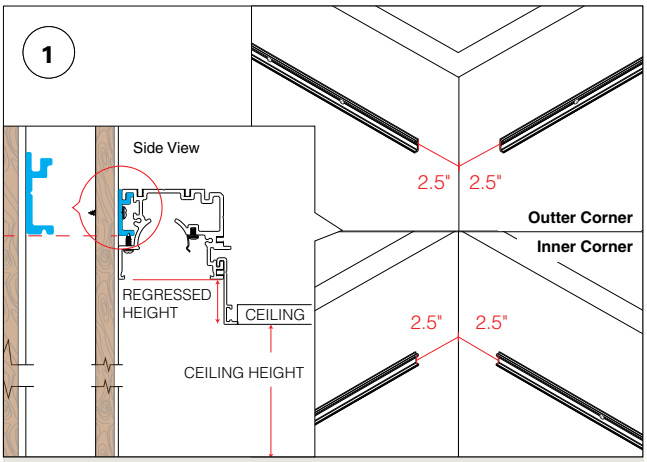


- Draw a level line around perimeter of the area. This height should be calculated by the following formula:

Line Height = Finished Ceiling Height + Regressed Height ((Flange Height Choice) + 1")

- Mount two wall mounts, 2.5 Inches behind the edge of the corner.

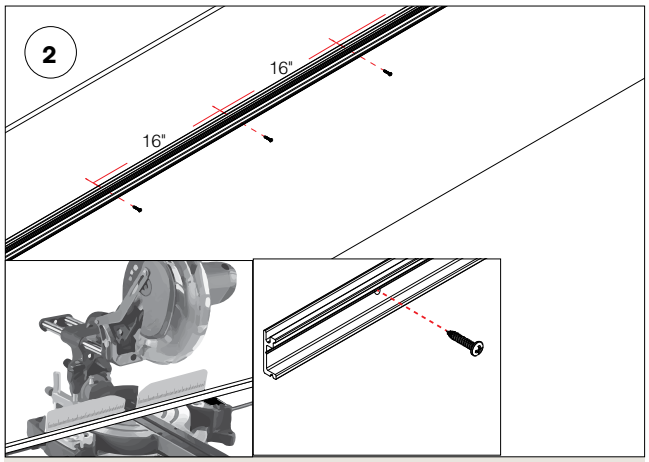


Line up the bottom of the wall mounting bracket with the reference line made. Install the #6 x 3/4" pan head tapping screws along the V Groove every 16".

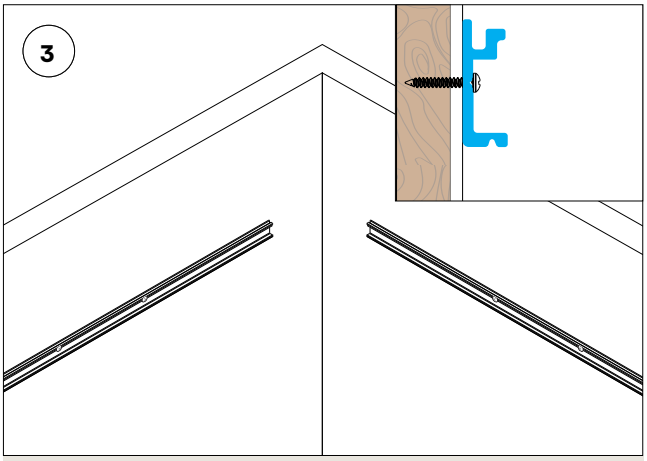

Ensure wall mounting bracket is properly installed before moving onto the main housing installation.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **MAIN HOUSING MOUNT-CORNER**

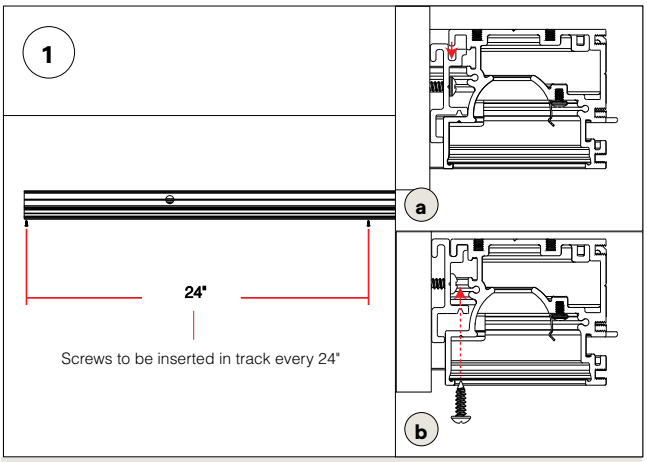

a. Hang the main housing on the wall mounting bracket by means of easy-drop the hook.


b. Install the #4 x 5/16 pan head screw through the main housing and wall mounting bracket at screw stopper points (every 24").

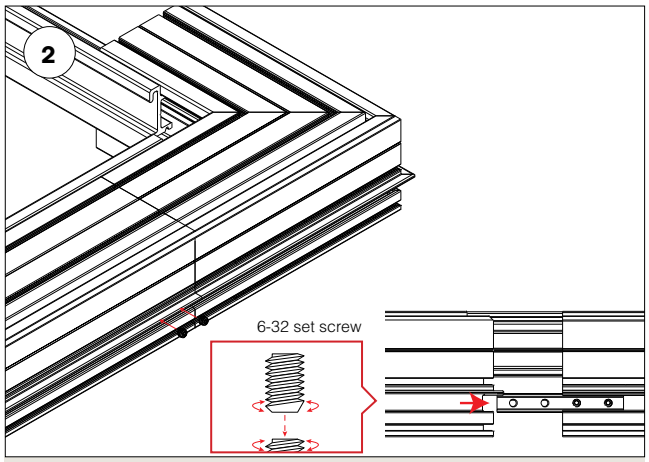

Where making connections with another run:


- Place inline connector in the connector.
- Screw down the first side of the inline connector.
- Align the runs and tighten down remaining screws

NOTE: Corners should be installed before linear runs.

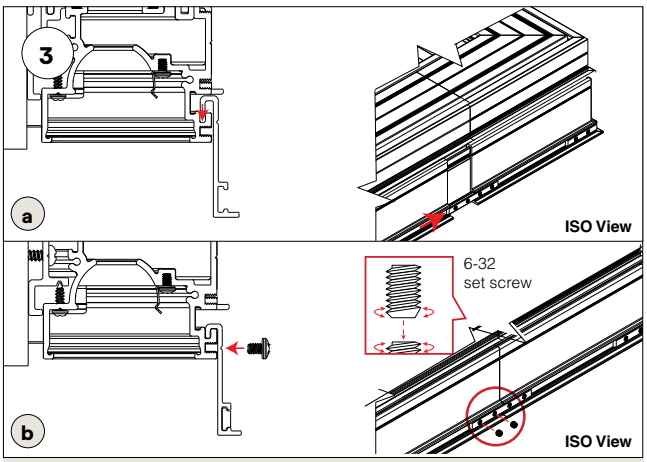

a. Connect remaining runs of flanges to the mitered corner. Fasten the first side of inline connector onto the mitered corners flange, and slide adjacent flange onto the second side of the connector.


b. Fasten the second side of the inline connector with the remaining set screws.

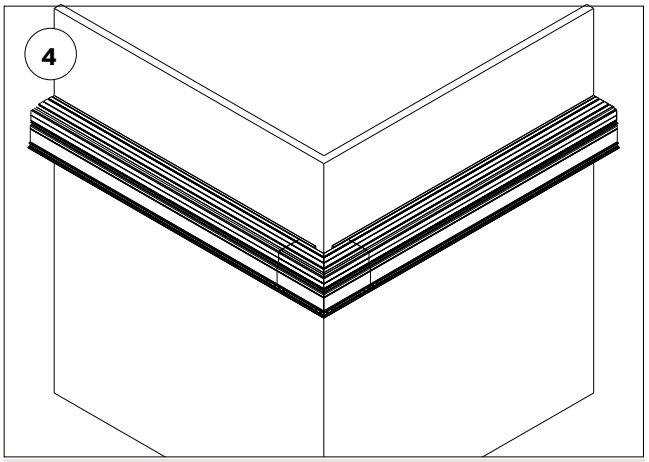


Ensure main housing is properly installed before moving onto driver installation.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **SIDE MOUNTED DRIVER**

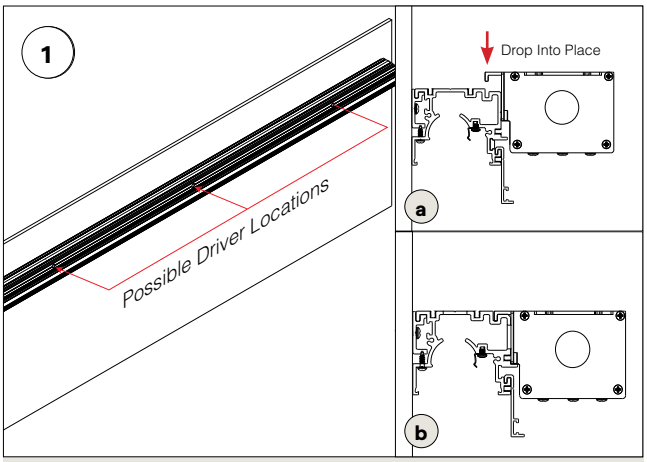

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

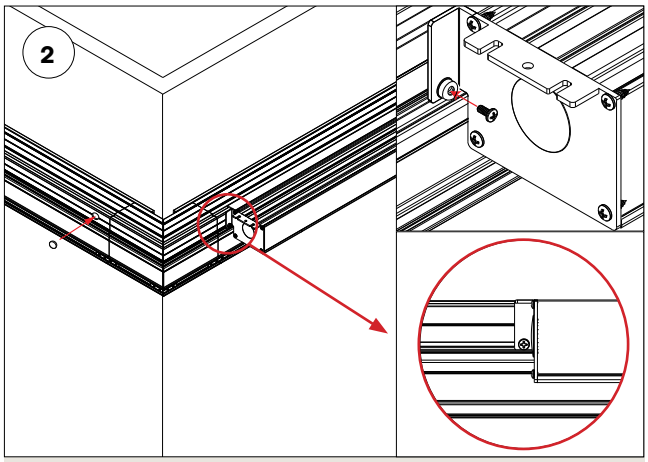


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

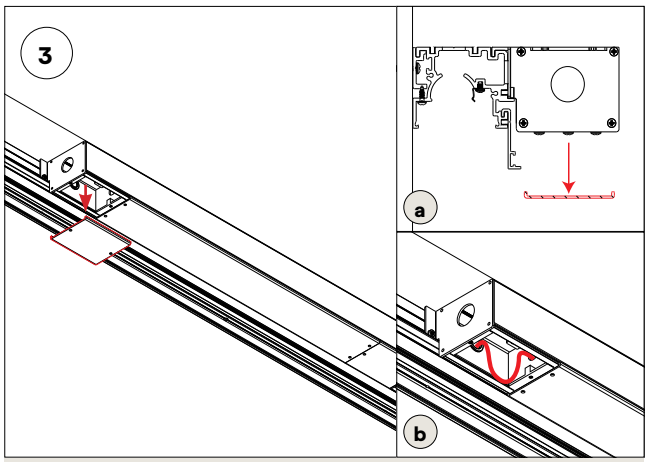

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

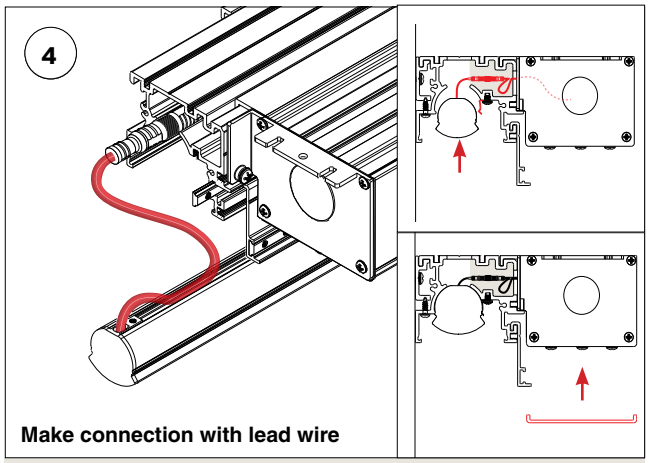


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **SIDE MOUNTED DRIVER**

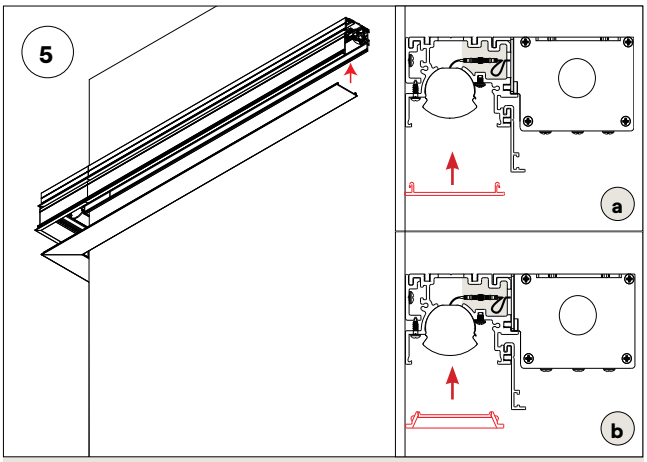


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

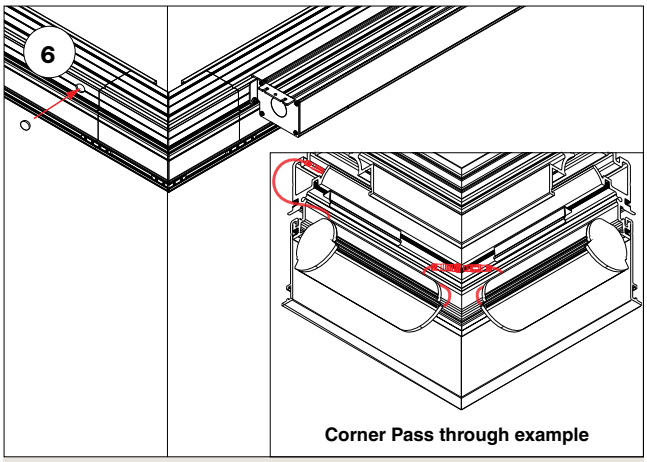


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **TOP MOUNTED DRIVER**

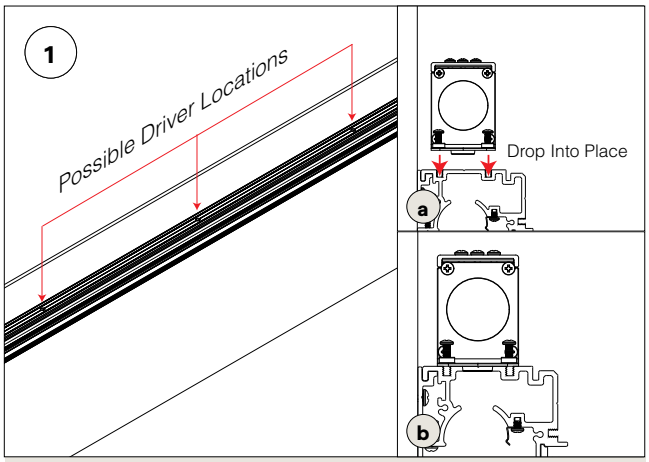

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

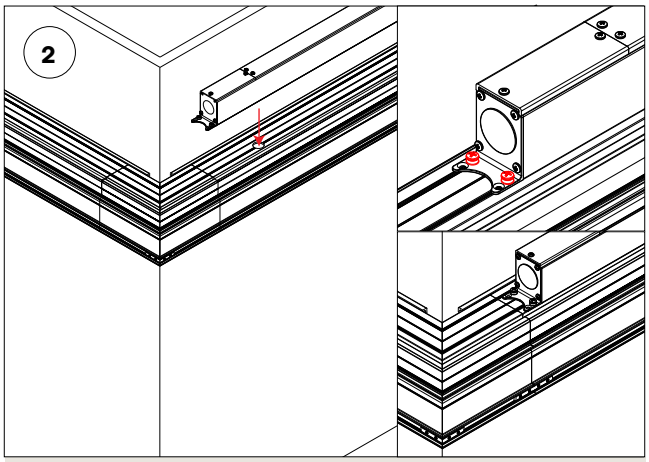


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

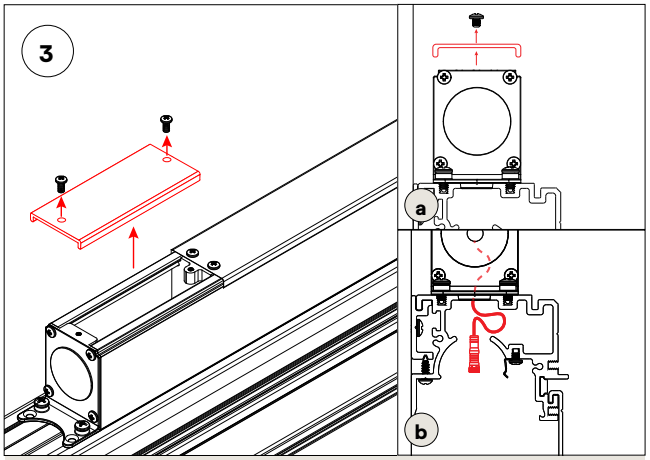

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

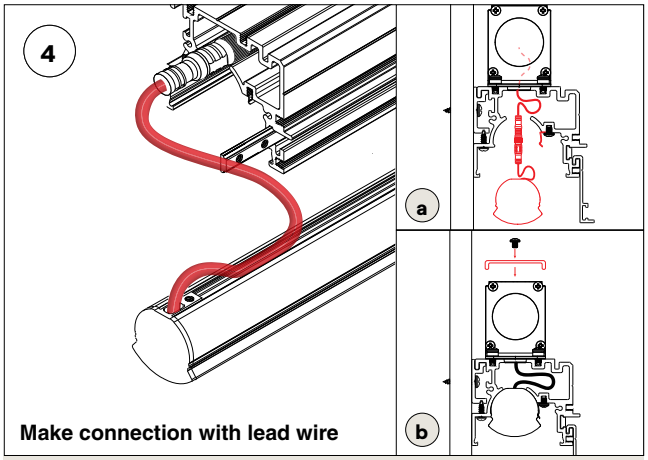


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **TOP MOUNTED DRIVER**

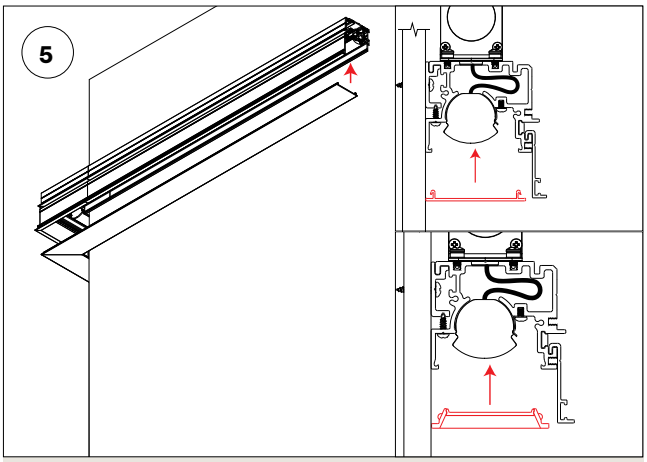


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

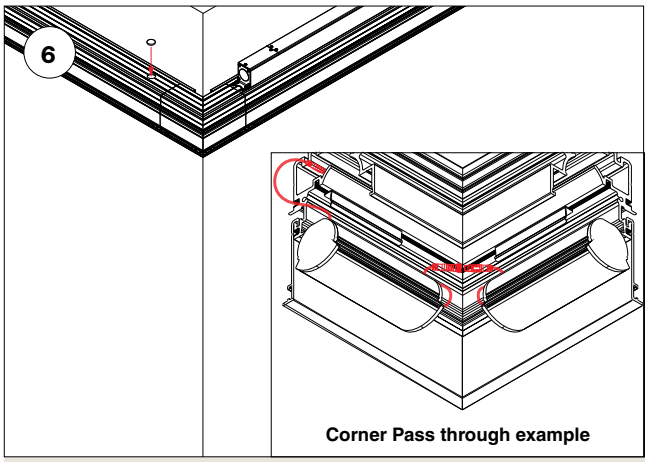


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **EMERGENCY DRIVER**

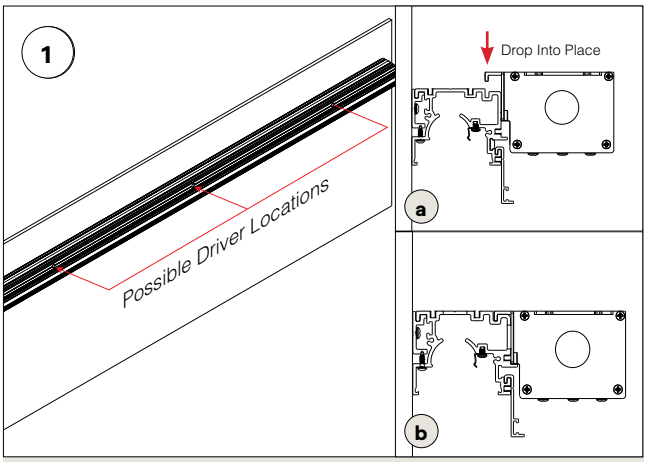

Select the optimal driver location. Align the driver housing with existing hole location, drop into place. Driver should snap into existing hole location.

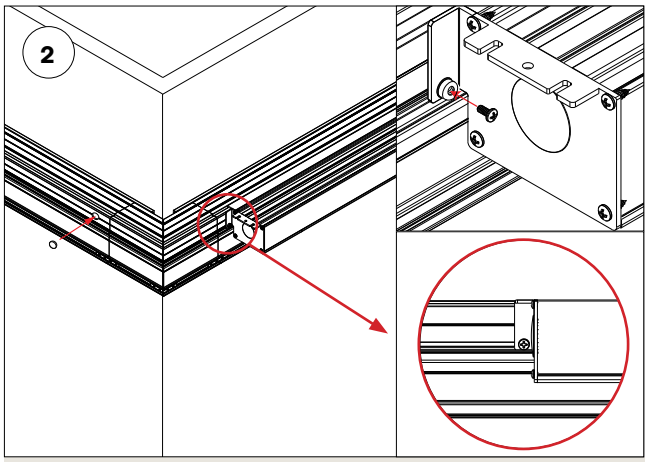


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the driver in place.

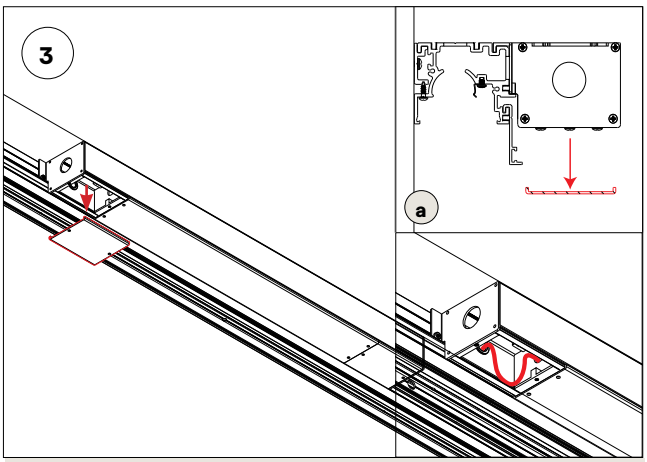

a. Open up the cover for the low voltage side of the driver.

b. Feed the lead wire through the wire way accessory of the driver housing into the main housing.

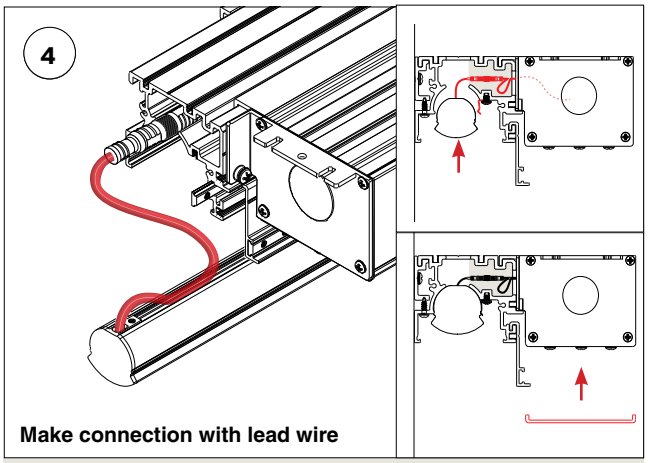


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the low voltage cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **EMERGENCY DRIVER**

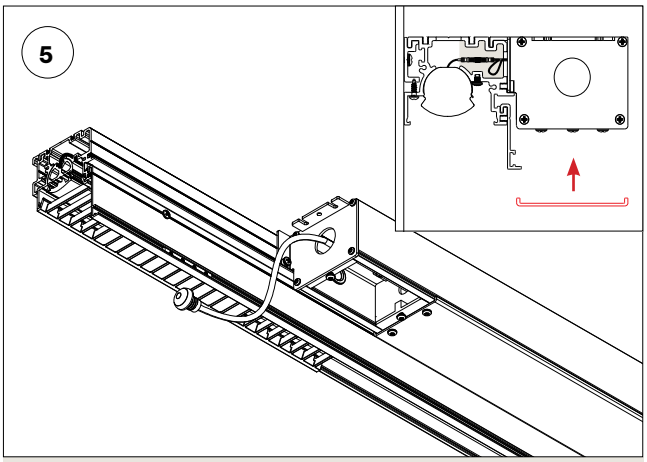

Feed button tester through knockout and reinstall the low voltage side cover.

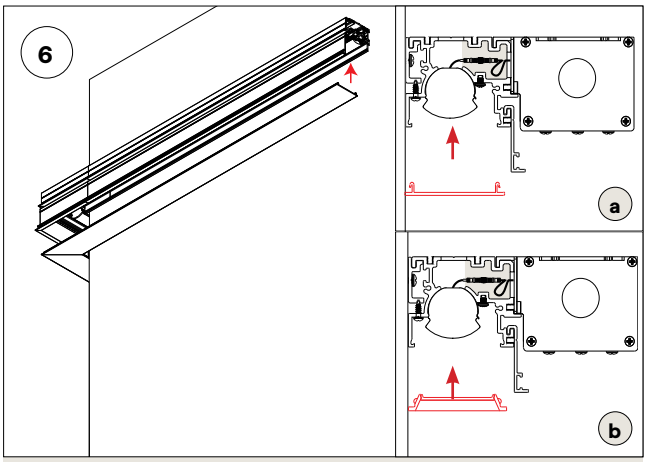


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

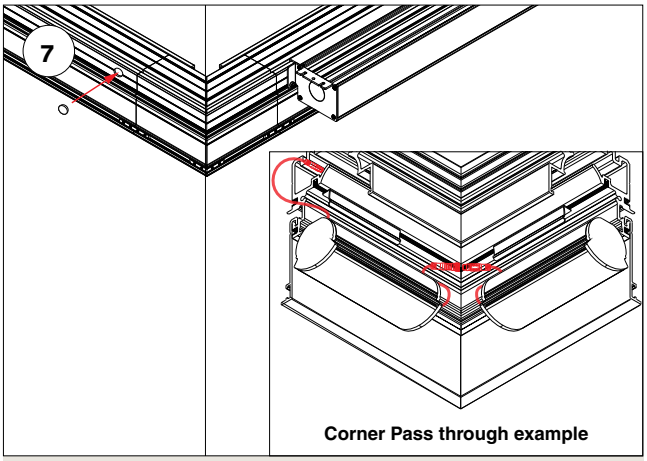


Insert theprovided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE DRIVER**

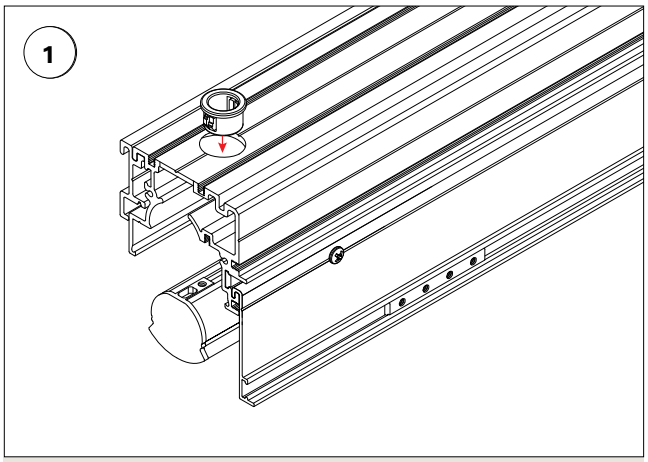


Snap the wire bushing into selected wire exit.

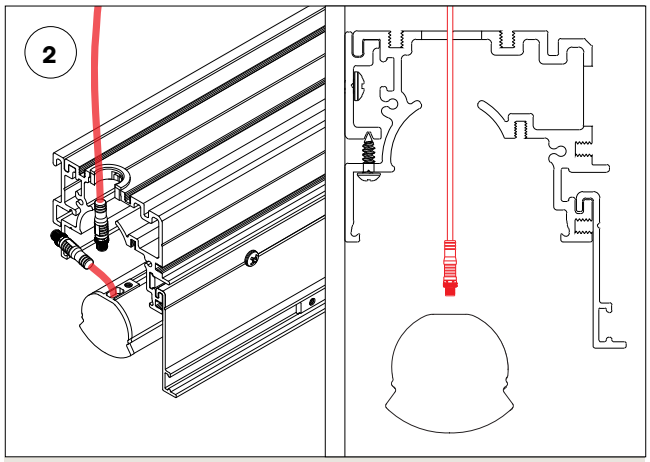

Feed the connector from the remote driver through the main housing's wire bushing.

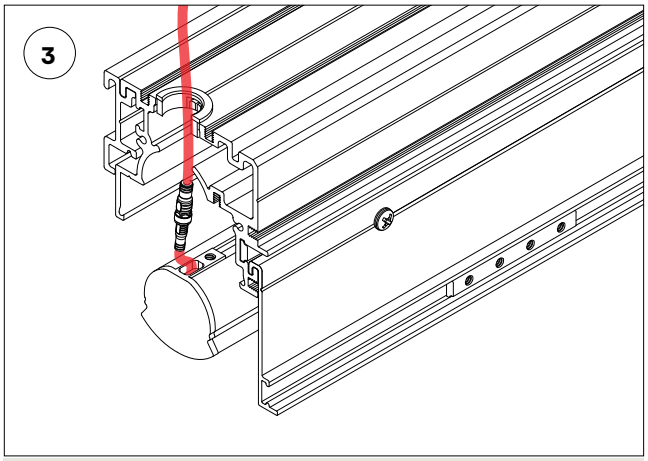


Make connection between light module and remote driver.

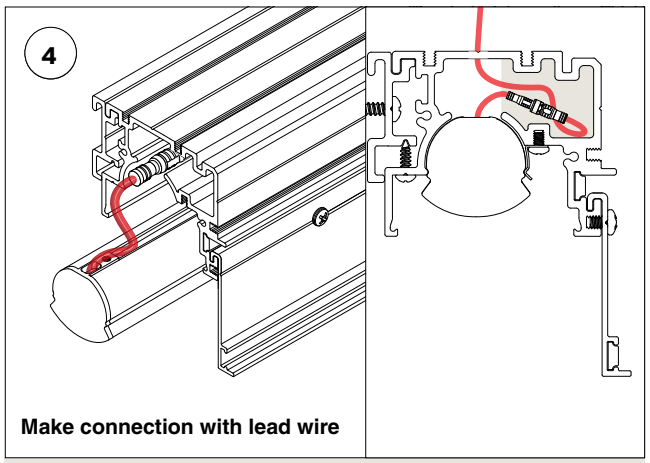


Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away into (shown above in the upper right portion of the main housing).

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE DRIVER**

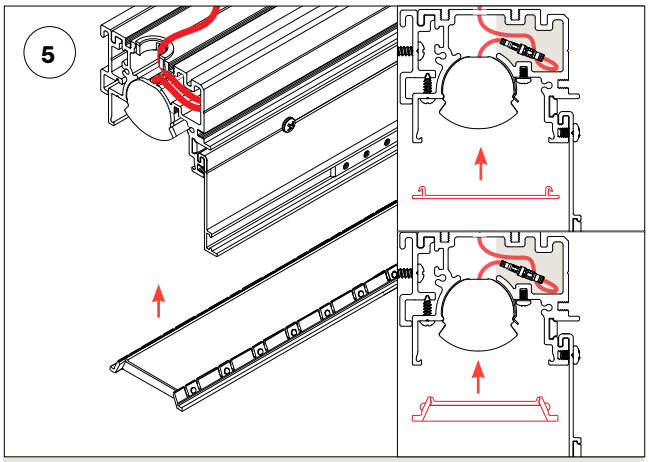


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

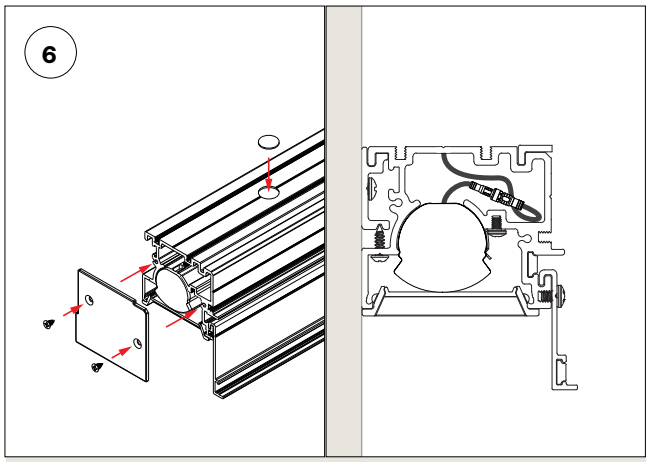


Insert theprovided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE CHICAGO PLENUM SIDE MOUNTED**

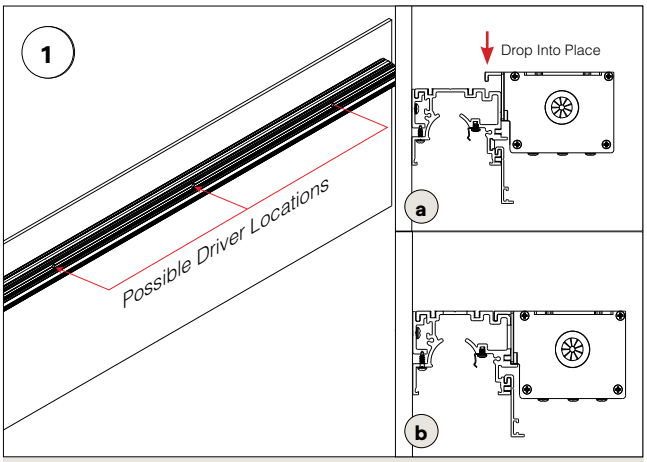

Select the optimal feed location. Align the wiring compartment an existing hole location, drop into place. The wiring compartment should snap into existing hole location.

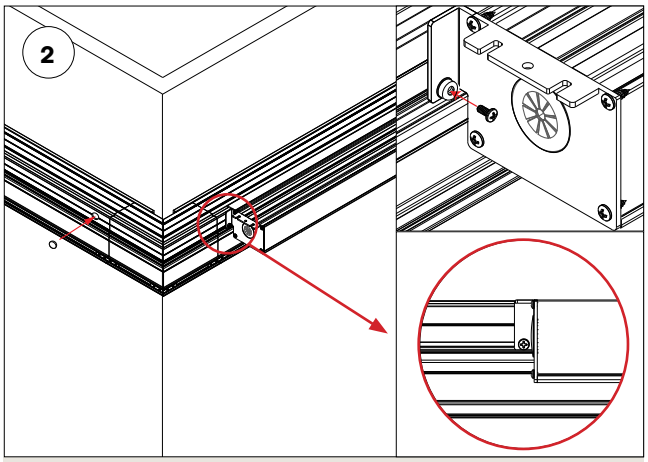


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the compartment in place.

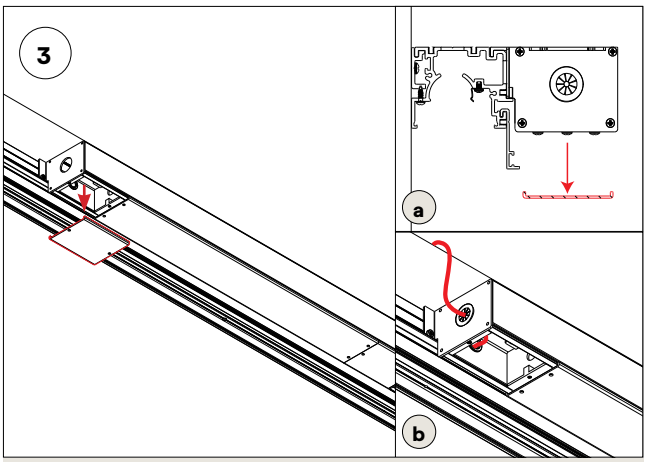

a. Open up the cover toward the feed location of the wiring compartment.

b. Feed the lead wire through the wire way accessory into the main housing.

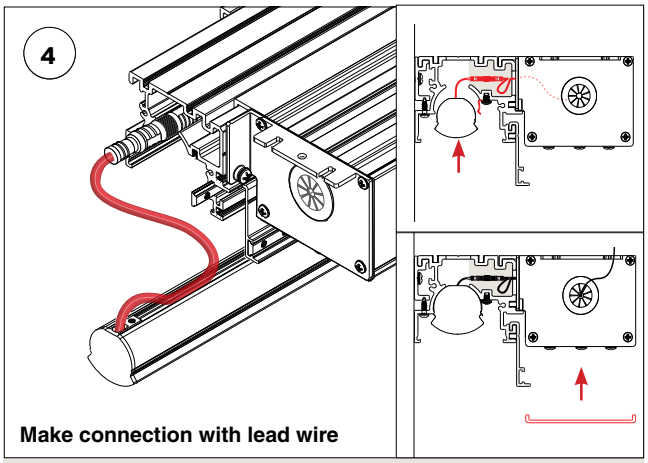


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the feed cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE CHICAGO PLENUM SIDE MOUNTED**

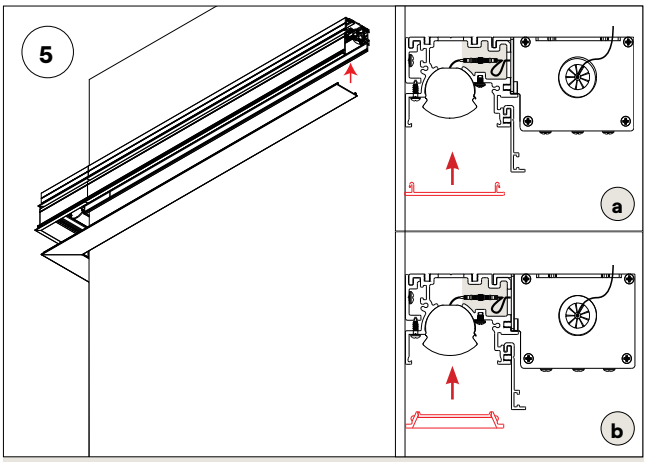


Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

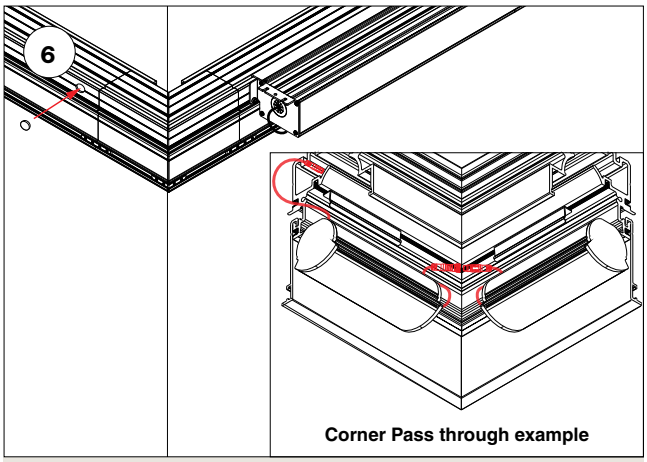


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **REMOTE CHICAGO PLENUM TOP MOUNTED**

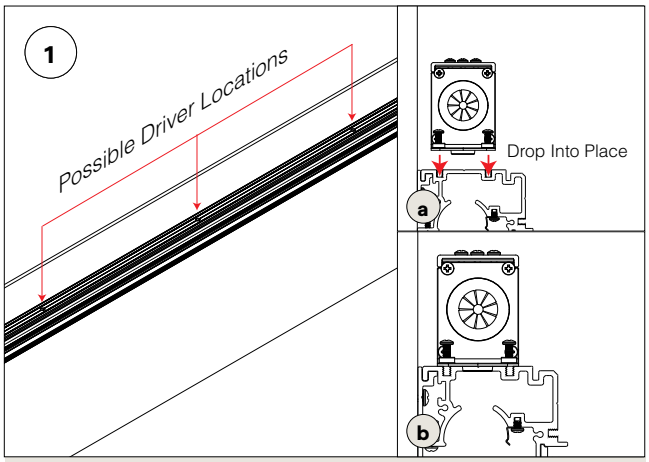

Select the optimal feed location. Align the wiring compartment an existing hole location, drop into place. The wiring compartment should snap into existing hole location.

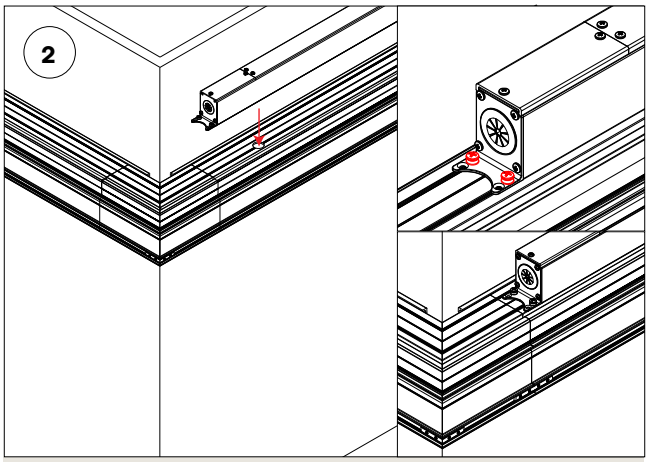


Fasten the 6-32 x 1/4" pan head screws on the endcaps to secure the compartment in place.

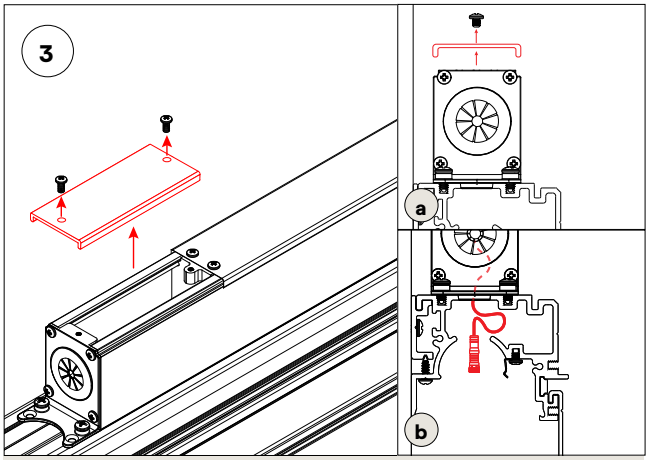

a. Open up the cover toward the feed location of the wiring compartment.

b. Feed the lead wire through the wire way accessory into the main housing.

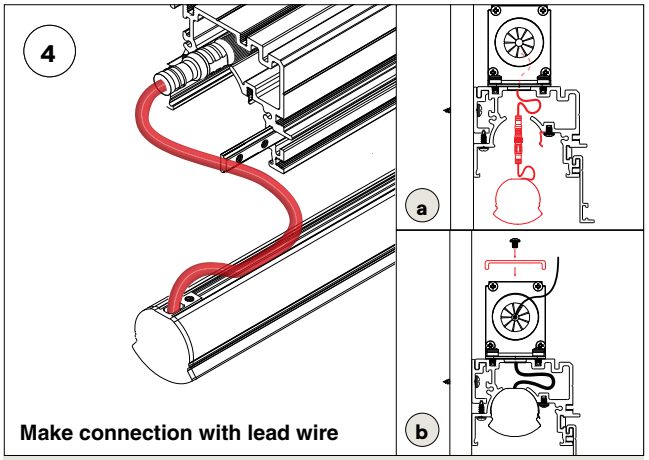


Make connection with lead wire

Before snapping the light module into the main housing, you may need to manage the excess wire. The light module features a groove for wires to be pressed and tucked into, and the main housing features a wireway where wires may be coiled and tucked away(shown above in the upper right portion of the main housing)


Once the the light module is snapped into place, reinstall the feed cover.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **REMOTE CHICAGO PLENUM TOP MOUNTED**

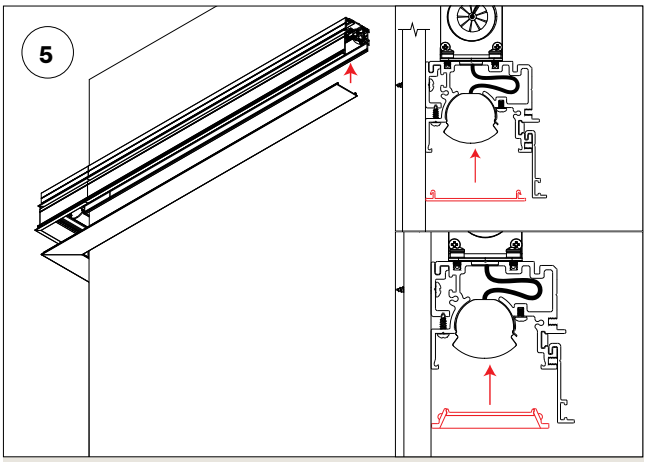

Install lens or louver. Lenses and louvers can be field cut to fit final measurements.

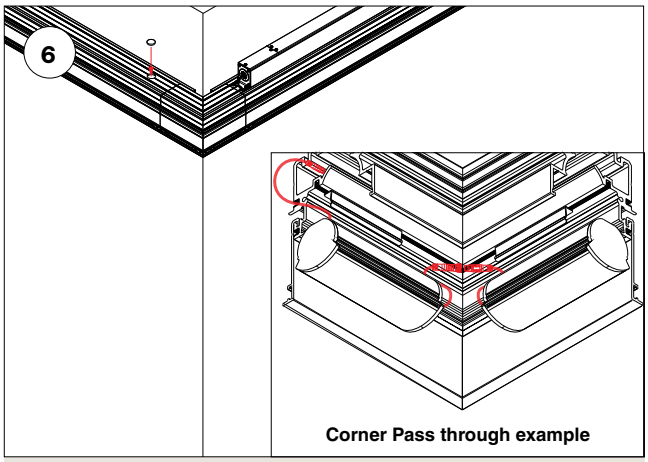

Corner Pass through example


Insert the provided snap caps to close any open feed holes. Secure the main housing endcaps and install the fixture into the ceiling.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


DRIVER LOCATION

INTEGRAL TOP MOUNTED: Integral versions come standard as Chicago Plenum CCEA compliant.

TP

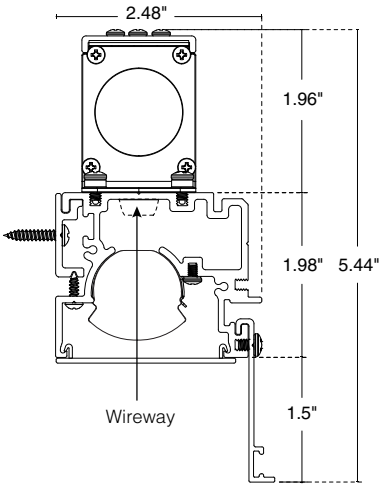


NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

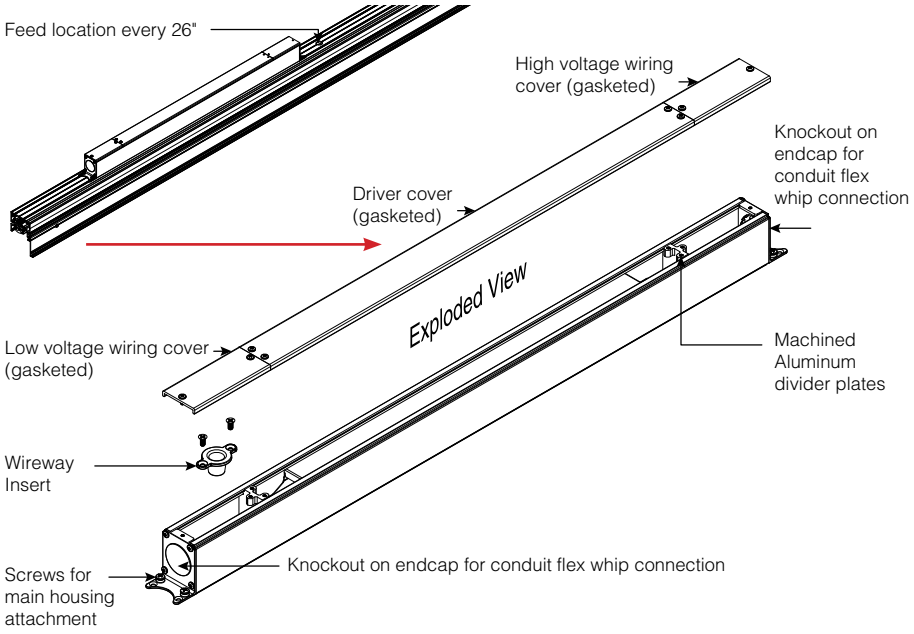


INTEGRAL SIDE MOUNTED: Integral versions come standard as Chicago Plenum CCEA compliant.

SE

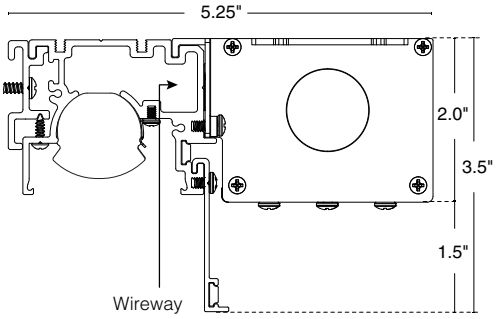

NOTE: The fixture's main housing will have multiple feed location options for mounting the power supply.

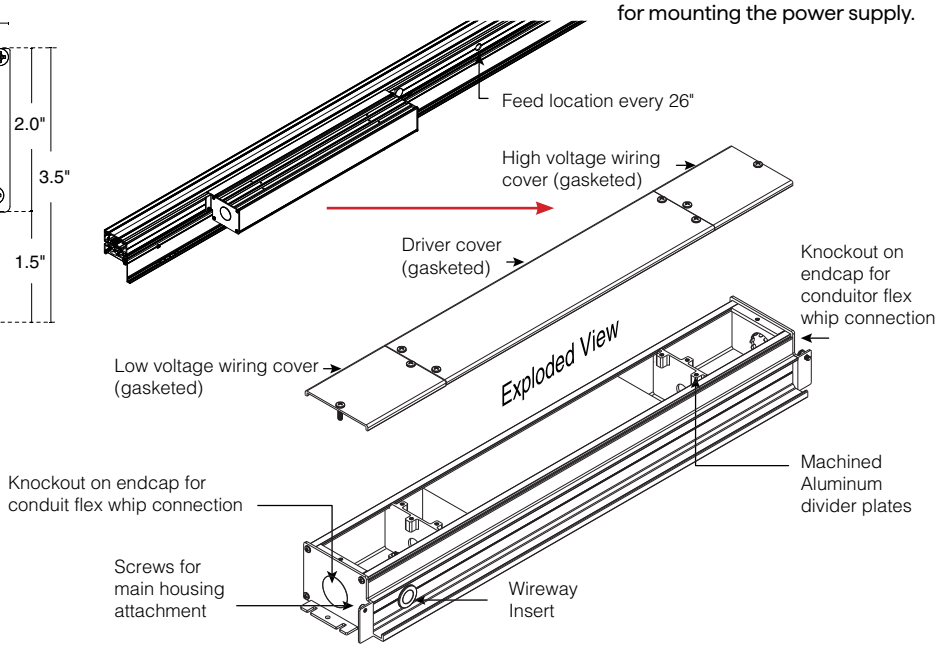

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting