
PIVOT BRACKET

Accessories - Extrusions/Fixtures

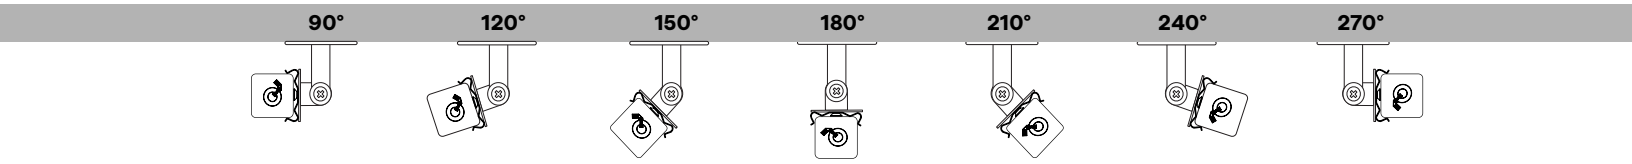

PART NUMBER BUILDER

Product	Finish	Quantity
Q-PIVOT	**SST**	Sold in pairs
	SST	
	Steel	

FEATURES

- Install Pivot Bracket to a wall surface
- Clip mounts to Pivot Bracket and adjust to desired angle
- Indoor/outdoor use
- Easy to adjust from 90° to 270°
- #4-40x3/16 Flat Head Screw for bracket included
- 2#4x3/4 Pan Head Screw for each bracket included


- Field modications are not covered under QTL warranty

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


PIVOT BRACKET

Accessories - Extrusions/Fixtures


DIMENSIONS

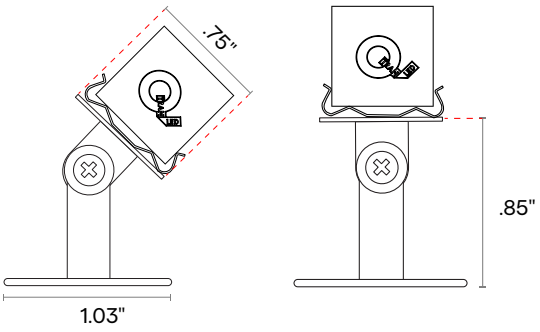

Side View

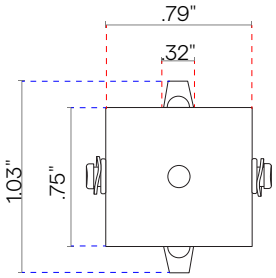


Top View

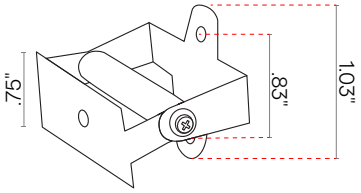


ISO View


MOUNTING EXAMPLE

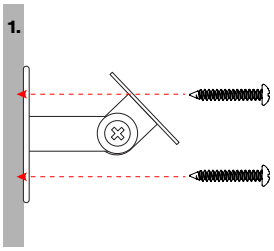


Mount PIVOT Bracket to surface.

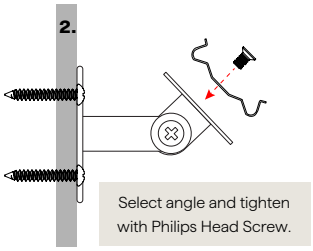

Mount your mounting clip with included screw.

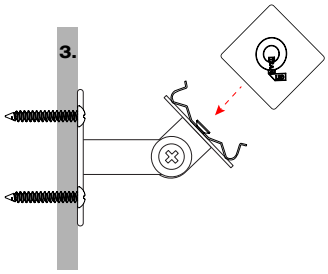


Attach Extrusion or Fixture into the clip.

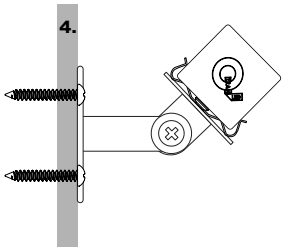


Finished product.

MOUNTING SPACING



Recommended 12" per pivot bracket for flexible fixture.

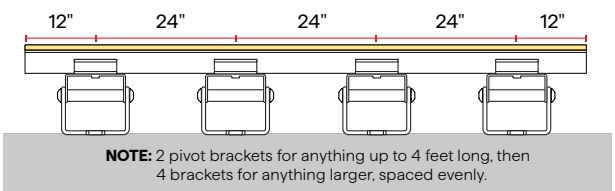

Recommended 12" from each end and 24" between brackets for rigid fixture.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - PIVOT BRACKET

Installation Instruction

ATTENTION: Please read all instructions BEFORE installation



- Product to be installed by a licensed electrician - Field modifications void warranty
- Mount to drywall with drywall anchors
- Diagrams for representation only and not to scale.

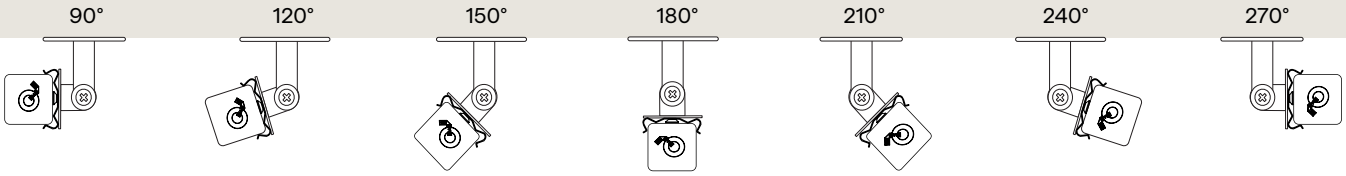

Mounting Method


- Rigid Fixture Install (page 2)
- Flexible Fixture Installation (page 3)

COMPONENTS & HARDWARE

INCLUDED HARDWARE	
FIXTURES SPECIFIC CLIP	HINGE SCREWS
 SST-09 • Provided with compatible fixture	#4x3/4 Pan Head Screw  ##4-40x3/16 Flat Head Screw 

COMPATIBLE RIGID FIXTURES
• VERS • TORQ • LALO

COMPATIBLE FLEXIBLE FIXTURES	
• BOXA	• WALA
• ZALA	• WAVE
• KURV	• LUME
• KURV-BK	• ANYBEND
• WURM	• NEXUS

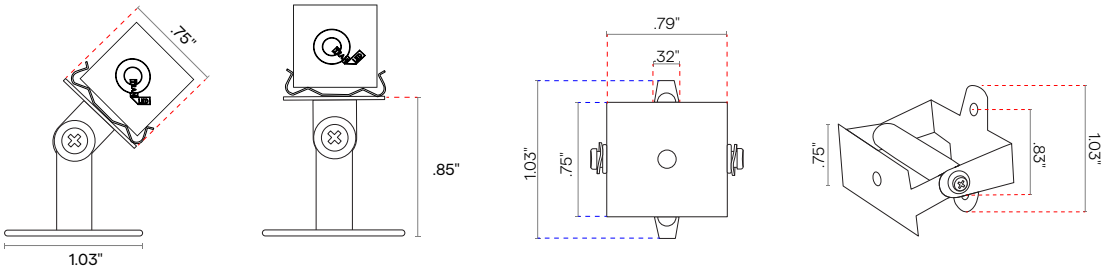

Side View | Top View | ISO View


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - PIVOT BRACKET

Installation Instruction


RIGID FIXTURE INSTALLATION: SURFACE MOUNTING METHOD

- Ceiling, wall, or floor mounting

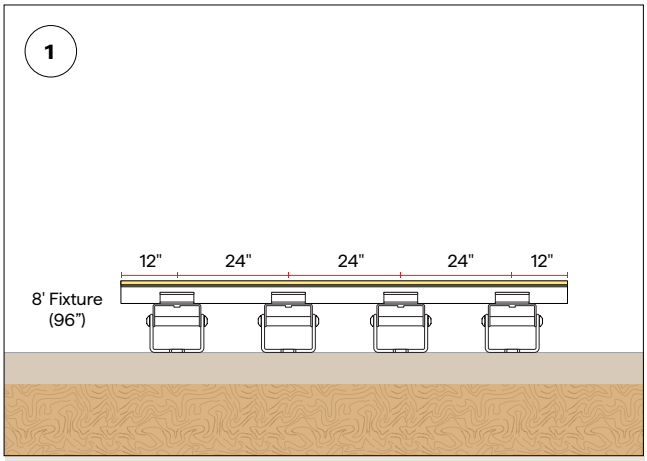


Determine the PIVOT Bracket location and positioning on desired surface. Recommended 12" from each end and 24" between brackets.

NOTE: Diagram is for representation only and not to scale.
: 2 pivot brackets for anything up to 4 feet long, then 4 brackets for anything larger, spaced evenly.

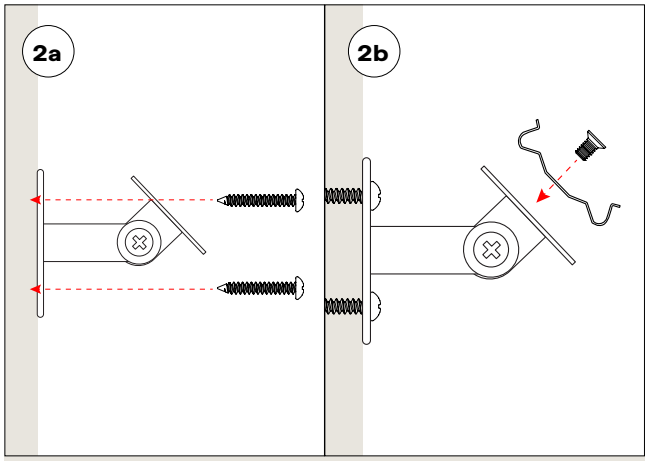


a. Use the #4 x 3/4 pan head screw to mount the bracket

b. Use the #4-40 x 3/16 flat screw to mount the fixture specific clip to the bracket

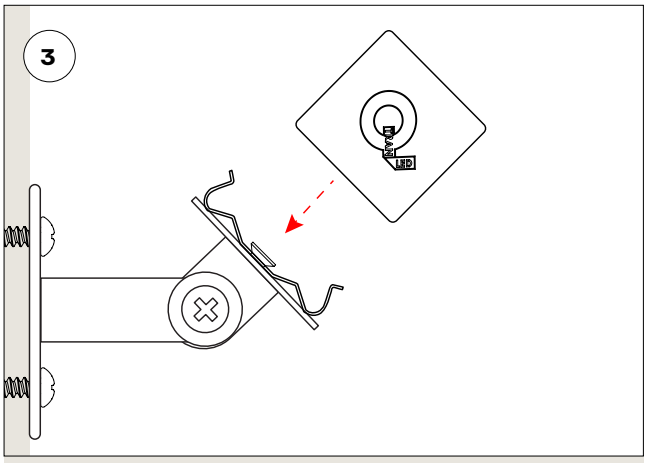

Select angle and tighten with Philips Head Screw and place the fixture or extrusion onto the clip.

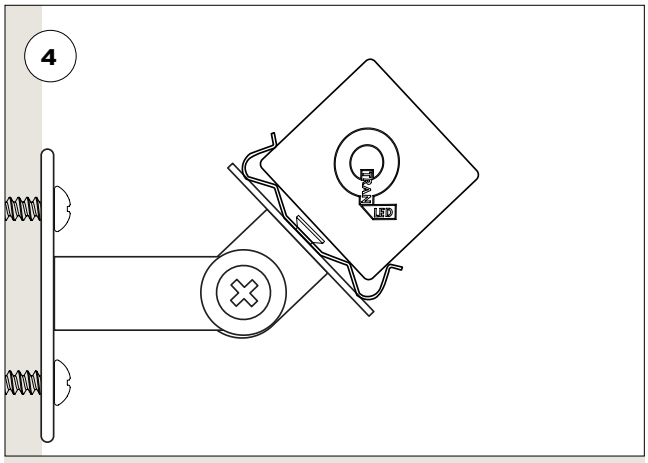

Snap fixture onto bracket. Rotate inner bracket to desired angle (90° to 270°) then tighten side screws to lock angle.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ACCESSORIES - PIVOT BRACKET

Installation Instruction


FLEXIBLE INSTALLATION: SURFACE MOUNTING METHOD

- Ceiling, wall, or floor mounting

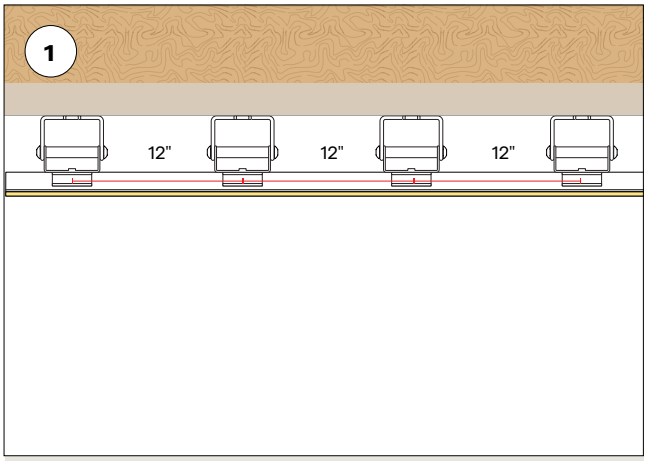


Determine the PIVOT Bracket location and positioning on desired surface. Make any necessary reference markings to indicate PIVOT Bracket placement. Recommended 12" per PIVOT Bracket.

NOTE: Diagram is for representation only and not to scale.

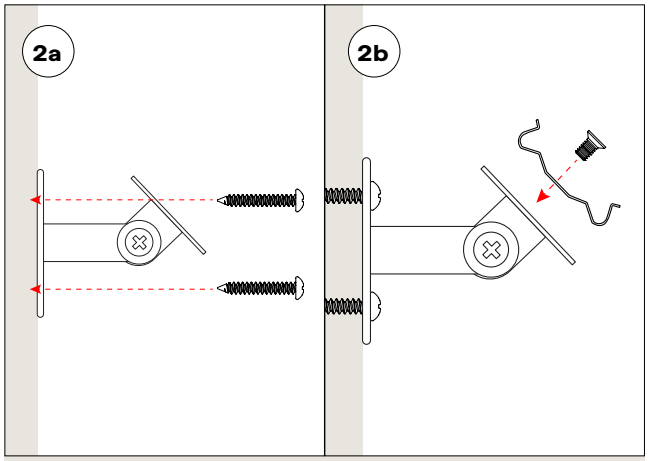


a. Use the #4 x 3/4 pan head screw to mount the bracket

b. Use the #4-40 x 3/16 flat screw to mount the fixture specific clip to the bracket

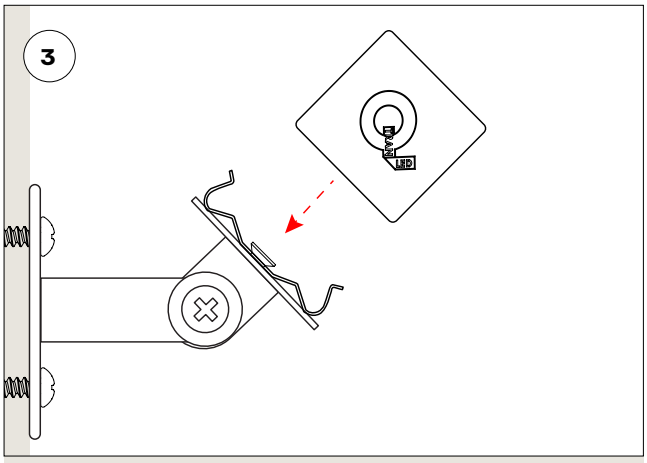

Select angle and tighten with Philips Head Screw and place the fixture or extrusion onto the clip.

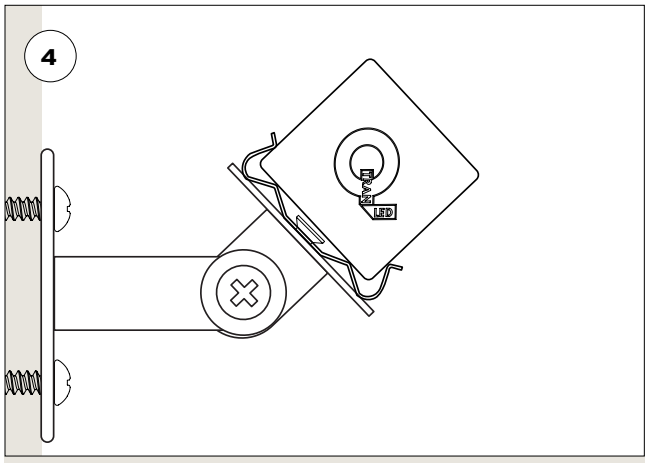

Snap fixture onto bracket. Rotate inner bracket to desired angle (90° to 270°) then tighten side screws to lock angle.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting