
QUOVA™-STANDARD

Performance Cove Fixture

10 YEAR WARRANTY | RoHS COMPLIANT | NEC 410.2 & 410.16 Closet Rated up to 4.0W/ft | c UL us LISTED

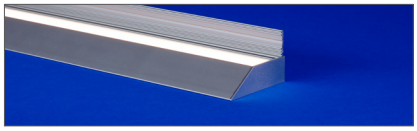

QUOVA knife edge products are designed to open and expand a space by illuminating surface planes from one edge. Our small-scale, pre-made cove products blend seamlessly into architectural details and improve the openness and brightness of a space.

- QUOVA creates a cove for a variety of QTL fixtures and light engines.
- Light engines are hidden within the small pre-made coves, eliminating glare.
- QUOVA can be installed early in the construction process, with light fixtures added after finishing work is complete. This allows for a simple and fast installation.

1 PRODUCT	2 FINISH	3 DUST COVER	4 LENGTH (IN)
QV-STND	ST		

Sample Part Number: **QV-STND-ST-FR-36"**

1 PRODUCT

QV-STND	

2 FINISH

ST	Satin

3 DUST COVER


FR	Frosted
N/A	No dust cover

4 LENGTH (IN)

1" increments from 1" - 98.43"
Tolerance +0.0"/-0.5"

COMPATIBLE FIXTURES AND PHOTOMETRIC PERFORMANCE


Order separately | Tested with SW24/5.0 DRY at 3000K

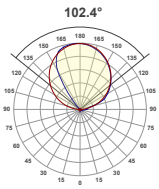

THIN




LENS	LM/FT	CCT
FR	330	3000K

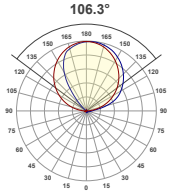

WIDE




LENS	LM/FT	CCT
FR	330	3000K

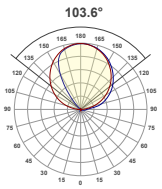

LALO



LENS	LM/FT	CCT
FR	318	3000K

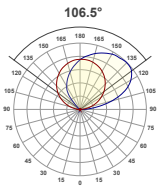


ARKA*



LENS	LM/FT	CCT
FR	305	3000K

Setback ratio 1:1

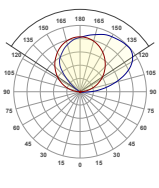


TELA



LENS	LM/FT	CCT
FR	292	3000K

Setback ratio 1:1

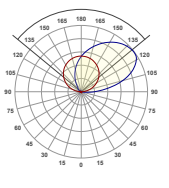


VEVE*




LENS	LM/FT	CCT
FR	232	3000K

Setback ratio 1:1

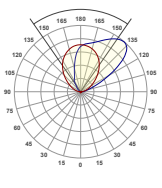


OPTI*



LENS	LM/FT	CCT
FT	311	3000K

Setback ratio 1:0.9

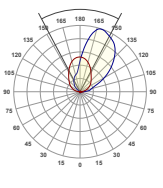

VERS



LENS	LM/FT	CCT
ASYM	295	3000K

Setback ratio 1:0.36

*Recommended fixtures

Field modifications void warranty | Data subject to change, all data has +/- 5% tolerance | Surface mount | Indoor only | Pair of end caps sold separately


© 2025 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-12-31-25


QUOVA™-STANDARD

Performance Cove Fixture


1 PRODUCT

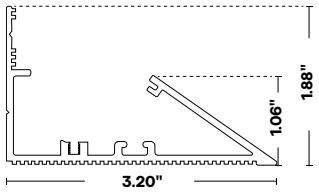

Profile

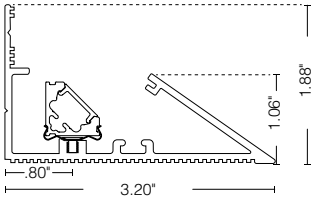

Profile with VEVE
Recommended for use with
QUOVA-STANDARD

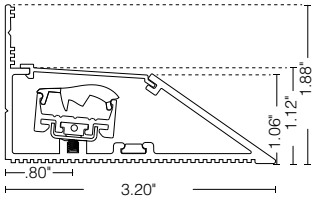


Profile with OPTI with FT optic
and FR dust cover
Recommended for use with
QUOVA-STANDARD

2 FINISH

Satin

3 DUST COVER

QV-STND-FR

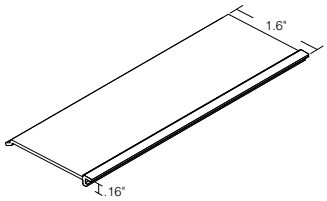


Frosted Dust Cover
(optional)

END CAPS


Pair of end caps sold separately

QV-STND-EC

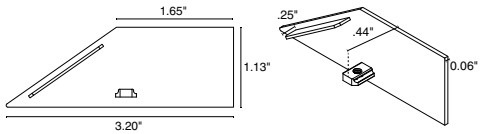

Left Endcap


QV-STND-EC

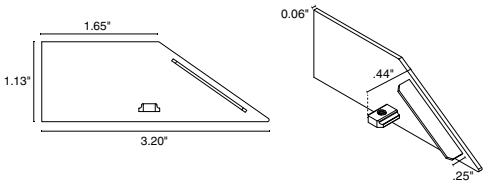

Right Endcap


JOINER/CONNECTORS

QV-INLINE-BR

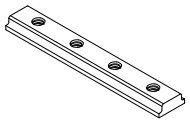

Inline Bracket
(1 per length included)


QV-CORNER-BR



Corner Bracket
(Sold separately for field cut corner)


CORNERS

QV-STND-CORNER-O

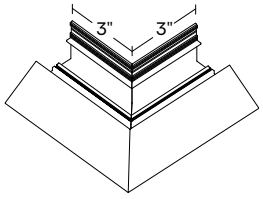

Outside Corner
Pre-mitered, assembled in the factory
(Sold separately, 1 inline bracket
per corner included)

QV-STND-CORNER-I

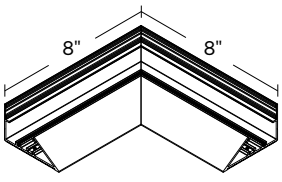

Inside Corner
Pre-mitered, assembled in the factory
(Sold separately, 1 inline bracket
per corner included)

© 2025 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


QUOVA-STANDARD

Performance Cove Fixture Installation Instructions

ATTENTION: Please read all instructions BEFORE installation

- Product to be installed by a licensed electrician - Field modifications void warranty
- Use only with Class 2 power supply unit — Warranty only valid with QTL power supplies
- Knife edge cove mount
- Input Voltage: 24VDC
- Diagrams for representation only and not to scale.

METHODS OF INSTALLATION

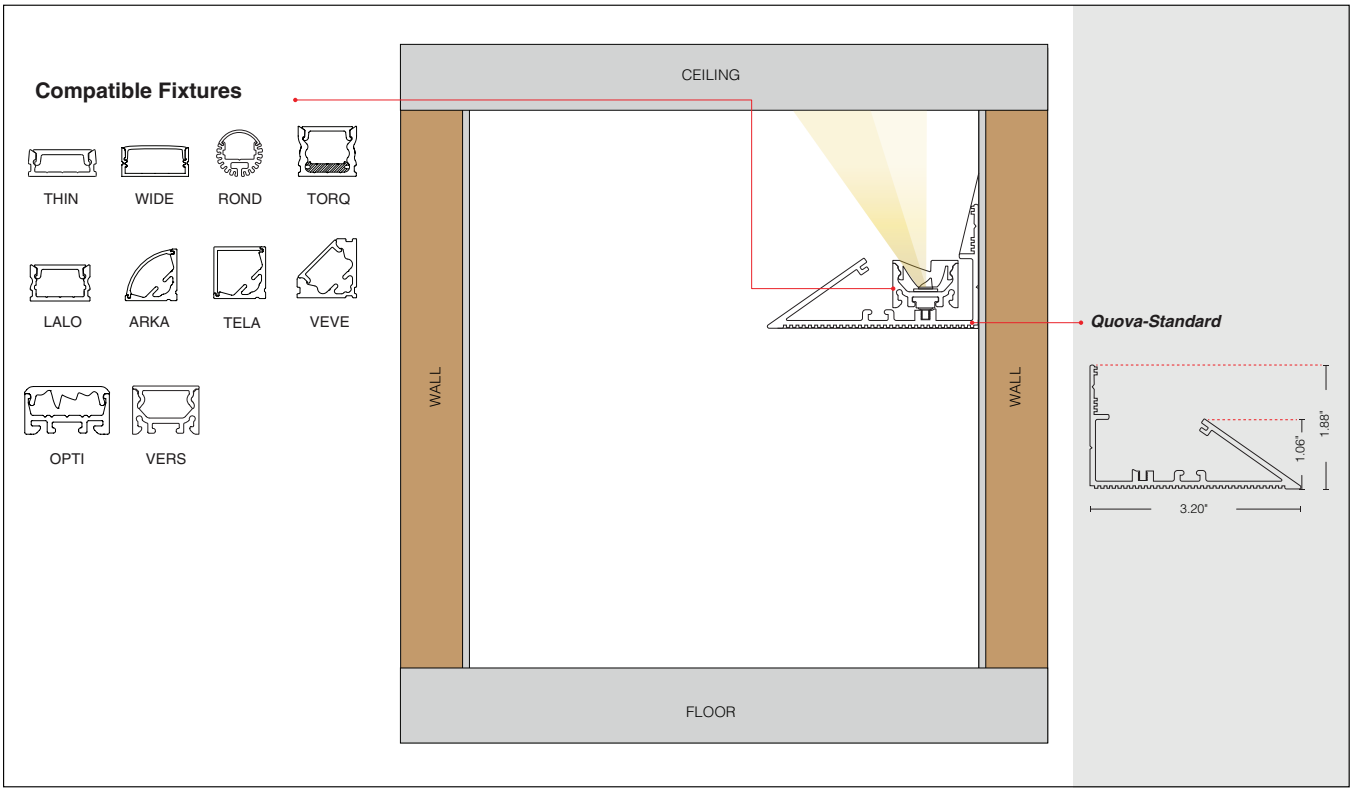


MOUNTING METHOD

- MAIN HOUSING MOUNT: page 3-4
- FIXTURES MOUNT: page 5
- DUST COVER(optional): page 6


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

QUOVA-STANDARD

Performance Cove Fixture Installation Instructions

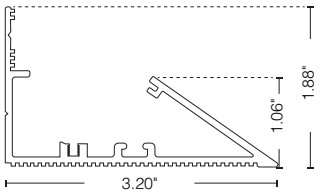


QUOVA-STANDARD

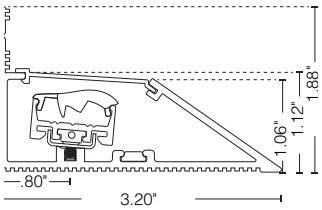


Profile with OPTI and Frosted Optional Dust Cover

COMPONENTS & HARDWARE

STAINLESS STEEL CLIP



SST-01



CC-01


Included



Stainless Steel
Phillip
#4-40 - X 3/16"


- 2 clips provided for 4' or less; 4 clips provided for greater than 4'

MAGNET CLIP



MG-01


- One magnet clip per foot



MG-02

- One magnet clip per foot


MAGNET MOUNT ACCESSORY (sold individually)

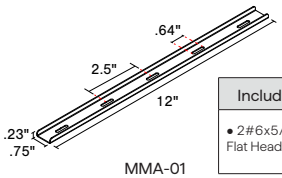

MMA-01

Included
• 2#6x5/8" Flat Head SS

- Comes in 12" pieces; use at least one clip per MMA accessory
- **C**an be cut into smaller pieces, if desired

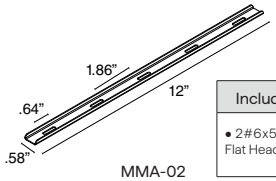


MMA-02


Included
• 2#6x5/8" Flat Head SS

- Comes in 12" pieces; use at least one clip per MMA accessory
- **C**an be cut into smaller pieces, if desired

DUST COVER

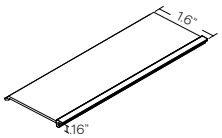

QV-STND-FR
Frosted Dust Cover (optional)

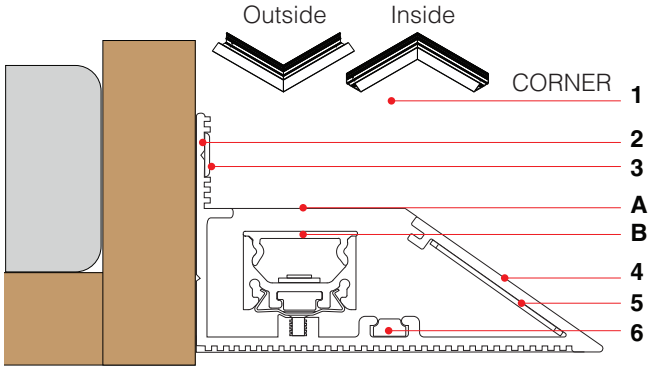

A - Fixture Housing

B - Lighting Module

1 - Inside and Outside Corners.

2 - Fixture Mounting Channel.

3 - Mounting Screws, by Others.

4 - Fixture Housing Extrusion - Anodized Aluminum - surface treated to accept paint. Provided in 8ft nominal lengths. Field cut final piece in linear run to desired length.

5 - End Cap - Used to close the end of the fixture housing extrusion. Not required when the fixture housing extrusion ends in a corner or against a wall. Available in Left and Right Configurations.


6 - Inline Bracket; Designed to align and hold sections of fixture housing together.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

QUOVA-STANDARD

Performance Cove Fixture Installation Instructions


MOUNTING METHOD: **MAIN HOUSING MOUNT**

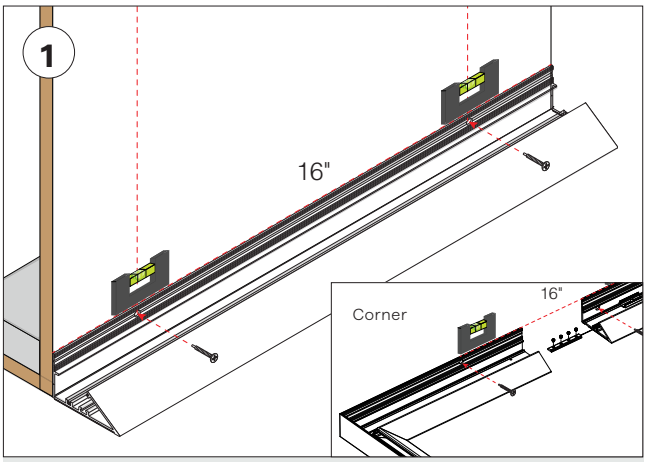

a: Pre-drill 1/4" pilot holes every 16" to align with studs start with corners and fill in with straight sections..


b: Align QUOVA to be level, and if necessary, to line up with ceiling/soffit.

c: Mount QUOVA to wall with #6 screws (by others) every 16" into studs.

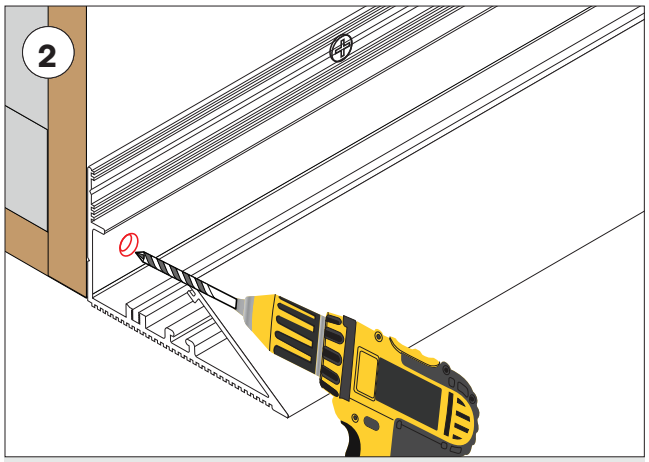

a: Determine wire feed location.

b: Drill 1/4" Hole through QUOVA and drywall.

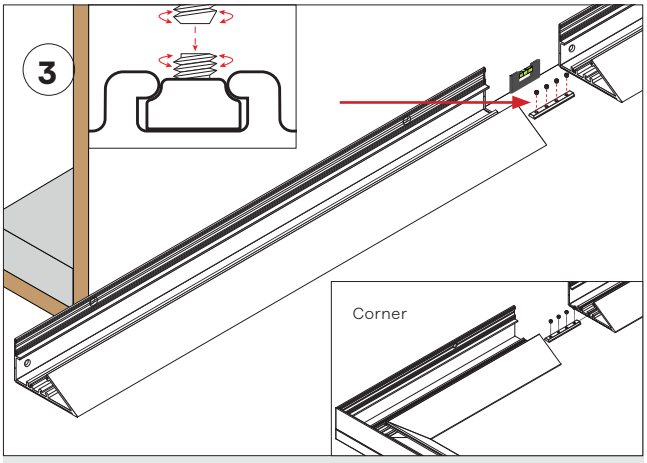


a: If multiple lengths are being used, install the inline bracket.

b: Install inline bracket in mounted piece.

c: Follow Instructions of step 1 for second length.

d: Confirm both pieces are level and aligned, mount second piece, slide inline bracket over and tighten set screws.


e: Repeat for additional lengths as needed.

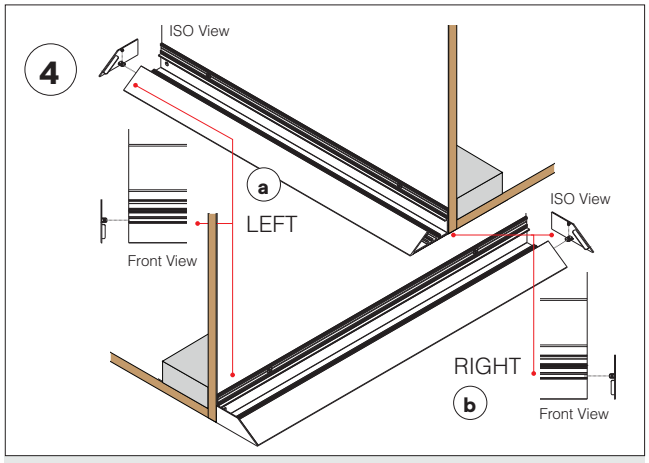


Install the endcap on the appropriate side and tighten set screw and repeat on the other side.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **MAIN HOUSING MOUNT**

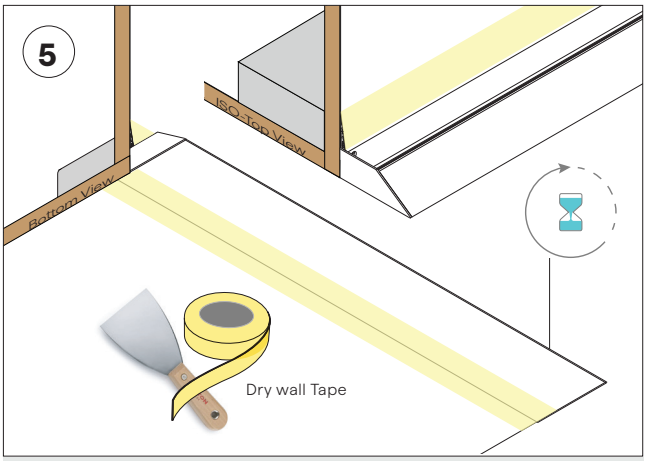

Apply drywall tape at joint of QUOVA to wall and underneath.

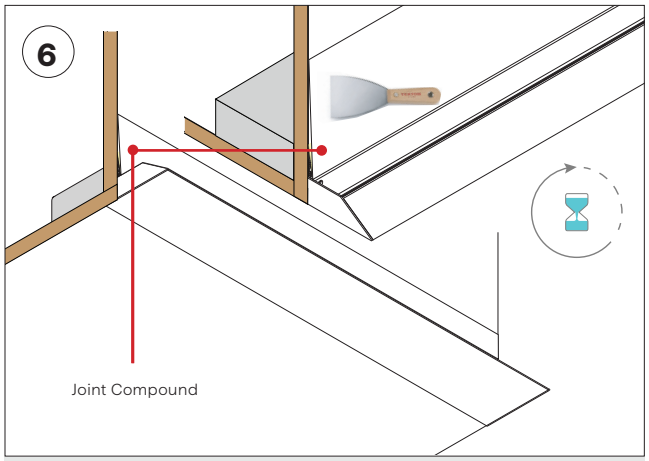

a: Apply joint compound to wall and underneath.


b: Allow to dry.

c: Sand and repeat as necessary.

d: Once completed, apply primer and paint.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **FIXTURES MOUNT**

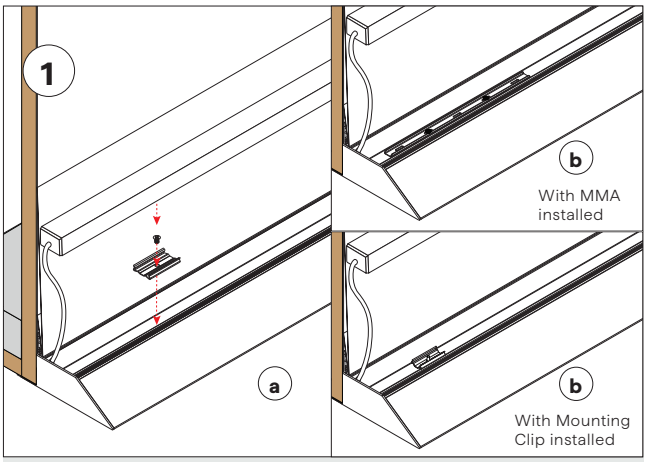

a: Install mounting clips in screw track.


a&b: Mount Lighting fixture inside of QUOVA. Run wire through pre-drilled hole back to power supply or junction box.

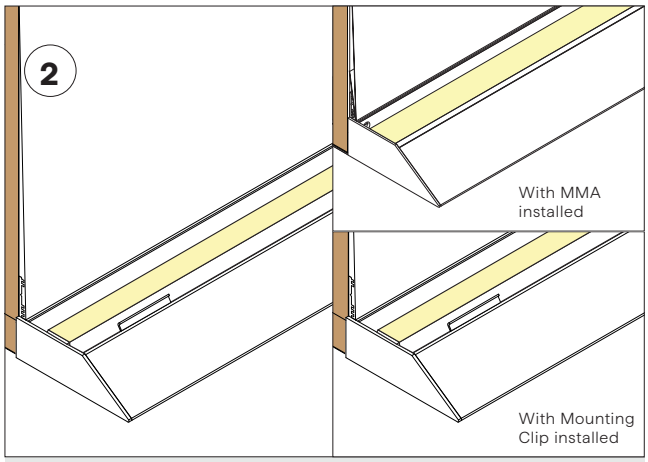

QUOVA Standard Install Assembly.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


MOUNTING METHOD: **DUST COVER OPTION**

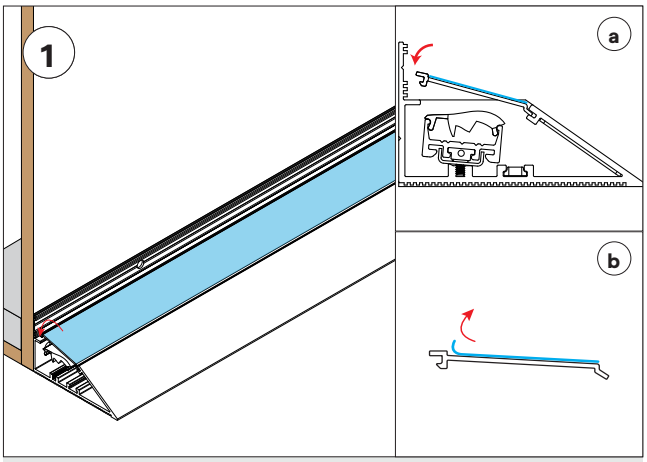

Install the dust cover.

a. Connect the dust cover to the front lip of housing and rotate it into place. Run finger along seam to lock dust cover into place.

b. Peel dust cover tape .

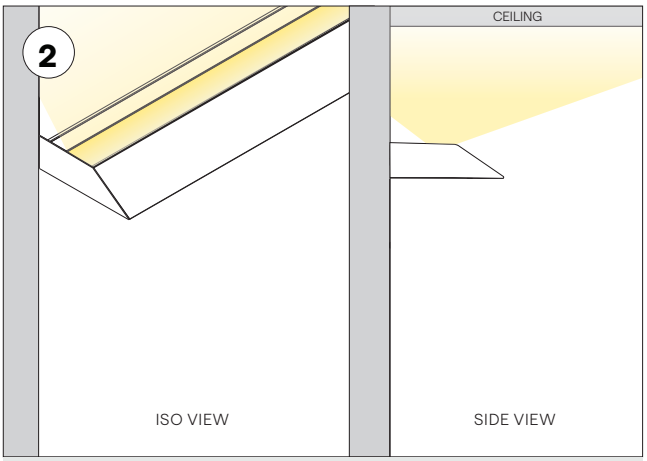

Assembled fixture.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting