FLEX-SQUARE STATIC WHITE

FLEX LIGHT



The FLEX series is ideal for spaces where the light will be in direct view. As the name implies, these LED lights are flexible and can be easily molded into different curvatures. The housing and the lens allow for a perfect monochromatic light source with no hot spots. All of QTL's FLEX series fixtures are made with high-quality SMD LED chips, are UV and flame resistant and are extremely energy-efficient.

The FLEX Square Static White is available in a variety of different color temperatures ranging from 2200K to 5700K and can be specified with Silicone construction.


Technical Information

CCT	Lumen/ft		CRI
	VB	HB	
2200K	**	**	**
2700K	152	134	98
3000K	156	137	98
3500K	159	140	97
4000K	168	148	97
5700K	**	**	**


Housing Color

White Black

Dimensions

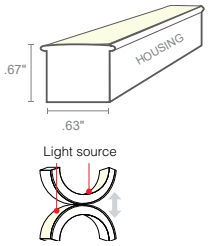

VB: Vertical Bending
Min.11.81" bending diameter



HB: Horizontal Bending
Min.11.81" bending diameter

Part Number Builder

Product	Series	Housing Color	CCT	Bend Direction	CRI	Watts/ft	Connector In	Connector In Orientation	Connector In Wire Length	Connector Out	Connector Out Orientation	Connector Out Wire Length	Illuminated Length (in)
FLS-SW	S				90	3.6							
FLS-SW FLEX Square Static White Voltage: 24 VDC	S Silicone	WH - White BK - Black	22 - 2200K 27 - 2700K 30 - 3000K 35 - 3500K 40 - 4000K 57 - 5700K	VB Vertical Bend HB Horizontal Bend	90 2200K & 5700K have a CRI of 80	3.6	IM Injected-Molded SN Snap SW Swivel	FC BC SCL SCR MT* JC* FC BC SCL SCR FC	1' 3' 10'	IM Injected-Molded SN Snap SW Swivel	FC BC SCL SCR EC MT JC FC BC SCL SCR EC MT JC FC EC	1' 3' 10' N/A	Only available in 2.19" increments **Nominal max length:** IM: 26' SN: 26' SW: 16'

- Product length = illuminated length + connector length
- For factory assembled connector information, see following pages
- For DIY connector information, see following pages
- For compatible power supplies, see following pages
- For extrusion options, see following pages (sold separately)

*Used in conjunction with Connector/Orientation Out

- 1 year warranty on DIY connectors
- 5 year warranty on silicone
- Impact rating of IK08
- Ambient Working Temperature: -40°F to 131°F
- Ambient Installation Temperature: -40°F
- Max. Mounting Surface Temperature: 185°F
- Storage Temperature: -40°F to 140°F
- UV & Flame resistant construction
- No diode imaging
- Silicone - best for outdoor applications

© 2025 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX-SQUARE STATIC WHITE

FLEX LIGHT

Injected Molded Connectors - IP68


INJECTED-MOLDED CONNECTOR - IP68 | SILICONE

IM-FC

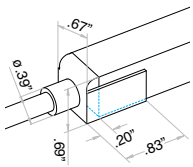


Front

IM-BC

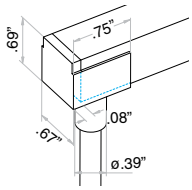


Bottom

IM-SCL

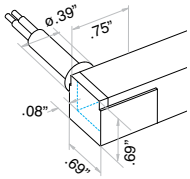


Side-Left

IM-SCR

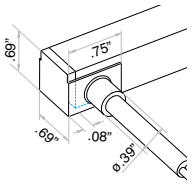


Side-Right

IM-EC

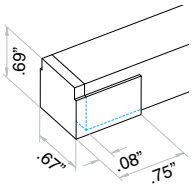


End cap

IM-MT

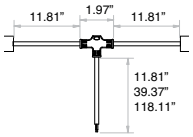

Middle T-feed

IM-JC




Jumper

DIY Connectors - IP20 & IP67

NOTE: When specifying non-injected molded connectors, connectors will be sent separately from fixture to be applied in the field.


SWIVEL CONNECTOR - IP20 | SILICONE

SW-FC

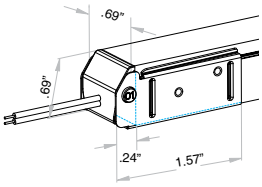

Front


SW-EC

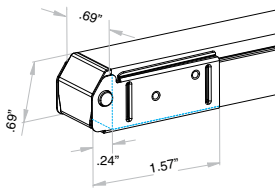

End Cap


SNAP CONNECTOR - IP67 | SILICONE

SN-FC

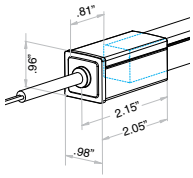


Front

SN-BC

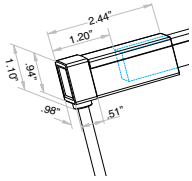


Bottom

SN-SCL




Side-Left

SN-SCR




Side-Right

SN-EC

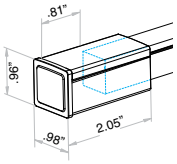


End cap

SN-MT

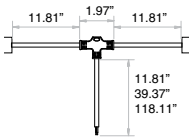

Middle T-feed

SN-JC



Jumper

Compatible Power Supplies

See website for additional power supply options


QZ



iQ-PH



QTM-DC+CAP



QTM-eLED



Q6M-DC+CAP



QOM-eLED



QOM-DC+CAP



Q-SET-eLED



© 2025 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX-SQUARE STATIC WHITE


FLEX LIGHT


Compatible Extrusions and Clips

NOTE: All extrusions are field cuttable and can be used with silicone housings.
1.5" length acts as a clip when used.

FLS-NONL: Non self-locking aluminum profile
Finish: Satin
Available lengths: 1.5", 19.75", 39.5", 79"




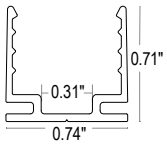


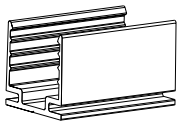





FLS-NONL-FL: Non self-locking flanged aluminum profile
Finish: Satin
Available lengths: 1.5", 19.75", 39.5", 79"




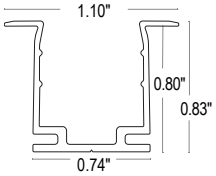


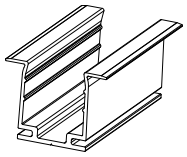


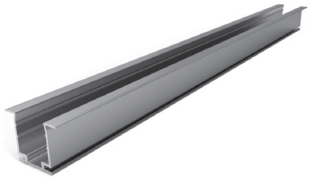

FLS-NONL-PL: Non self-locking plastic profile
Finish: Clear
Available lengths: 1.5", 19.75", 39.5", 79"




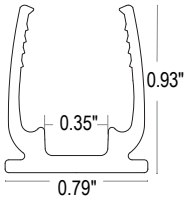


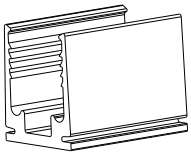




FLS-SELF-SR: Self-locking serrated aluminum profile
Finish: Satin
Available lengths: 1.5", 19.75", 39.5", 79"




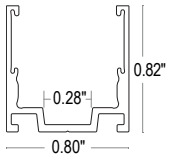


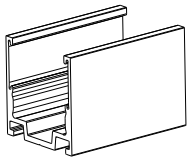




FLS-SELF-FL: Self-locking flanged serrated aluminum profile
Finish: Satin
Available lengths: 1.5", 19.75", 39.5", 79"




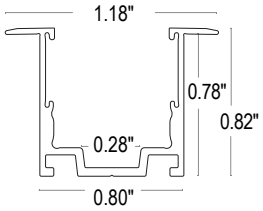


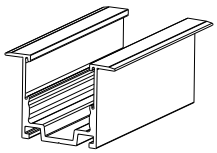





FLS-SELF-BD: Self-locking bendable serrated aluminum profile
Finish: Satin
Only available lengths: 19.75", 39.5"
Note: Only horizontal bending is available



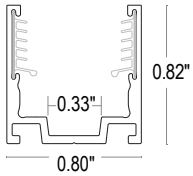

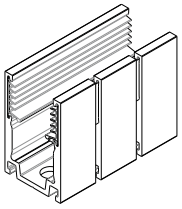

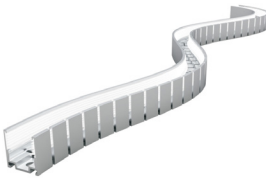

© 2025 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Cautions

1. Before making any cuts, installation, maintenance or connection, be sure the main power is disconnected.
2. Note: all connector joints must be connected correctly to achieve IP68 rating.
3. Please operate this fixture by instructions, and confirm the work voltage, it must be matched with product requirements.
4. Please confirm the polarity of connector before insertion front connection cable.
5. Connect and cut this product correctly. Any wrong operation will damage this product.
6. Use qualified DC power supply.
7. Please correctly use and bend this fixture.
8. Do not operate light when ambient temperature exceeds the range of specified temperature.
9. Do not energize the light over 30 minutes in coil packaging.
10. Do not mix the four colors (R,G,B,W) in full load simultaneously.

Bending

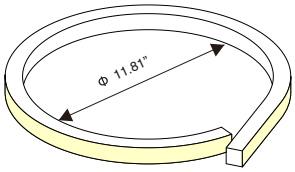


Keep the min. bend diameter 11.81"

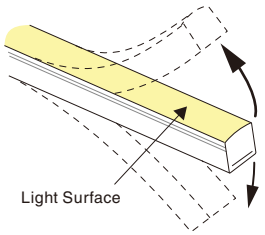

(VB)Vertical Bending

Wrong Approaches

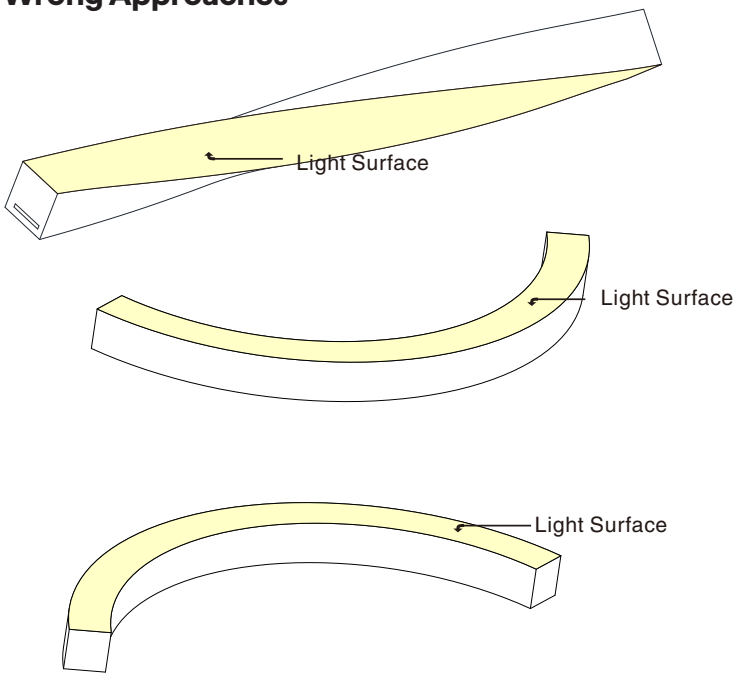

WARNING: The above wrong approaches will damage the light.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Instructions for Light Cutting

1. Place the light horizontally when cutting it.
2. Use only factory-recommended cutter.
3. Cut the light according to the following instructions. Incorrect operation will damage the light.

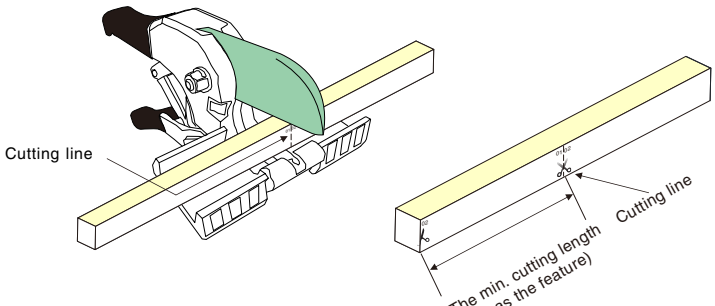


Cut the light only at printed cutting line with light surface face upwards

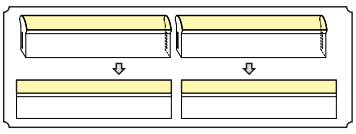


The cutting surface must be flush and smooth.


Cautions

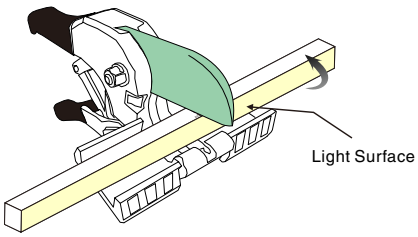

Lighting surface must be upwards

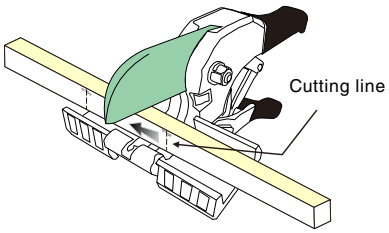

Cutting can only be made at the printed cutting line

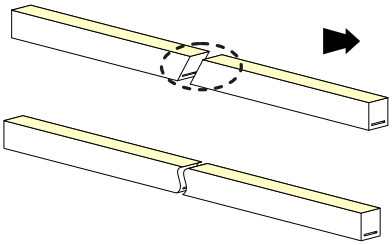

Don't cut slantingly

The cutting surface must be flush and smooth.

WARNING: The above mishandling will damage the light.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-02-27-24

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Anti-Wicking Ferrule

The anti-wicking ferrule is located at 4.53" (±0.39" tolerance) from the connector on the cable.

For protection against water ingress from inside of cable wire and hence damage the light. The removal of the anti-wicking ferrule will void the warranty.

NOTE: Unless otherwise stated, the tolerance is ±0.02".

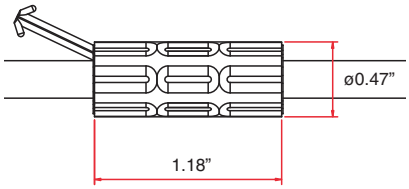


Clasp Front Connector


Please ignore these steps if the front connector has been assembled before delivery.
NOTE:
1. Never wet the assembly units or assemble with wet hands.
2. Please use the tools correctly.
3. Please pay attention to personal security when using tools.

Components


NOTE:
The light ends are marked with either an 01 or an 02. Always make sure to use an identically labeled connector for the appropriate direction.

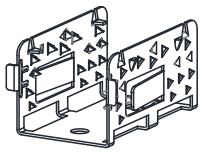

Anti-skidding Clip (1pc)

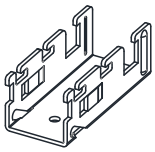


U Steel Plate (1pc)

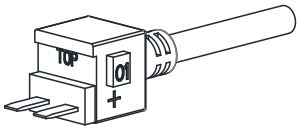


Feed Connector (1pc)
[Contain Silicone Gasket (1pc)]


Tools



Inducer



Gripper

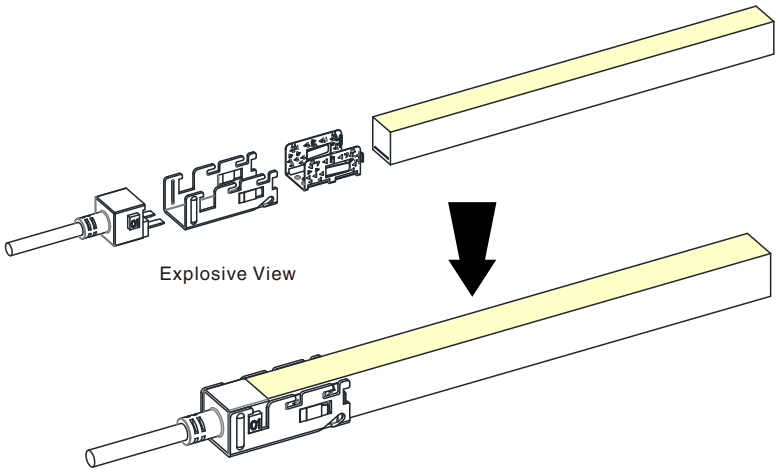

Explosive View

Finished Assembly View


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE

Installation Instructions


Clasp Front Connector

1. Inducing a Cavity for Feed Connector

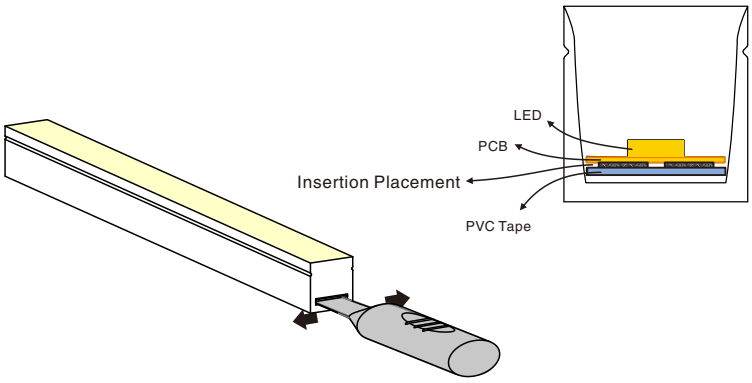


NEVER insert into the front side (LED side) of the PCB

Insert the inducer to the backside of PCB around 0.39”-0.47”, move the inducer up and down 3-5 times gently to create a small cavity.

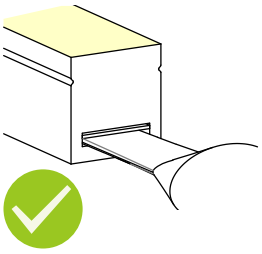


Insert the inducer into the backside of PCB

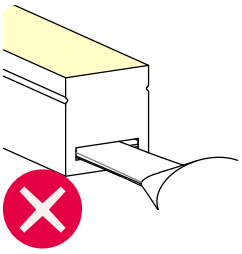

It will damage the light if inserted into front side of PCB


2. Insert the Feed Connector

Insert the feed connector pins into the cavity that you created with the inducer (backside of PCB)

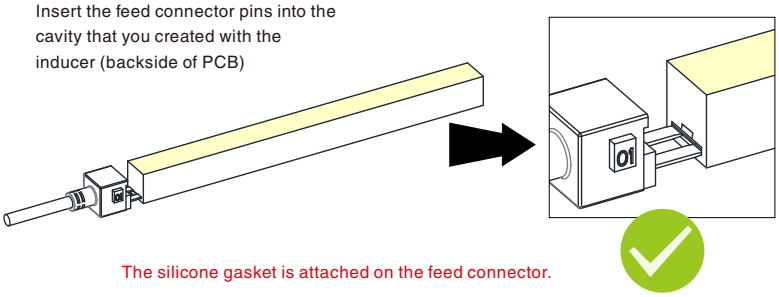


The silicone gasket is attached on the feed connector.


The following operations are prohibited:

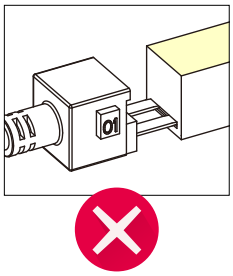

Insert into the front side of the PCB

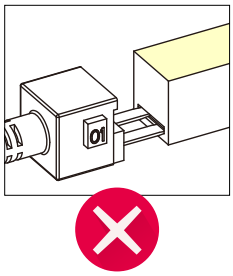

Insert crosswise into the PCB

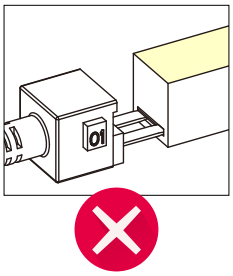

Insert crosswise into the PCB


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Clasp Front Connector

3. Treatment of Anti-skidding clip

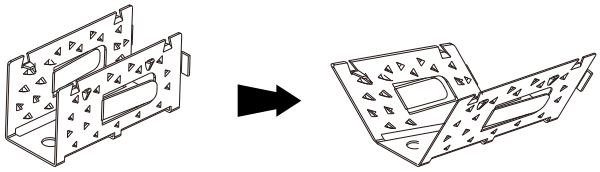

Unfold the anti-skidding clip about 20 degrees on both sides.

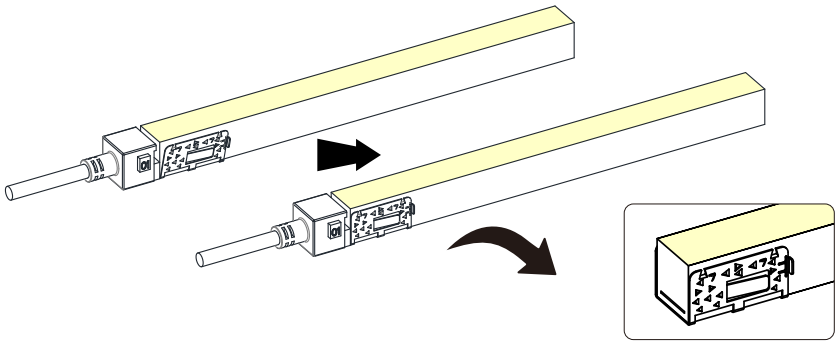


Place the anti-skidding clip onto the end of the light.
Notice its installation direction.

Fit the anti-skidding clip to the end of the light tightly and align with the light end edge.

4. Installation for U Steel Plate

Push the bulging points on the anti-skidding clip into the slots on the U steel plate in the direction noted in following pictures.

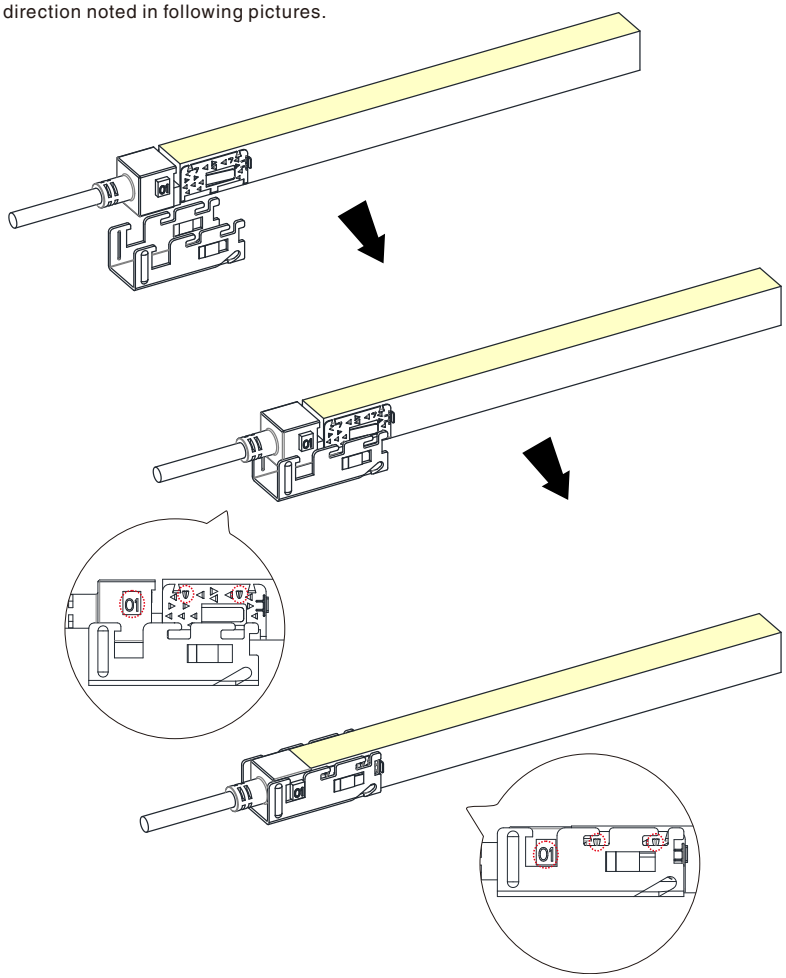


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions


Clasp Front Connector

5. Push the anti-skidding clip to the end until the two hook splinters on each side pop out to lock the U steel plate. Use the gripper to help tighten the piece.

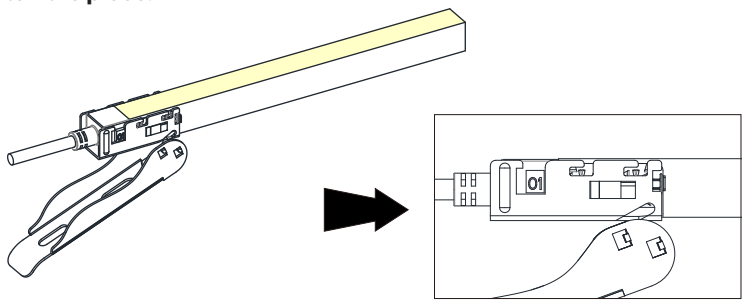


Use the second tap to insert into the slot

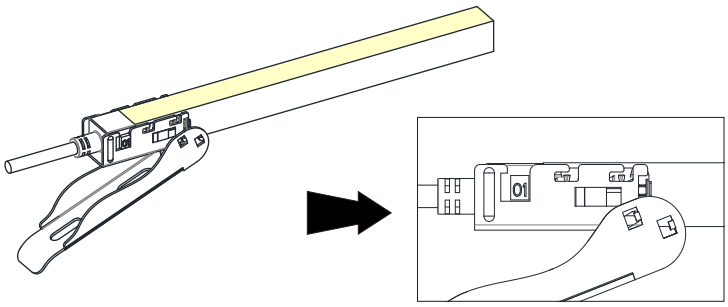

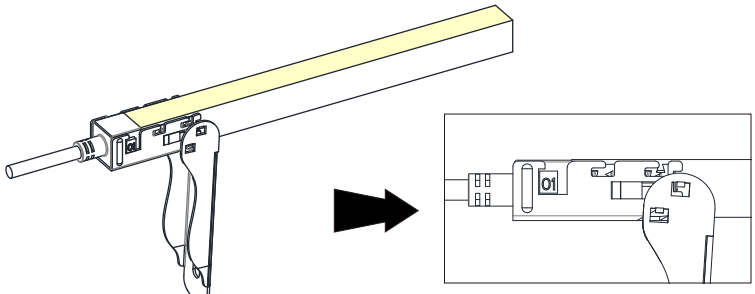

Pull the Gripper. It will push the U Steel Plate forward until its 2 hook splinters on either side pop out.

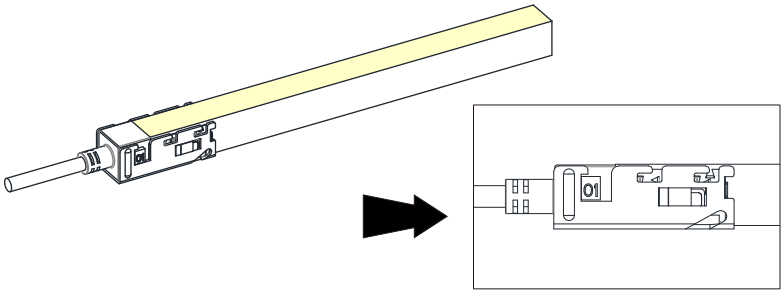

Please energize the light to check its functionality and do waterproof reliablity testing after connector assembly.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Clasp End Cap


Please ignore these steps if the front connector has been assembled before delivery.
NOTE:
1. Never wet the assembly units or assemble with wet hands.
2. Please use the tools correctly.
3. Please pay attention to personal security when using tools.

Components

NOTE:
The light ends are marked with either an 01 or an 02. Always make sure to use an identically labeled connector for the appropriate direction.

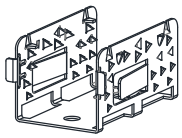


Anti-skidding Clip (1pc)

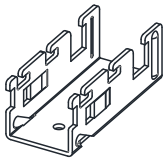

U Steel Plate (1pc)




Silicone Gasket(1pc)

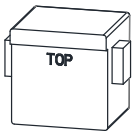


Tail Plug (1pc)


Tools

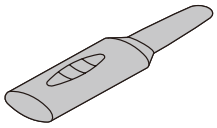

Inducer

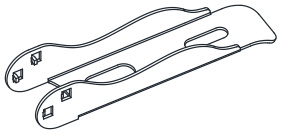

Gripper

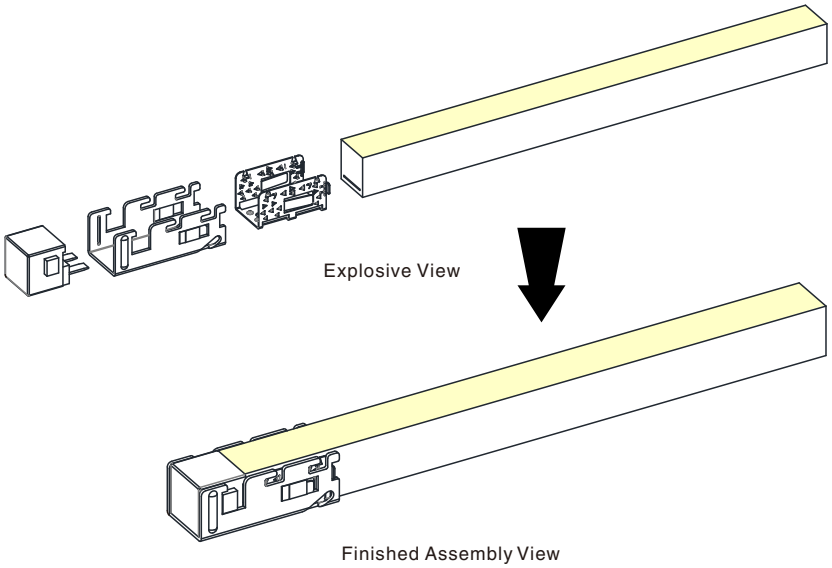

Explosive View

Finished Assembly View


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Clasp End Cap


1. Place the tail plug into the U Steel Plate

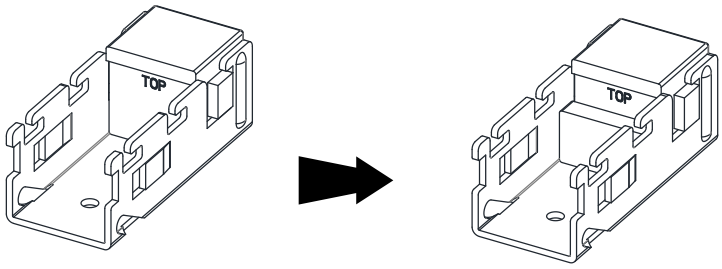


2. Treatment of Anti-Skidding Clip

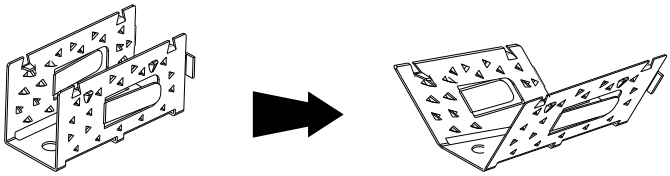

Unfold the anti-skidding clip about 20 degrees on both sides.

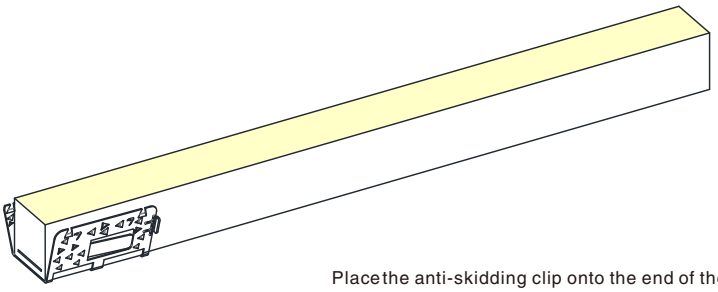

Placethe anti-skidding clip onto the end of the light.
Notice its installation direction.

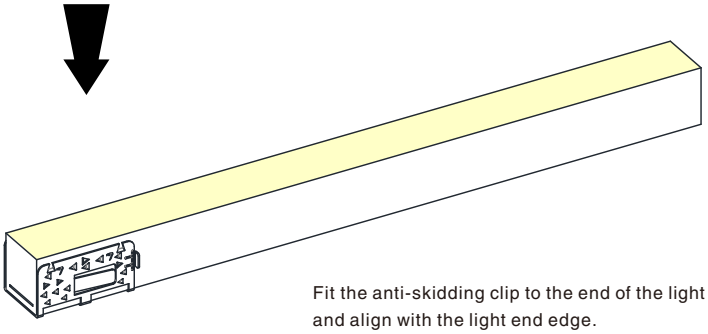

Fit the anti-skidding clip to the end of the light tightly
and align with the light end edge.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Clasp End Cap


3. Installation of Tall Plug

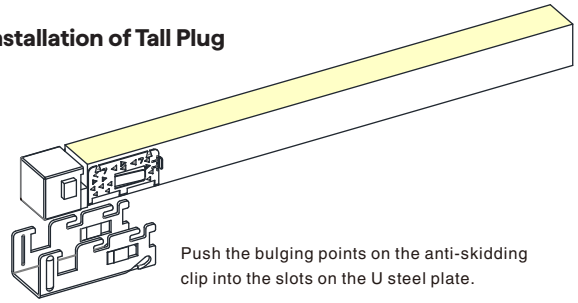


Push the bulging points on the anti-skidding clip into the slots on the U steel plate.

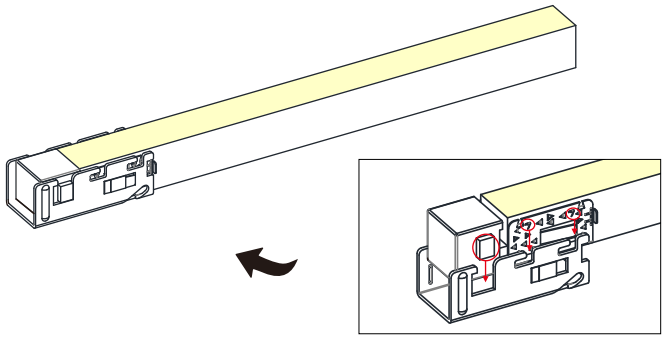


4. Push the anti-skidding clip to the end until the two hook splinters on each side pop out to lock the U steel plate. Use the gripper to help tighten the piece.

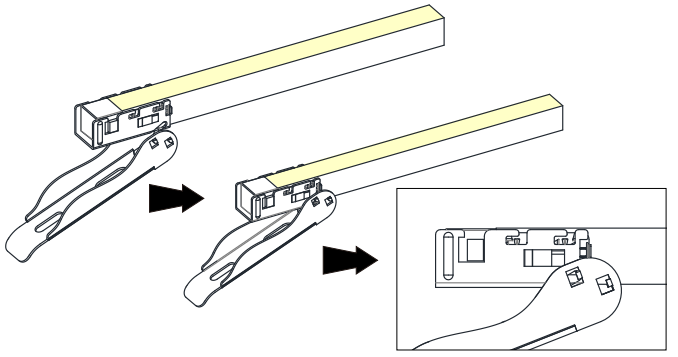

Use the second tap to insert into the slot

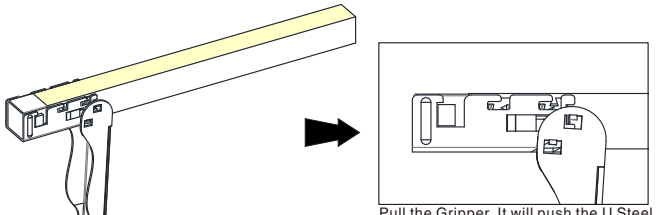

Pull the Gripper. It will push the U Steel Plate forward until its 2 hook splinters on either side pop out.

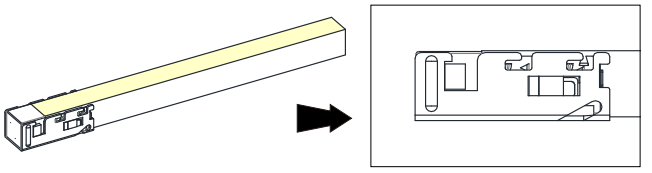

Please energize the light to check its functionality and do waterproof reliablity testing after connector assembly.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Snap Front Connector


Please ignore these steps if the front connector has been assembled before delivery.
NOTE:
1. Never wet the assembly units or assemble with wet hands.
2. Please use the tools correctly.
3. Please pay attention to personal security when using tools.

Components


NOTE:
The light ends are marked with either an 01 or an 02. Always make sure to use an identically labeled connector for the appropriate direction.

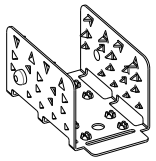


Anti-skidding Clip (1pcs)

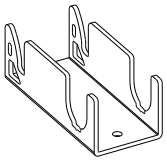

U Steel Plate (1pc)

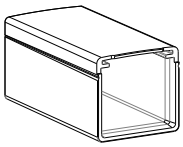


PC Cover (1pc)

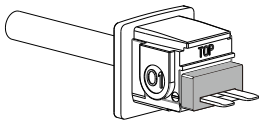


Feed Connector (1pc)


Tools

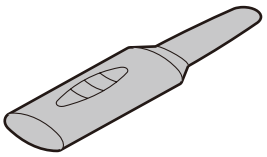

Inducer

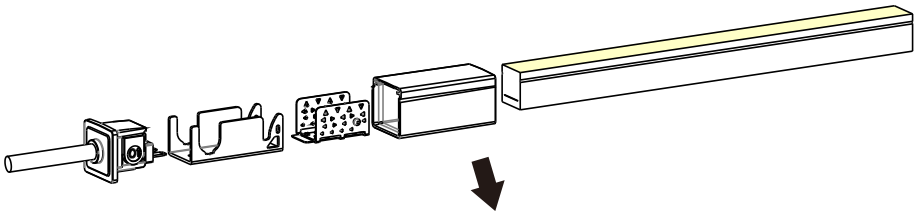

Explosive View

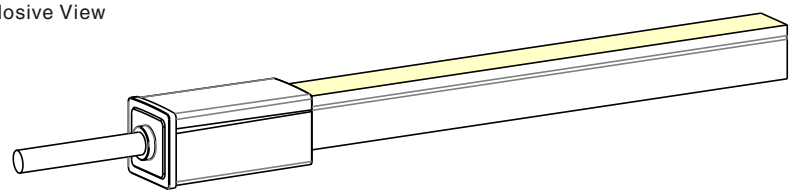

Finished Assembly View


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Snap Front Connector


1. Placing PC Cover

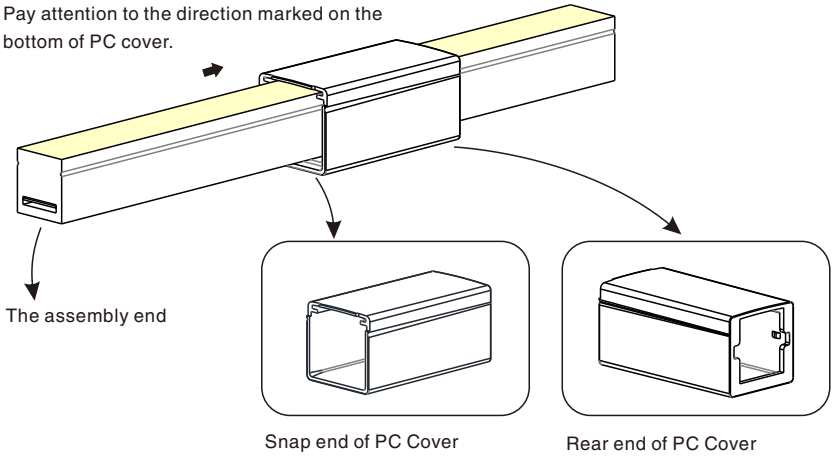


2. Inducing a Cavity for Feed Connector

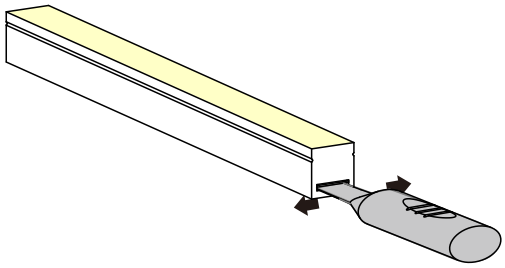


NEVER insert into the front side (LED side) of the PCB

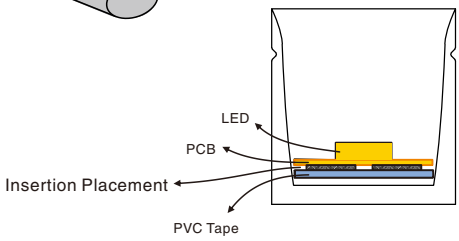

Insert the inducer to the backside of PCB around 0.39"-0.47", move the inducer right and left 3-5 times gently to create a small cavity.

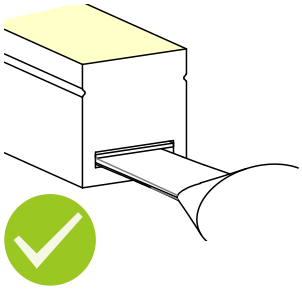

Insert the inducer into the backside of PCB

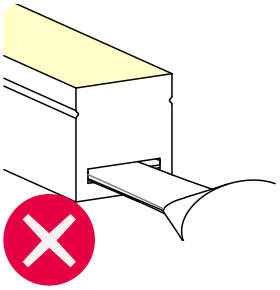

It will damage the light if inserted into front side of PCB


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Snap Front Connector

3. Inserting the Feed Connector

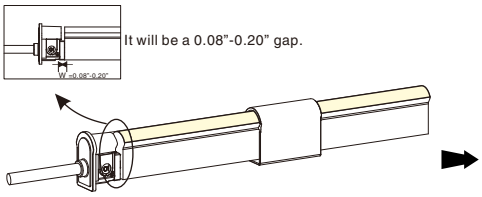


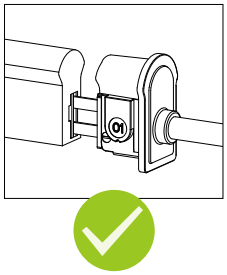


The following operations are prohibited:

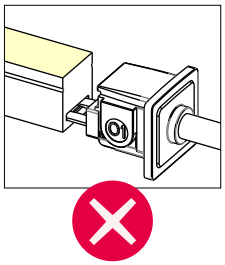

Insert into the front side of the PCB

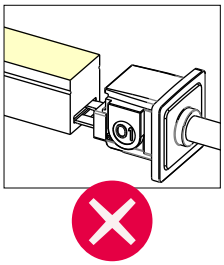


Insert crosswise into the PCB

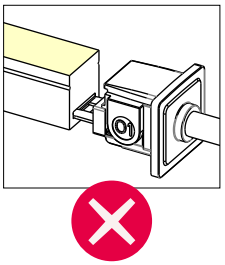


Insert crosswise into the PCB

4. Treatment of Anti-Skidding Clip

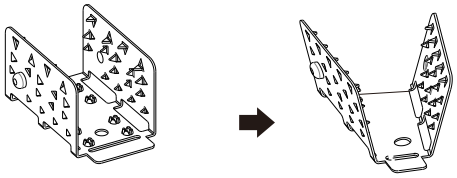


Unfold the anti-skidding clip about 20 degrees on both sides.

5. Installation of Anti-Skidding Clip

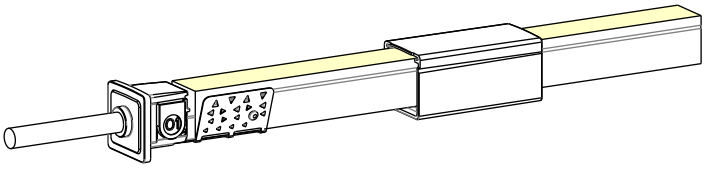

Place the anti-skidding clip onto the assembly end of the light.
Pay attention to its direction

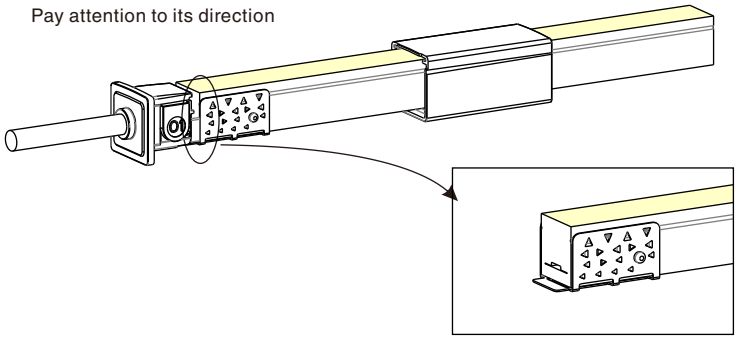

Fit the anti-skidding clip to the end of so that it wraps tightly and its brim is aligned with the cut edge on both sides.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Snap Front Connector


6. Installation of U Steel Plate and PC Cover

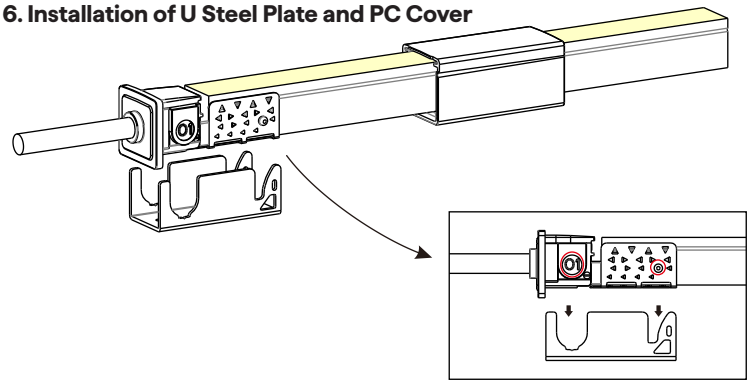

Align the feed connector and anti-skidding clip with the U steel plate.

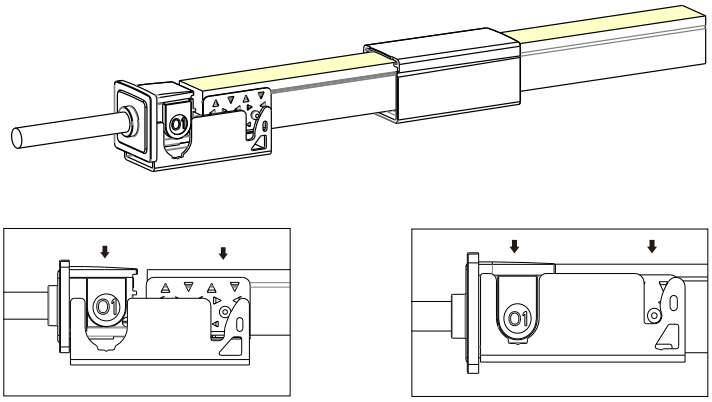

Press the feed connector and light downwards at the same time until bottom.

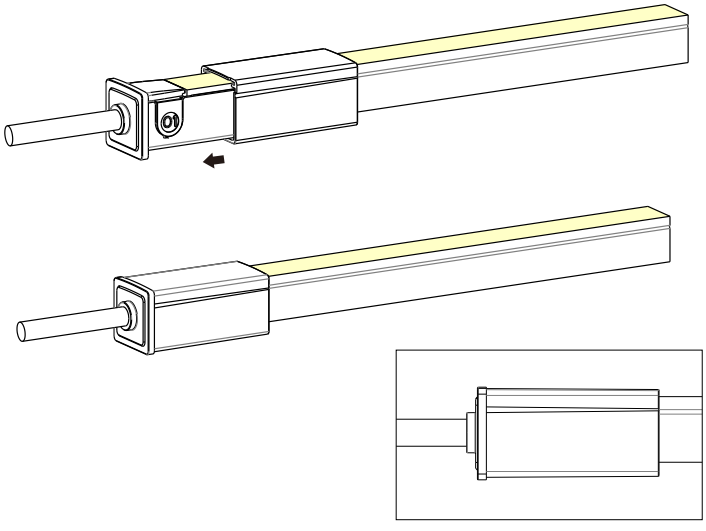

Slide back the PC cover until it snaps in the feed connector.

Please energize the light to check its functionality and do waterproof reliablity testing after connector assembly.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Snap End Cap

Please ignore these steps if the front connector has been assembled before delivery.


Components

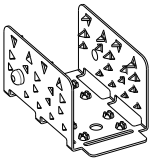


Anti-skidding Clip (1pc)

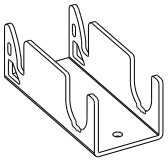

U Steel Plate (1pc)

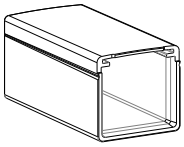


PC Cover (1pc)

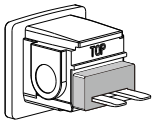


Tail Plug (1pc)
[Contain Silicone Gasket (1pc)]


Tools

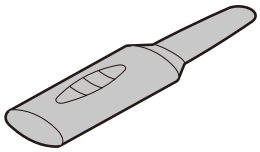

Inducer

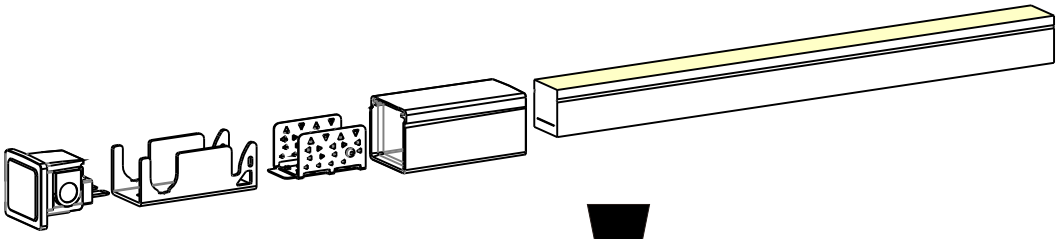

Explosive View

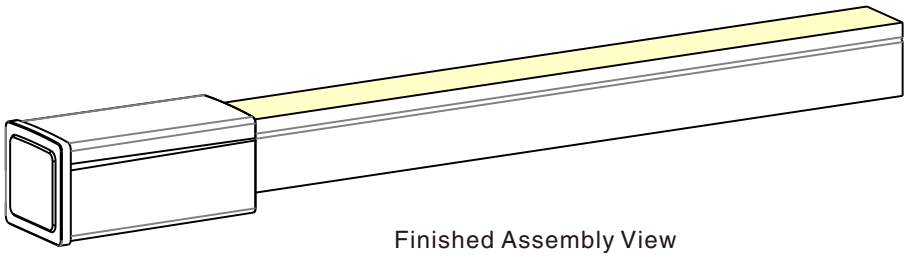

Finished Assembly View

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Snap End Cap

1. Placing PC Cover


Pay attention to the direction marked on the bottom of PC cover.

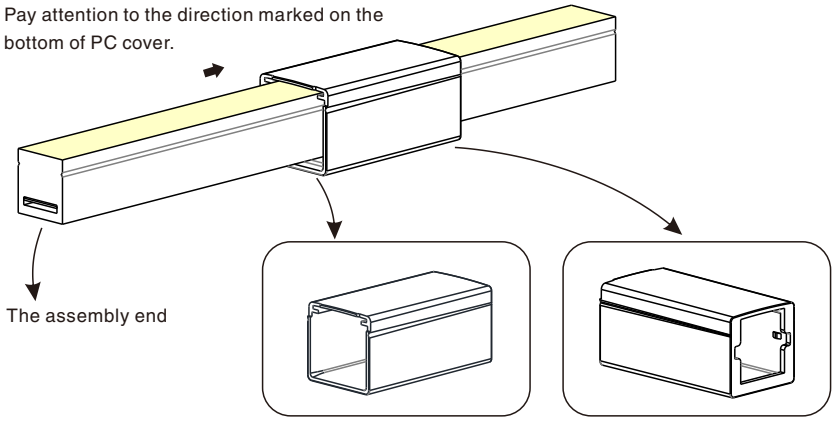


2. Inducing a Cavity for Tail Plug

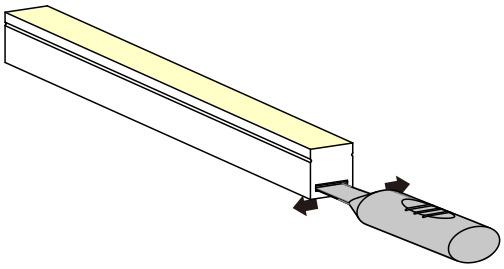


NEVER insert into the front side (LED side) of the PCB

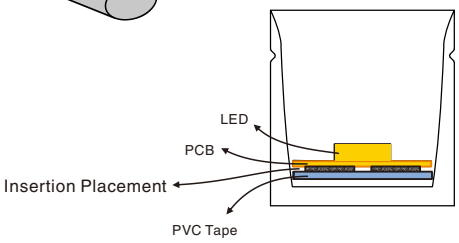

Insert the inducer to the backside of PCB around 0.39”-0.47”, move the inducer right and left 3-5 times gently to create a small cavity.

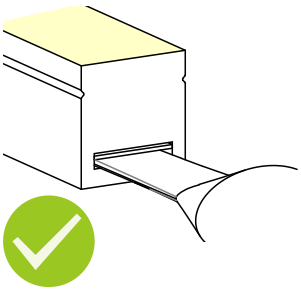

Insert the inducer into the backside of PCB

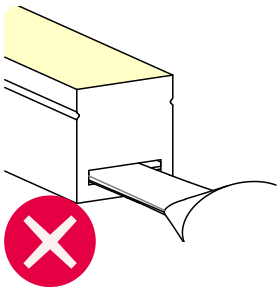

It will damage the light if inserted into front side of PCB


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Snap End Cap

3. Inserting the Feed Connector

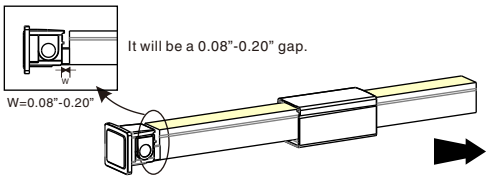


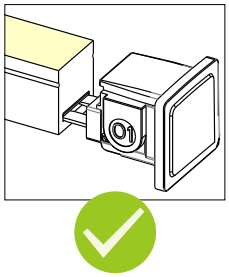


The following operations are prohibited:

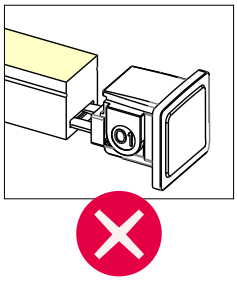

Insert into the front side of the PCB

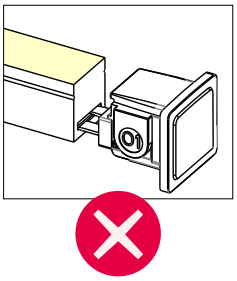


Insert crosswise into the PCB

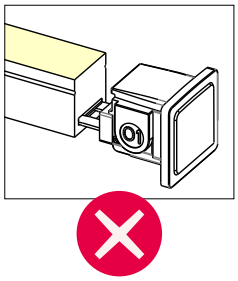


Insert crosswise into the PCB

4. Treatment of Anti-Skidding Clip

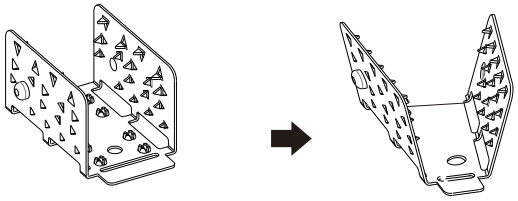


Unfold the anti-skidding clip about 20 degrees on both sides.

5. Installation of Anti-Skidding Clip

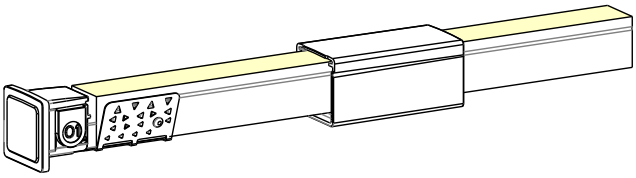

Place the anti-skidding clip onto the assembly end of the light.
Pay attention to its direction

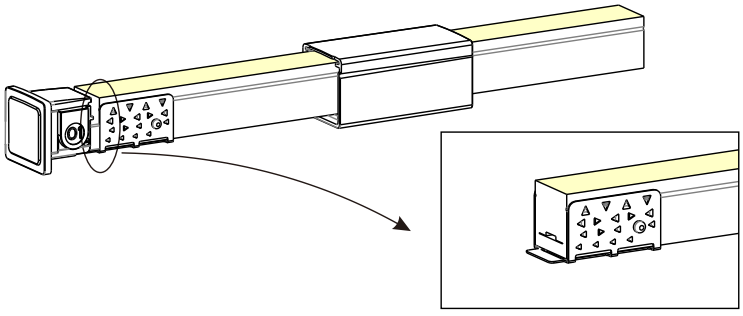

Fit the anti-skidding clip to the end of so that it wraps tightly and its brim is aligned with the cut edge on both sides.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Snap End Cap


6. Installation of U Steel Plate and PC Cover

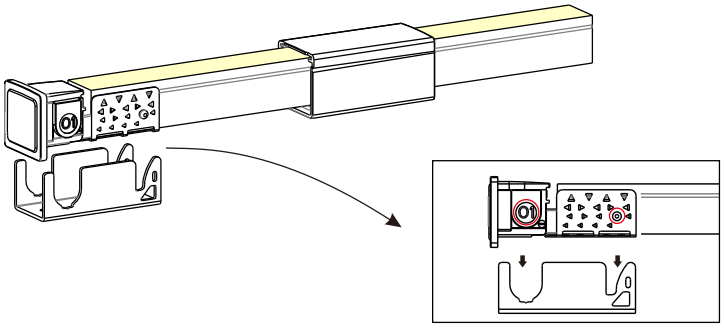

Align the tail plug and anti-skidding clip with the U steel plate.

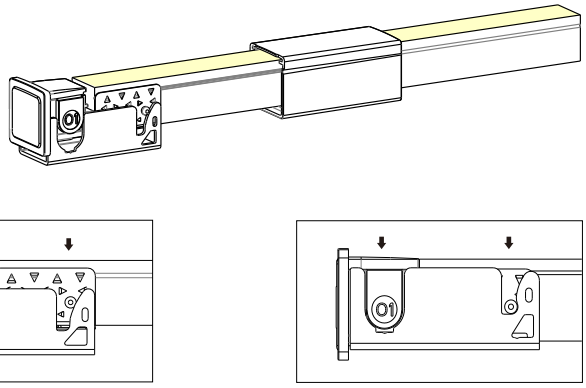

Press the tail plug and light downwards at the same time until bottom.

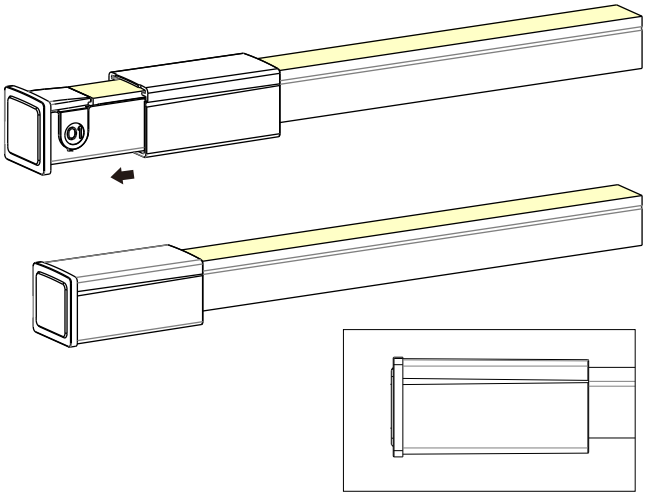

Slide back the PC cover until it snaps in the tail plug.

Please energize the light to check its functionality and do waterproof reliablity testing after connector assembly.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions

Light Wiring - Static White, Static Color

NOTE:

1. This fixture must be used in conjunction with DC24V power supply.
2. Always observe proper polarity.
3. Ensure to add 20% buffer when sizing power supply.
4. Ensure that the power cable carried current is no greater than 80% of its capacity.
5. To minimize the voltage drop and keep light consistency, position power supply nearest to the power feed end of the fixture and keep the power line as short as possible.

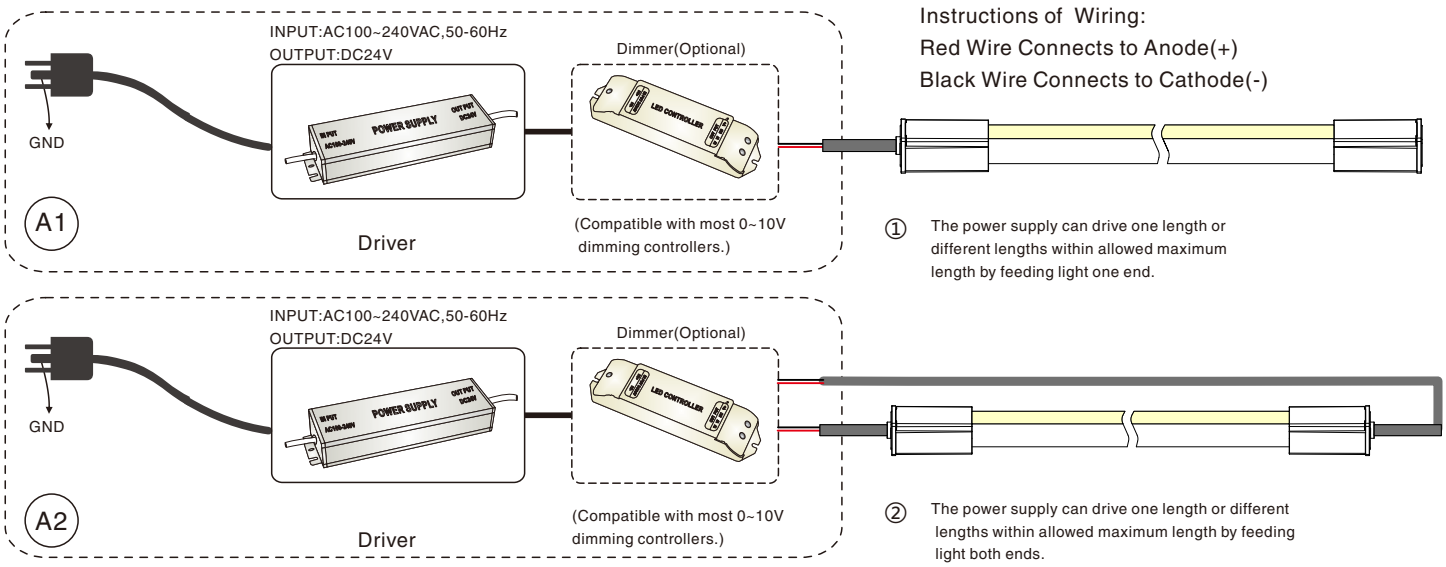

Max.Continuous Length	Single End Feed Red/Amber	Single End Feed Green/Blue/White	Double Ends Feed Red/Amber	Double Ends Feed Green/Blue/White
	49.21’	32.81’	98.43’	65.62’

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions

Light Wiring - RGB

NOTE:
1. This fixture must be used in conjunction with DC24V power supply.
2. Always observe proper polarity.
3. Ensure to add 20% buffer when sizing power supply.
4. Ensure that the power cable carried current is no greater than 80% of its capacity.
5. To minimize the voltage drop and keep light consistency, position power supply nearest to the power feed end of the fixture and keep the power line as short as possible.
6. Compatible with RGB controller and DMX control.

Instructions of RGB Light Wiring:
Yellow Wire Connects to Anode(+).
Red Wire Connects to the“R”Terminal, Cathode(-).
Green Wire Connects to the "G”Terminal, Cathode(-).
Blue Wire Connects to the“B”Terminal, Cathode(-).

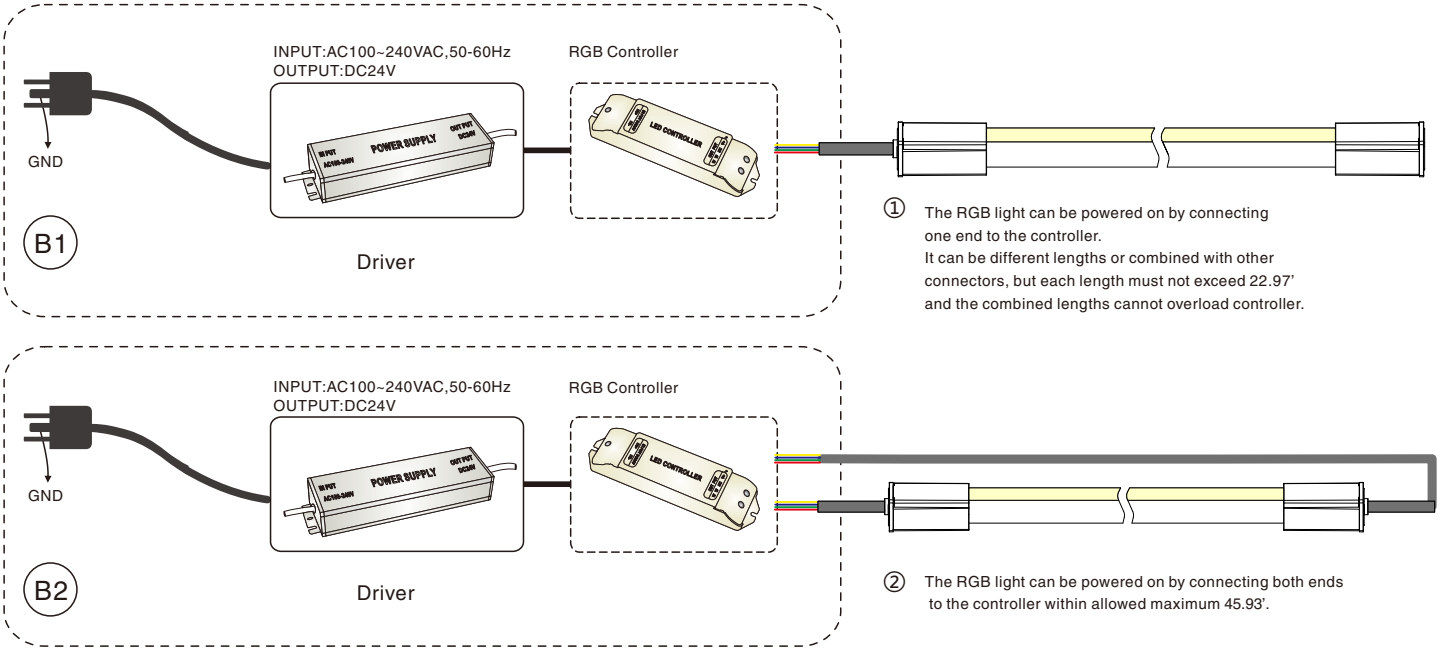

Max.Continuous Length	Single End Feed	Double Ends Feed
	22.97’	45.93’

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions

Light Wiring - Dynamic White, RGBW

NOTE:
1. This fixture must be used in conjunction with DC24V power supply.
2. Always observe proper polarity.
3. Ensure to add 20% buffer when sizing power supply.
4. Ensure that the power cable carried current is no greater than 80% of its capacity.
5. To minimize the voltage drop and keep light consistency, position power supply nearest to the power feed end of the fixture and keep the power line as short as possible.
6. Compatible with RGB controller and DMX control.

Instructions of Dynamic Light Wiring:
Red Wire Connects to Anode(+).
Yellow Wire Connects to Low Color Temperature Connection, Cathode(-).
Black Wire Connects to High Color Temperature Connection, Cathode(-).

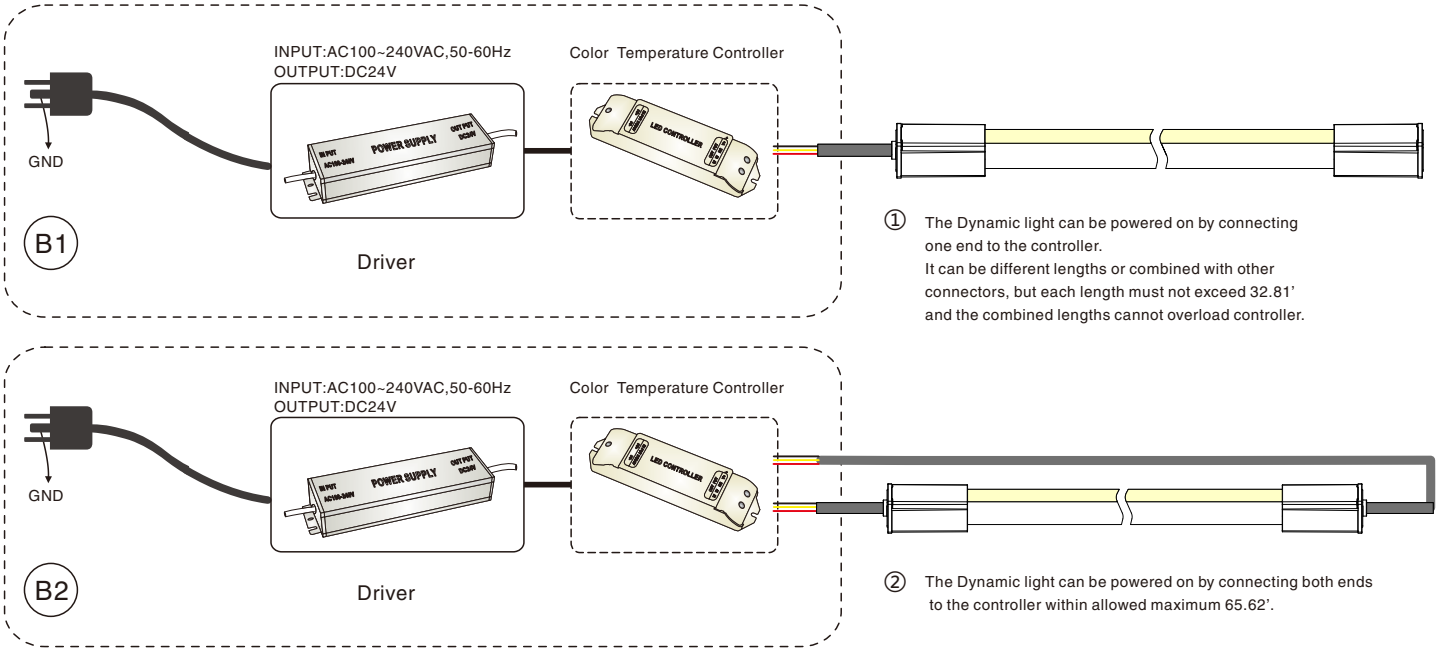


Max.Continuous Length	Single End Feed	Double Ends Feed
	32.81'	65.62'

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE

Installation Instructions

Extrusions

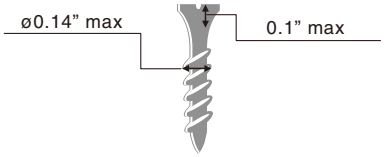

Screw




Screwdriver


or




Electric Screwdriver

Aluminum Profile - Non-locking

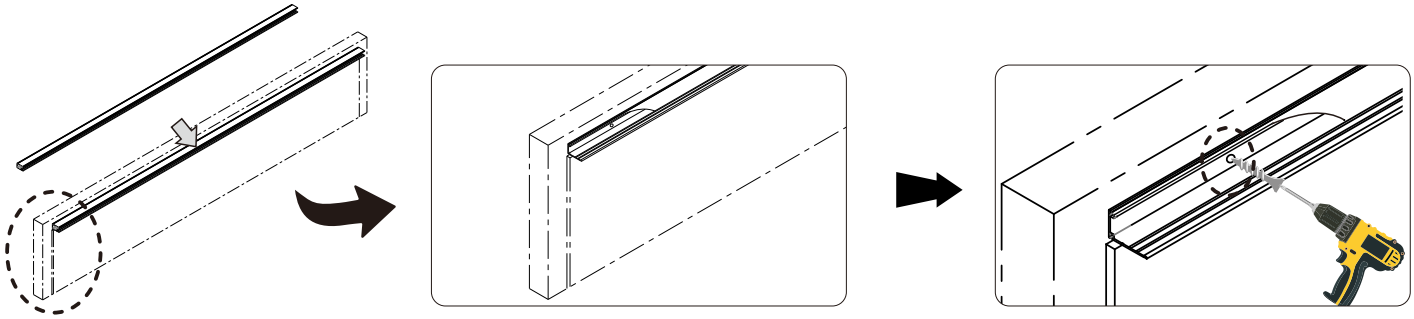


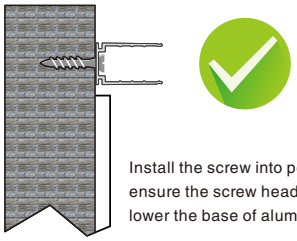

Install the screw into position and ensure the screw head is flush or lower the base of aluminum profile.

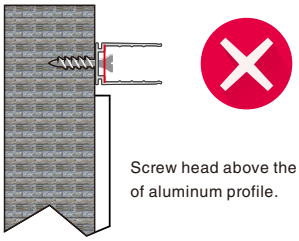

Screw head above the base of aluminum profile.

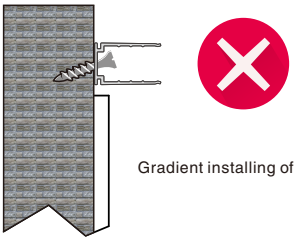

Gradient installing of screw.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Extrusions

Aluminum Profile - Self-locking

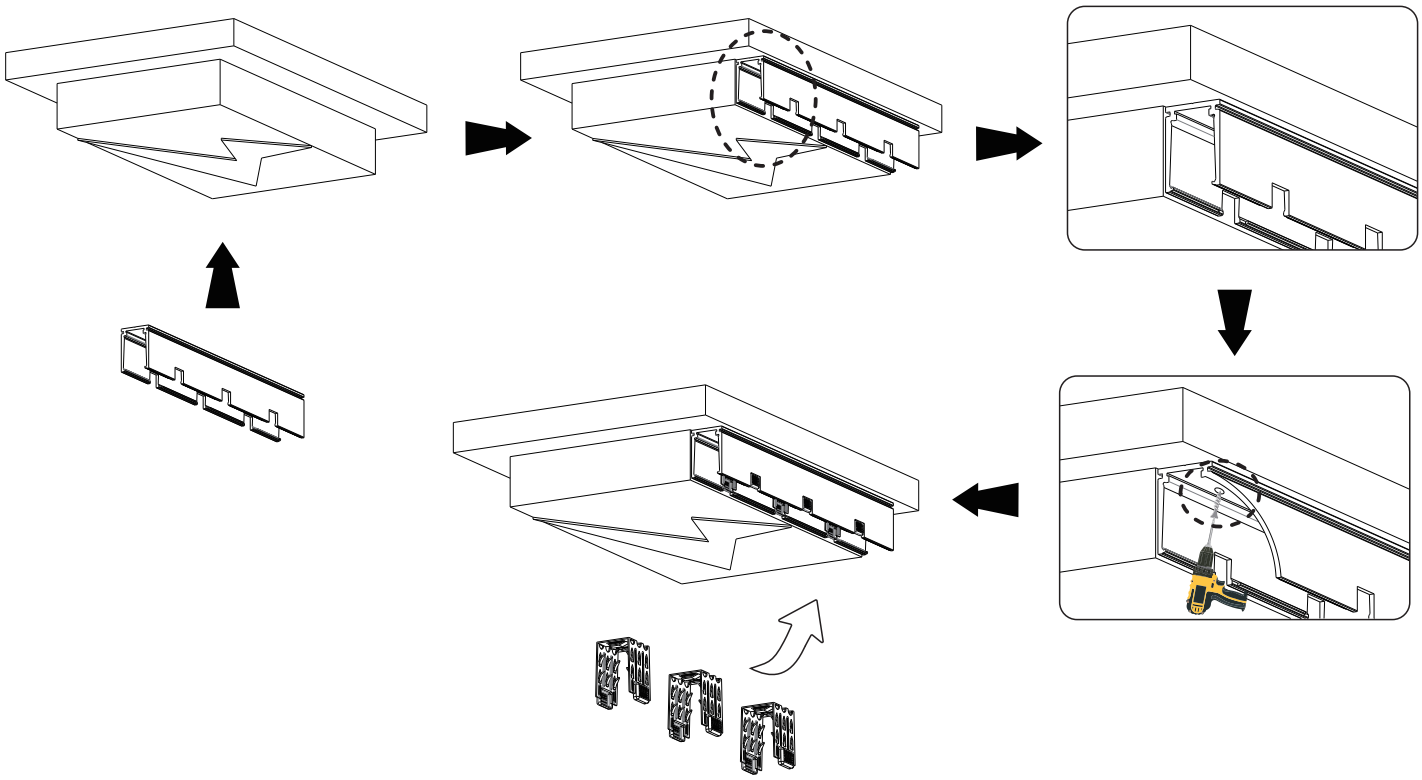


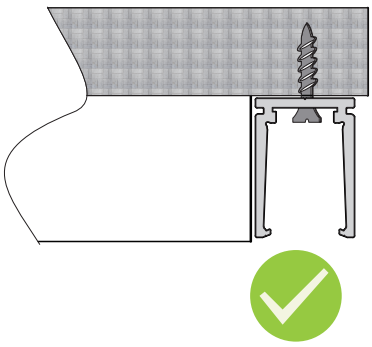

Install the screw into position and ensure the screw head is flush or lower the base of aluminum profile.

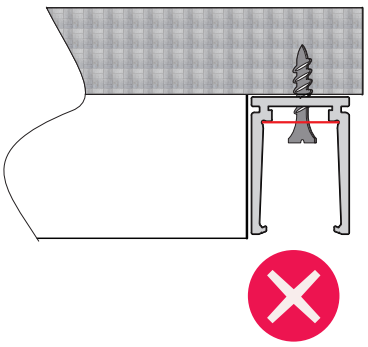

Screw head above to the base of aluminum profile.

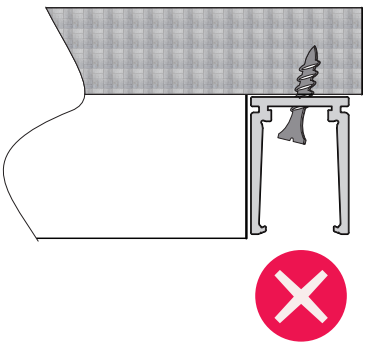

Gradient installing of screw.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Extrusions - Requirements and Cautions for Installation


For fixtures with Screw Connectors (Clasp Connector and Sleeve Connector also refer to the following cautions)

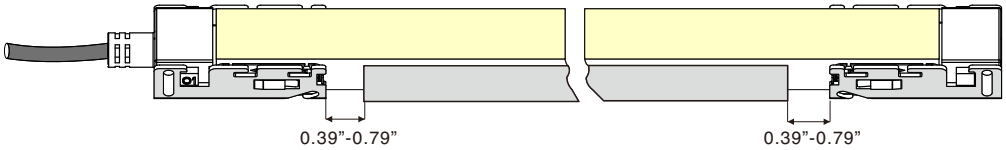


Ensure the supply cord is not subject to mechanical stress.
Keep 10-20mm distance between the end of aluminum profile and that of aluminum mounting piece.

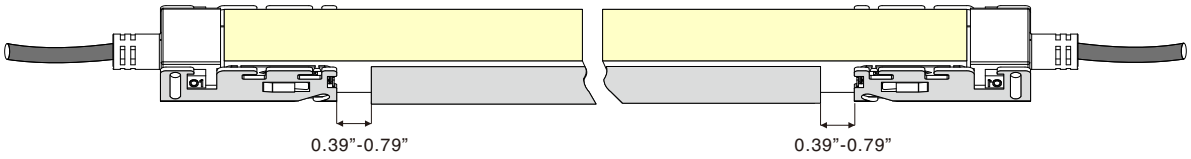


Mechanical stress on front connector cable shall be avoided.

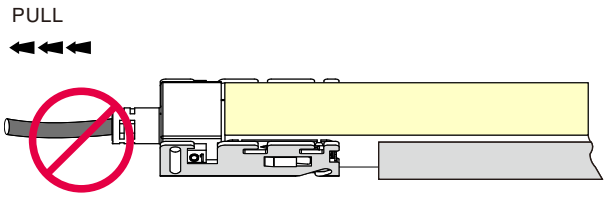


It is forbidden to curl or pull the front connector cable with excessive force.

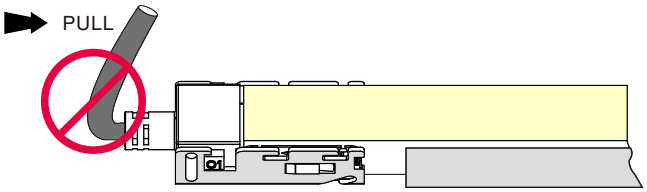


It is forbidden to let any connector aluminum mounting piece on the aluminum profile and make light deformation.

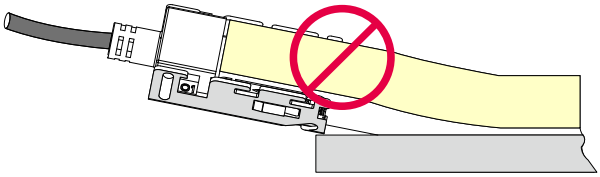

The space between aluminum profile and aluminum mounting piece less than 0.39” is forbidden.

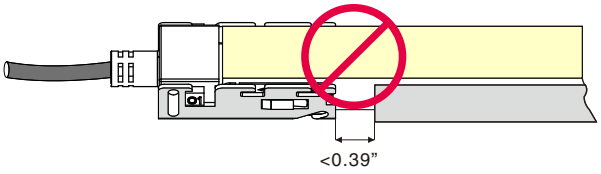

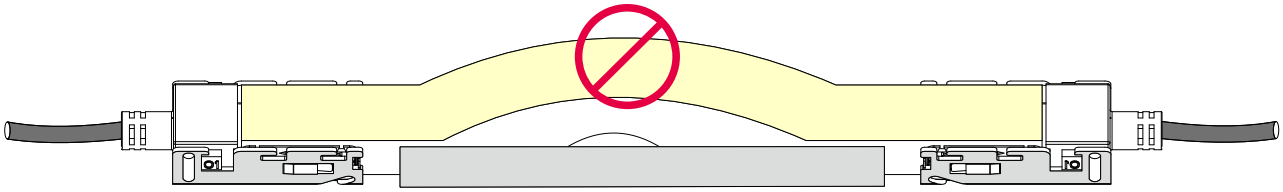

Install light in one direction. Don't let it choke in middle.


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE


Installation Instructions

Extrusions - Requirements and Cautions for Installation

For fixtures with Injection-Molded Connectors

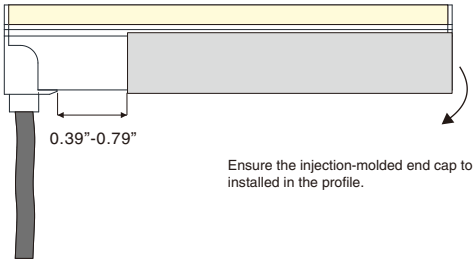


Ensure the injection-molded end cap to be installed in the profile.

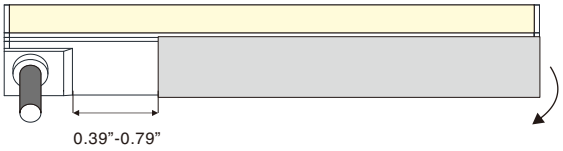


Ensure the injection-molded end cap to be installed in the profile.

Ensure the power cable is not subject to mechanical stress at the beginning.

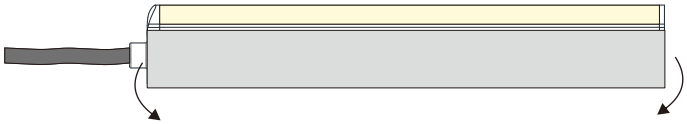


Ensure the injection-molded front connector (top end) and end cap to be installed in the profile.


Mechanical stress on front connector cable shall be avoided.

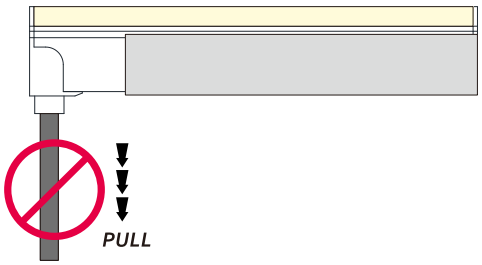


The space between connector and mounting profile less than 0.39” is forbidden.

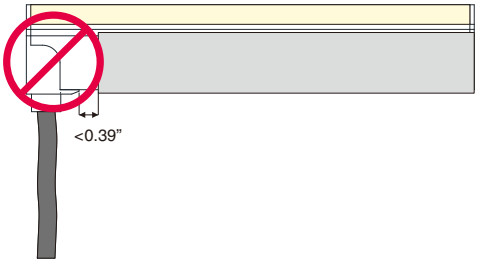


It is forbidden to curl or pull the front connector cable with excessive force.

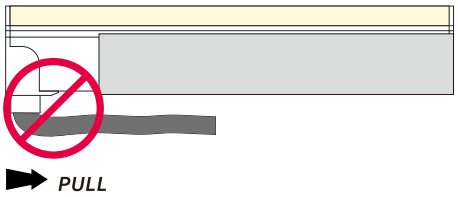


It is forbidden to curl or pull the front connector cable with excessive force.

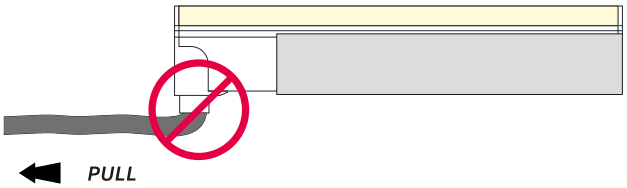

It is forbidden to force the injection-molded end to fit into the mounting profile and make light deformation.

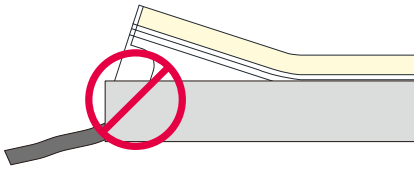

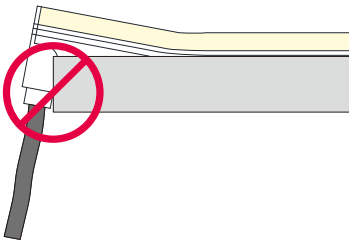

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Extrusions - Requirements and Cautions for Installation

For fixtures with Injection-Molded Connectors


It is forbidden to curl or pull the front connector ca ble with excessive force.

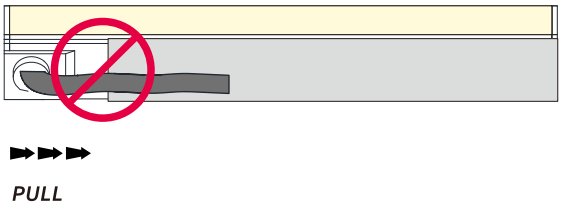


The space between connector and mounting profil e less than 10mm is forbidden.

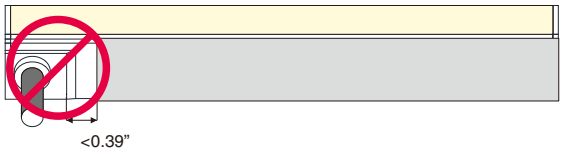

It is forbidden to fo rce the injection -moulded end to fit into the mount ing profile and make light defo rmation.

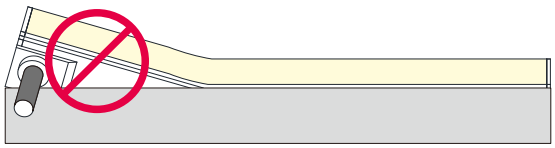


Mechanical stress on front connector cable shall be avoided.

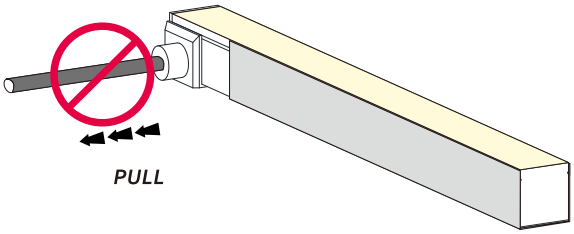





It is forbidden to curl or pull the fro nt connector cable with e xcessive force.

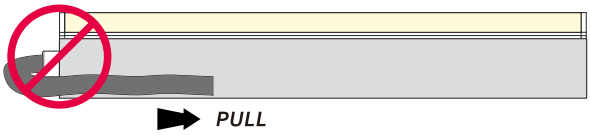

Mechanical stress on front connector c able shall be avoided.

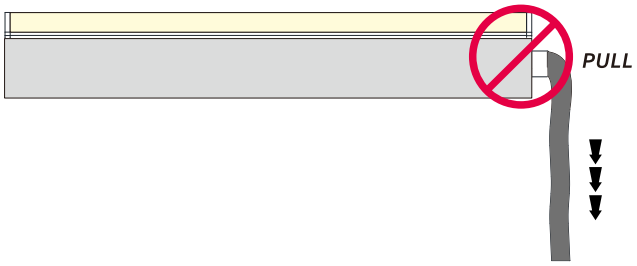

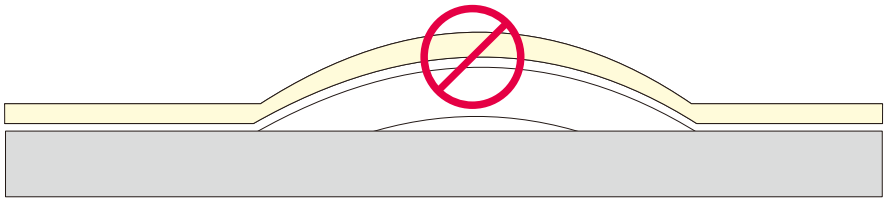

Install the light in one direction, no matter what kind of connector used . Don't let it cho ke in middle.




© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


FLEX LIGHT - FLEX SQUARE

Installation Instructions


Bending in the Process of Installation

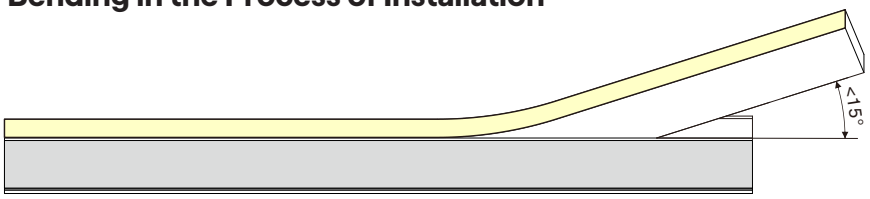


Installing angle should be less than 15 degree when pressing the light to the aluminum profile by hand.

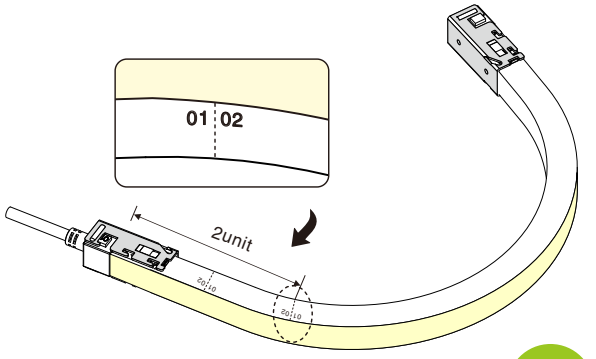


Please avoid bending at the first unit of the light.

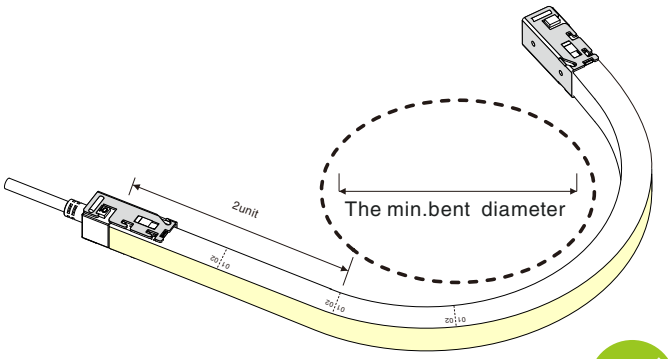


The light can bend in defined min. bending diameter or larger.

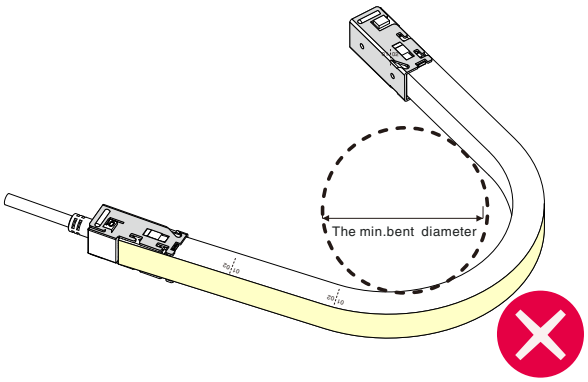

The circuit board and LEDs could be damaged if bending diameter is tighter than defined min. bending diameter.

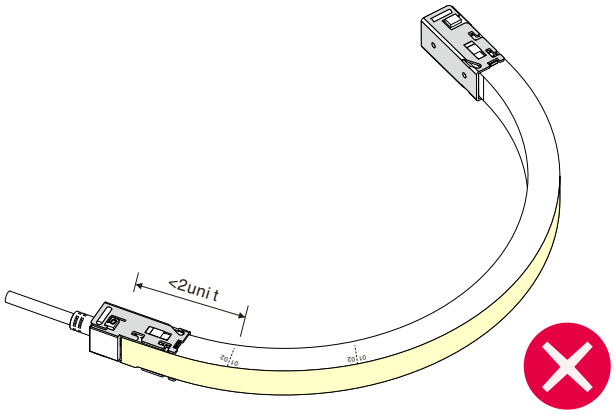

Do not bend against the first or last unit of the light, otherwise it will lead to failure of connector waterproof.

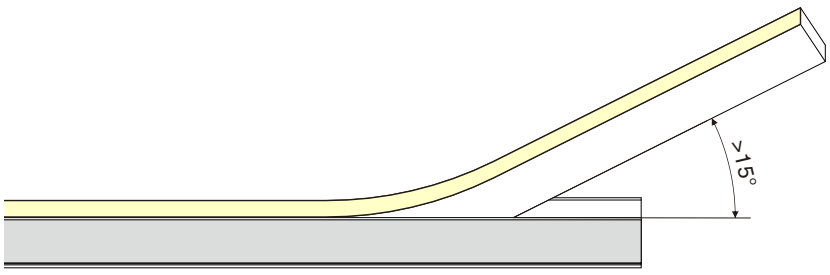

The circuit board could be damaged if installing angle larger than 15 degree.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX LIGHT - FLEX SQUARE

Installation Instructions

Troubleshooting

The whole fixture doesn't work.
Check power supply is plugged in, switched on and receiving power.
Check all light, dimmer or controller connections connection from the power supply to the fixture.
Check polarity of all wire connections.
Make sure power supply output voltage is 24V DC.
Check front connector is inserted into backside of PCB and properly assembled.

Light emitting appear dim or dull at one end.
Check whether the output voltage of the power supply is lower than that of light.
Adjust the dimming level to the maximum.
Power from both ends or shorten lighting length to prevent voltage drop.

Light emitting appear excessive brightness.
Check whether the output voltage of power supply is higher than that of light.
Check whether the power grid is stable.

If the first segment doesn't work.
Cut not in indicated cutting line or not in a straight line. Cut out and remove the first segment.
Damage caused to the first LED when inserting the front connector to the right side of PCB. Cut out the first segment and properly assemble connector.
Water ingress due to poor connector assembly could cause a short circuit of first segment. Replace length with a new one.
External impact damage inside LEDs. Only use your hands to install fixture into aluminum profile.

Fixture is flashing on and off.
Check the power supply to ensure it supports the length you are using. Select the appropriate strength or install an additional power supply to support your installation.
Check power supply output voltage is stable.
Check front connector is properly installed with good contact with the copper PCB.
Check proper controller is connected for light working.

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

FLEX-SQUARE-SW

FLEX Light Color Data

FLS-SW-S-27-HB-90-3.6

2785 K

CRI: 98.5

CRI R9: 97.4

TM30 Rf: 94.9

TM30 Rg: 100.8

CQS: 94.6


X: 0.450


Y: 0.403


U: 0.260

V: 0.349

Δuv: -0.0019

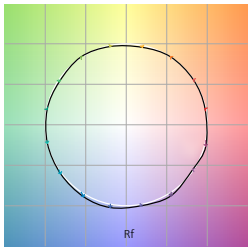

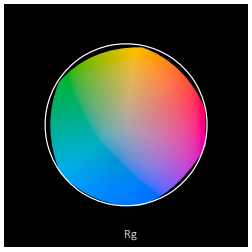

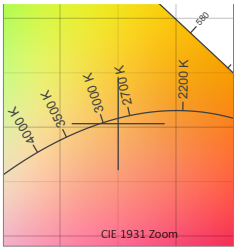

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
99.2	99.3	97.5	99.2	99.0	97.5	98.2	98.5	97.4	98.9	98.4	86.9	99.2	97.7	98.9
Q1	**Q2**	**Q3**	**Q4**	**Q5**	**Q6**	**Q7**	**Q8**	**Q9**	**Q10**	**Q11**	**Q12**	**Q13**	**Q14**	**Q15**
94.6	96.5	91.8	91.4	94.0	96.5	93.7	94.9	97.3	96.0	95.5	95.9	96.4	95.6	95.8
C1	**C2**	**C3**	**C4**	**C5**	**C6**	**C7**	**C8**	**C9**	**C10**	**C11**	**C12**	**C13**	**C14**	**C15**	**C16**
96.5	97.7	96.3	94.8	95.6	97.5	94.2	98.3	94.7	91.7	91.5	93.1	95.7	93.8	95.2	91.5

TM30

Hue Bin	R_f	Chroma	Hue
1	97	-1%	1%
2	98	0%	0%
3	96	0%	1%
4	95	-2%	-1%
5	96	-1%	1%
6	98	1%	0%
7	94	-2%	2%
8	98	-1%	1%
9	95	0%	3%
10	92	1%	5%
11	92	3%	6%
12	93	4%	0%
13	96	2%	-3%
14	94	4%	-3%
15	95	-1%	0%
16	92	2%	-7%

FLS-SW-S-30-HB-90-3.6

3176 K

CRI: 97.8

CRI R9: 94.7

TM30 Rf: 94.3

TM30 Rg: 100.2

CQS: 94.8


X: 0.425


Y: 0.400


U: 0.245

V: 0.345

Δuv: 0.0001

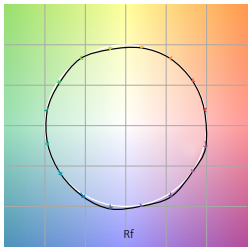

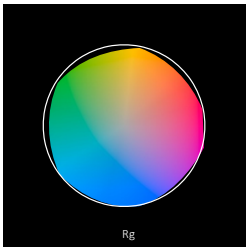

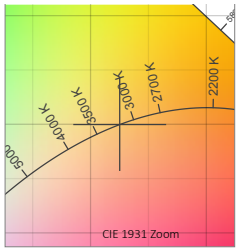

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
98.7	98.5	96.0	98.3	97.5	96.6	99.1	98.0	94.7	94.8	97.9	81.3	98.7	97.0	98.1
Q1	**Q2**	**Q3**	**Q4**	**Q5**	**Q6**	**Q7**	**Q8**	**Q9**	**Q10**	**Q11**	**Q12**	**Q13**	**Q14**	**Q15**
94.5	97.6	90.7	90.4	93.6	95.6	95.3	96.7	97.0	96.4	96.4	97.2	97.9	97.2	96.5
C1	**C2**	**C3**	**C4**	**C5**	**C6**	**C7**	**C8**	**C9**	**C10**	**C11**	**C12**	**C13**	**C14**	**C15**	**C16**
96.2	97.6	96.0	95.1	93.8	97.8	94.0	97.5	93.8	89.6	89.7	92.8	96.6	93.7	93.4	90.8

TM30

Hue Bin	R_f	Chroma	Hue
1	96	-1%	0%
2	98	-1%	0%
3	96	0%	1%
4	95	-2%	0%
5	94	-4%	1%
6	98	0%	1%
7	94	-2%	2%
8	98	-1%	1%
9	94	-1%	4%
10	90	0%	6%
11	90	2%	7%
12	93	5%	2%
13	97	1%	-1%
14	94	4%	-3%
15	93	0%	-2%
16	91	2%	-7%

FLS-SW-S-35-HB-90-3.6

3653 K

CRI: 97.0

CRI R9: 96.2

TM30 Rf: 92.7

TM30 Rg: 99.1

CQS: 94.9


X: 0.398


Y: 0.389


U: 0.232

V: 0.340

Δuv: 0.0009

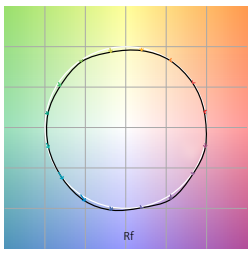

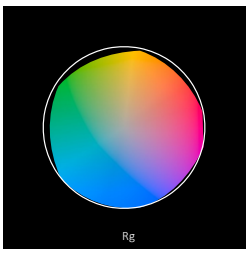

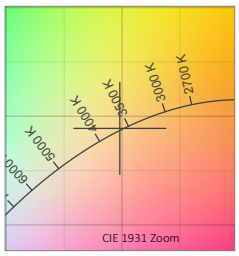

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
97.8	98.0	95.8	96.5	95.9	95.1	98.7	97.9	96.2	93.5	96.0	75.1	97.9	97.1	97.0
Q1	**Q2**	**Q3**	**Q4**	**Q5**	**Q6**	**Q7**	**Q8**	**Q9**	**Q10**	**Q11**	**Q12**	**Q13**	**Q14**	**Q15**
94.0	98.8	90.4	88.9	92.2	94.3	96.7	97.9	98.1	97.7	97.2	98.1	98.9	99.0	97.3
C1	**C2**	**C3**	**C4**	**C5**	**C6**	**C7**	**C8**	**C9**	**C10**	**C11**	**C12**	**C13**	**C14**	**C15**	**C16**
94.9	96.9	95.8	93.3	92.0	96.4	92.9	94.2	91.2	86.6	87.1	92.1	96.6	93.1	92.0	91.1

TM30

Hue Bin	R_f	Chroma	Hue
1	95	-1%	1%
2	97	-1%	0%
3	96	-1%	1%
4	93	-3%	-1%
5	92	-5%	0%
6	96	-2%	0%
7	93	-4%	3%
8	94	-2%	3%
9	91	-2%	6%
10	87	0%	9%
11	87	4%	8%
12	92	4%	3%
13	97	1%	-1%
14	93	5%	-3%
15	92	1%	-2%
16	91	1%	-5%

NOTES:
- CRI R values, only R1-R8 are used to calculate RA CRI values
- TM30 C values, 16 binned values out of total of 99 C values
- CQS Q values
- Data subject to change, all data has +/- 5% tolerance

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-03-11-24

FLEX-SQUARE-SW

FLEX Light Color Data

FLS-SW-S-40-HB-90-3.6

4092 K

CRI: 96.5

CRI R9: 96.3

TM30 Rf: 91.9

TM30 Rg: 99.1

CQS: 93.9


X: 0.377


Y: 0.374


U: 0.224

V: 0.333

Δuv: 0.0001

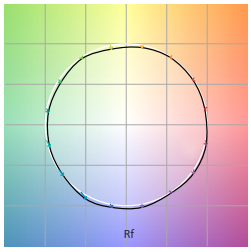

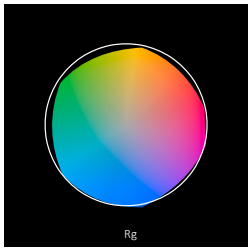

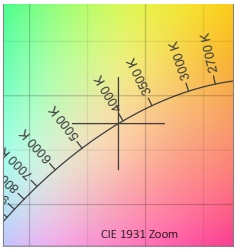

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
97.3	98.1	96.0	95.6	95.2	94.2	98.4	97.6	96.3	93.5	95.1	71.3	97.7	97.4	96.3
Q1	**Q2**	**Q3**	**Q4**	**Q5**	**Q6**	**Q7**	**Q8**	**Q9**	**Q10**	**Q11**	**Q12**	**Q13**	**Q14**	**Q15**
93.7	99.0	88.3	86.5	90.6	93.2	96.1	97.3	97.9	97.0	96.1	97.2	98.1	98.8	97.1
C1	**C2**	**C3**	**C4**	**C5**	**C6**	**C7**	**C8**	**C9**	**C10**	**C11**	**C12**	**C13**	**C14**	**C15**	**C16**
94.3	96.2	95.2	92.7	91.6	96.2	93.3	92.4	88.9	86.3	85.4	92.5	94.6	94.8	90.1	90.0

TM30

Hue Bin	R_f	Chroma	Hue
1	94	-1%	1%
2	96	-1%	0%
3	95	-1%	1%
4	93	-3%	0%
5	92	-5%	0%
6	96	-2%	0%
7	93	-4%	2%
8	92	-3%	4%
9	89	-2%	8%
10	86	-1%	9%
11	85	4%	9%
12	92	3%	3%
13	95	4%	-1%
14	95	1%	-1%
15	90	2%	-4%
16	90	2%	-5%

NOTES:
- CRI R values, only R1-R8 are used to calculate RA CRI values
- TM30 C values, 16 binned values out of total of 99 C values
- CQS Q values
- Data subject to change, all data has +/- 5% tolerance

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-03-11-24