
# VOYA SIDE MOUNT 2.5" COB WARM DIM

24VDC COB Flood/Accent LED



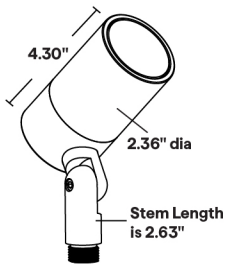


- Specification-grade, flood/accent lighting with best-in-class lumen output, color quality, dimming performance, and optical control
- Available in ultra-durable powder-coated 6061 aluminum, polished brass, or polished 316L stainless steel
- Flexible tree, surface, wall and ground mounting options support diverse installations
- Warm dim technology shifts from 3000K to a candlelit 1800K
- Wet listed for exterior applications

| 1 PRODUCT | 2 KNUCKLE | 3 CRI | 4 CCT | 5 SNOOT | 6 COB | 7 BEAM ANGLE | 8 MATERIAL | 9 FINISH | 10 WATTAGE | 11 OUTPUT SETTING | 12 WEEP HOLE | 13 ACCESSORY 1 | 14 ACCESSORY 2 | 15 ACCESSORY 3 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| VOYA-SM-2.5-COB-24VDC-WD | ST | 95 | 18/30 | | COB | | | | 07 | N/A | | | | |

Sample Part Number: **VOYA-SM-2.5-COB-24VDC-WD-ST-95-18/30-FL-COB-55-SS-P-07-N/A-N/A-WW-LV-N/A**

### 1 PRODUCT

**VOYA-SM-2.5-COB-24VDC-WD**

### 2 KNUCKLE

**ST** Standard

### 3 CRI

**95**

### 4 CCT

**18/30** 1800K/3000K

### 5 SNOOT

**FL** Flush
**HR** 0.5" Regress
**1R** 1" Regress
**30D** 30 Degree
**45D** 45 Degree
**60D** 60 Degree

### 6 COB

**COB** All Other

### 7 BEAM ANGLE

**20** 20 Degree
**26** 26 Degree
**40** 40 Degree
**55** 55 Degree

### 8 MATERIAL

**A** 6061 Aluminum Anodized and Powder Coated

**B** Brass H59

**SS** Stainless Steel 316L

### 9 FINISH

**BG** Beige
**BB** Black Bronze
**BK** Black
**BKT** Black Texture
**BZ** Bronze
**BZT** Bronze Texture
**SL** Silver
**WH** White
**CU** Custom

Lead times differ. BZT parts are readily available. All other standard finishes are painted upon order. Custom finishes: consult factory

**P** Polished

Brass and Stainless Steel have longer lead times: consult factory

### 10 WATTAGE

**07** 7.2 Watts

Refer to delivered lumen output on following pages

### 11 OUTPUT SETTING

**N/A** Not available for these wattages

### 12 WEEP HOLE

**WPH** Weep Hole
**N/A** No Weep Hole

Not using a weep hole while aiming up will void warranty. FL and GZR snoots do not have weep holes. If FL or GZR is chosen, select N/A

### 13 ACCESSORY 1

**SP** Spread Lens
**LS** Linear Spread Lens
**WW** Wall Wash Lens
**LV** Honeycomb Louver
**N/A** No Accessory

Retaining Ring included with each accessory. Accessories not compatible with GZR options.

### 14 ACCESSORY 2

**SP** Spread Lens
**LS** Linear Spread Lens
**WW** Wall Wash Lens
**LV** Honeycomb Louver
**N/A** No Accessory

Retaining Ring included with each accessory. Accessories not compatible with GZR options.

### 15 ACCESSORY 3

**SP** Spread Lens
**LS** Linear Spread Lens
**WW** Wall Wash Lens
**LV** Honeycomb Louver
**N/A** No Accessory

Retaining Ring included with each accessory. Accessories not compatible with GZR options.

5 year warranty | Warranty only valid with QTL power supplies | Field modifications void warranty | Data subject to change, all data has +/- 5% tolerance

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting

Specification subject to change. Rev-11-02-26

# VOYA SIDE MOUNT 2.5" COB WARM DIM

24VDC COB Flood/Accent LED


## 1 PRODUCT - DIMENSIONS





Flush Snoot (FL)




0.5" Regress Snoot (HR)

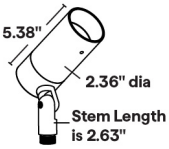



1" Regress Snoot (1R)

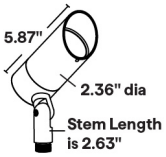



30 Degree Snoot (30D)




45 Degree Snoot (45D)

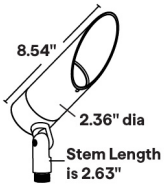


60 Degree Snoot (60D)

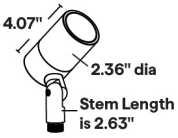


Grazer Snoot (GZR)
*Only to be used with GZR optics

## 6 DELIVERED LUMENS


Tested with VOYA-2.5-COB-24VDC-WD-ST-95-30-FL at 7W

| COB - BEAM ANGLE | CCT | LUMENS | LM/W | PEAK INTENSITY (CD) | CRI Ra | CRI R9 | TM30 Rf | TM30 Rg |
|---|---|---|---|---|---|---|---|---|
| COB - 20° | 3208 | 507 | 70 | 3649 | 98 | 98 | 94 | 100 |
| COB - 26° | 3166 | 581 | 80 | 2961 | 98 | 99 | 95 | 100 |
| COB - 40° | 3223 | 602 | 83 | 1297 | 98 | 98 | 94 | 100 |
| COB - 55° | 3226 | 547 | 76 | 711 | 98 | 99 | 94 | 100 |


## PHOTOMETRIC PERFORMANCE

Nominal beam spread shown, beam spread varies based on light engine. For more detailed information, see photometric data.


**20°**

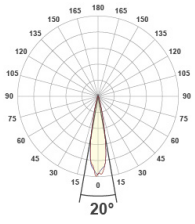



**26°**

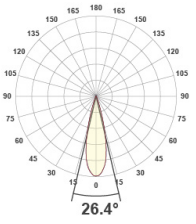


**40°**

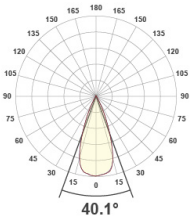


**55°**

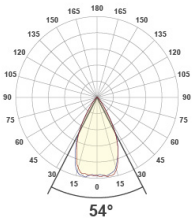


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting

# VOYA SIDE MOUNT 2.5" COB WARM DIM

24VDC COB Flood/Accent LED

## 9 FINISH

### ALUMINUM POWDER COAT FINISHES

Lead times differ. BZT parts are readily available. All other standard finishes are painted upon order. Custom finishes: consult factory






### BRASS AND STAINLESS STEEL POLISHED FINISHES

Brass and Stainless Steel have longer lead times: consult factory




## 13/14/15 ACCESSORIES

Holds up to three accessories. Retaining Ring included with each accessory. Accessories not compatible GZR option.
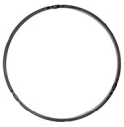
| SP | LS | WW | LV | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Spread Lens | Linear Spread Lens | Wall Wash Lens | Honeycomb Louver | Retaining Ring | SNOOT INSTALL KIT |
| To order separately use ACC-2.5-SP | To order separately use ACC-2.5-LS | To order separately use ACC-2.5-WW | To order separately use ACC-2.5-LV | To order separately use ACC-2.5-RR | To order separately use VOYA-SNOOT-INSTALL-KIT |

## COMPATIBLE GLARE CONTROL ACCESSORIES

**VOYA-2.5-45D-GLARE-SHIELD-YY-XX**




Adjustable 45° Glare Shield. See Spec Sheet for material (YY) and finish (XX) options

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting

Specification subject to change. Rev-11-02-26

# VOYA SIDE MOUNT 2.5" COB WARM DIM

24VDC COB Flood/Accent LED

## COMPATIBLE POWER SUPPLIES

Specify 0-10V or DALI for smoothest dimming performance. For phase dimming, ELV is recommended. See power supplies cut sheets for more information. Data subject to change, all data has +/- 5% tolerance.


| DIMMING PROTOCOL | INDOOR | OUTDOOR |
|---|---|---|
| | VOYA 24VDC | VOYA 24VDC |
| Phase | QT-CAB-QZ-PH/0-10V<br>QZ-BOWTIE+DIMMER<br>QZ-PRO-PH/0-10V<br>QZ-STICK-PH/0-10V | Q-SET-QZ-PH/0-10V<br>QZ-PRO-PH/0-10V |
| 0-10V | QT-CAB-QZ-PH/0-10V<br>QZ-PRO-PH/0-10V<br>QZ-STICK-PH/0-10V | Q-SET-QZ-PH/0-10V<br>QZ-PRO-PH/0-10V |
| Lutron Athena | QT-CAB-eLED+DALI-DT6-AWN<br>QTM-eLED+DALI-DT6-AWN | |
| DMX | QT-CAB-eLED+DMX | QOM-eLED+DMX<br>QOM-eLED+DMX-PS |
| DALI-2: DT6 | QT-CAB-eLED+DALI-DT6<br>QT-CAB-eLED+DALI-DT6-AWN<br>QTM-eLED+DALI-DT6<br>QTM-eLED+DALI-DT6-AWN | QOM-eLED+DALI-DT6<br>QOM-eLED+DALI-DT6-PS |

# VOYA EM/SM 2.5" MOUNT COMPATIBILITY

Landscape Lighting

## SURFACE/WALL


See Surface/Wall installation for dimensions and included hardware. Refer to the mount cut sheets for complete order codes regarding mount's options.

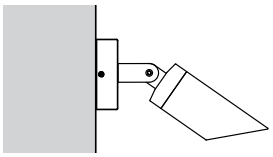



**Q-WB**

Wood Beam Mount

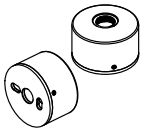

**Q-MT-11***


With Water Protection



**Q-MT-17***



**Q-MT-18**




**Q-MT-19**

With Water Protection



**Q-MT-21**




**Q-MT-22**




**Q-MT-37***

## SURFACE/WALL J-BOX PLATES

See Surface/Wall J-Box Plate installation for dimensions and included hardware. Refer to the mount cut sheets for complete order codes regarding mount's options.

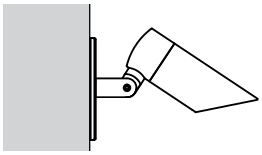




**Q-MT-24**

Compatible with 1 GANG RECTANGLE WEATHER PROOF J-BOX or 4/0 WEATHER PROOF J-BOX by others



**Q-MT-25**



**Q-MT-26**

Compatible with 1 GANG RECESS J-BOX or 4/0 RECESSED J-BOX by others



**Q-MT-27**

Compatible with 3/0 RECESSED J-BOX by others




**Q-MT-42***

Compatible with 1 GANG RECTANGLE WEATHER PROOF J-BOX or 4/0 WEATHER PROOF J-BOX by others

## TREE MOUNT

See Tree Mount installation for dimensions and included hardware. Refer to the mount cut sheets for complete order codes regarding mount's options.

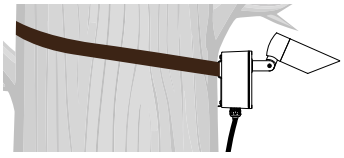



**Q-MT-10**



**Q-MT-12***




**Q-MT-14***

With Tree Strap




**Q-MT-39***

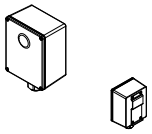

**Q-MT-50 (No Driver)**

With Water Protection and Tree Strap

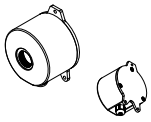



**Q-MT-51***

With Water Protection


## DIRECT BURIAL

See Direct Burial installation for dimensions and included hardware. Refer to the mount cut sheets for complete order codes regarding mount's options.

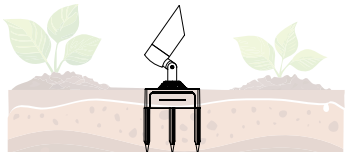



**Q-MT-6***




**Q-MT-7***

With Water Protection




**Q-MT-45***



**Q-TRIX-R20* (No Driver)**

With Water Protection




**Q-TRIX-R50* (With Driver)**


With Water Protection

## MOUNT ACCESSORIES


See Accessories installation for dimensions and included hardware.




**NPS ADAPTER**

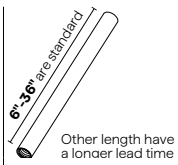



**AY-3 Riser Pole**




**AY-7**

No Water Protection




**(RA) ROTATIONAL ADAPTER**

With Water Protection

***Compatible with AY-3 Riser Pole**

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

Specification subject to change. Rev-11-02-26

# VOYA EM/SM 2.5" 24VDC COB WARM DIM

Power Supply Sizing & Wiring


## DISTRUBUTED & BRANCH CIRCUITS


VOYA 2.5" COB Warm Dim can be wired as either a distributed load - multiple fixtures tapped along a run, in branches, or in loop/ring circuits – or as a single load at the end of a run. When wiring as a distributed load, refer to VOYA-2.5-24VDC Low Voltage Wiring Guide to size wires within recommended voltage drop limits when these wiring configurations are used. When wiring as a single load at the end of a run, refer to QTL Voltage Drop Calculator.

Input voltage at the fixture should be 22.8V–24V DC for both dimmed and non-dimmed applications.


## DIMMING

VOYA 2.5" COB Warm Dim shifts correlated color temperature (CCT) as it dims, warming toward lower CCT at low output. The graphs below show the CCT range and the light output across the dimming range. VOYA 2.5 24VDC COB fixtures dim down to 0.1%. Specify 0-10V or DALI for smoothest dimming performance. For phase dimming, ELV is recommended

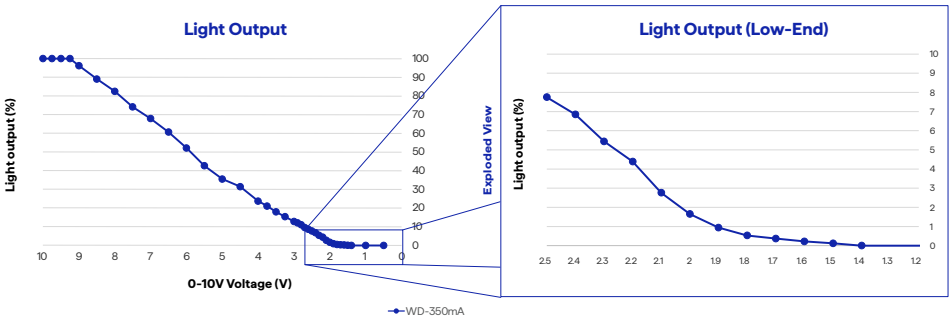

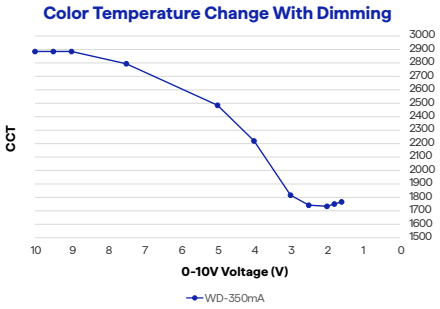
**Compatible Dimming Control:** Use a compatible QTL power supply. Dimming control feeds into the remote compatible power supply only. Only 2-wire 24V DC power feeds into fixture.

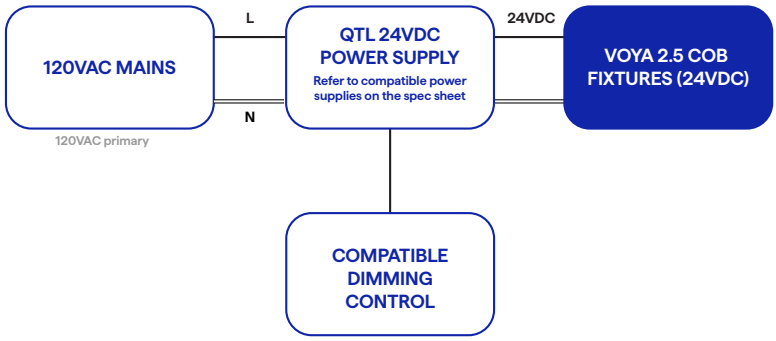


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA EM/SM 2.5" 24VDC COB

Low Voltage Wiring Guide

Applies to all VOYA EM/SM 2.5" COB 24VDC fixtures (Static White, Amber, Warm Dim). This guide is a companion to the VOYA 2.5" 24VDC datasheets, which cover power supply compatibility. This document covers the wiring between the 24VDC Class 2 electronic power supply and the fixtures: selecting wire gauge so every fixture receives the correct voltage. For a single load at the end of a run, the QTL voltage drop calculator may be used instead.

## 1. DESIGN RULES

- **Fixture voltage window:** Every fixture must receive 22.8–24.0 VDC, for both dimmed and non-dimmed applications.
- **Wire sizing rule:** Size wire so the calculated voltage drop at the farthest fixture does not exceed 1.2 V (5% of 24 V). Table 1 is built on this rule.
- **Capacity rule**: Total connected load on each circuit must not exceed 96 W (100 VA, Class 2 limit of the QTL 24VDC electronic power supplies). No additional derating is required, dimmed or non-dimmed. Capacity and voltage drop are independent checks: a circuit must pass both.
- **Polarity rule:** These are 2-wire DC circuits. Maintain + and – polarity from the supply to every fixture; fixtures are polarity sensitive.
- **No taps:** The 24VDC electronic supplies output a fixed 24V. If a run does not fit the tables, use larger wire, move the supply closer, split the load across circuits, or wire the run as a loop.

## 2. SIZING PROCEDURE

Work through these five steps for each 24VDC circuit (each Class 2 supply output).

1. Plot the fixtures on the plan and mark each fixture wattage (per its DIP-set output). Total the watts on the circuit and confirm the total is under the 96 W Class 2 limit.

2. Identify the circuit layout: straight run, hub (home run), loop, or hub with branches. Locate the power supply to keep wire distances short.

3. Measure wire path distances on the plan (actual routed feet, not straight line distance). For each fixture, multiply watts × distance (watt-feet) and compute the center of load per Section 4.

4. In Table 1, find the load column equal to or greater than the circuit watts. Read down to the first gauge whose listed distance is equal to or greater than your center of load distance. That is the minimum wire gauge. The same gauge serves dimmed and nondimmed circuits.

5. Commissioning and verification: confirm + / – polarity at every fixture before energizing. Energize the circuit at full output (dimmers at 100%) and measure voltage at the farthest fixture: it must read 22.8 V or higher.

## 3. WIRE SELECTION TABLES

Distances below are the maximum center of load distance in feet (one way, along the wire path) for a 1.2 V drop (maximum 5% drop from 24V), computed at VOYA 24VDC current (watts ÷ 22.8). For loads between columns, use the next higher column. The 96 W column is the Class 2 ceiling, and the largest possible circuit current is 4.2 A, within the ampacity of every gauge listed, so this table has no ampacity cutoffs.

**TABLE 1. COPPER WIRE (STRANDED), MAXIMUM COL DISTANCE IN FEET**

| | AWG | 10W | 15W | 20W | 25W | 30W | 40W | 50W | 60W | 70W | 80W | 96W |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | **AMPS** | **0.44** | **0.66** | **0.88** | **1.10** | **1.32** | **1.75** | **2.19** | **2.63** | **3.07** | **3.51** | **4.21** |
| **24V** | 18 | 199 | 133 | 99 | 79 | 66 | 49 | 39 | 33 | 28 | 24 | 20 |
| | 16 | 318 | 212 | 159 | 127 | 106 | 79 | 63 | 53 | 45 | 39 | 33 |
| | 14 | 506 | 337 | 253 | 202 | 168 | 126 | 101 | 84 | 72 | 63 | 52 |
| | 12 | 802 | 534 | 401 | 320 | 267 | 200 | 160 | 133 | 114 | 100 | 83 |
| | 10 | 1280 | 853 | 640 | 512 | 426 | 320 | 256 | 213 | 182 | 160 | 133 |
| | 8 | 2041 | 1361 | 1020 | 816 | 680 | 510 | 408 | 340 | 291 | 255 | 212 |
| | 6 | 3234 | 2156 | 1617 | 1293 | 1078 | 808 | 646 | 539 | 462 | 404 | 336 |

Total watts = sum of the fixture wattages on the circuit (VOYA 2.5" 24VDC fixtures are field-settable from 0.7 W to 12.1 W each). 96 W is the Class 2 supply limit.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## 4. CIRCUIT LAYOUTS AND CENTER OF LOAD

All layouts use the same wire tables. What changes is the distance to look up - the center of load (COL), calculated based on different wiring configurations.

**Center of Load (COL), general rule:** For each fixture on the run, multiply its watts by its wire distance from the supply. Add these watt-feet, then divide by the total watts:

$$COL = \frac{\Sigma\ (\text{Power of Fixtures (Watts)} \times \text{distance (feet)})}{\text{Total power of fixtures in the circuit (Watts)}}$$

Shortcut: Only when fixtures are equal wattage and evenly spaced:
COL = distance to the first fixture + half of the distance from first to last fixture

### 4.1 STRAIGHT RUN (DAISY CHAIN)


List each fixture with its watts and distance, total the watt-feet column, divide by total watts. Look up the total watts of the run at the COL distance.

**EIGHT FIXTURES OF MIXED FIELD-SET WATTAGES WORKSHEET:**

| FIXTURE | WATTS | DISTANCE FROM POWER SUPPLY (FT) | WATT-FEET |
|---|---|---|---|
| F1 | 12.1 | 20 | 242 |
| F2 | 12.1 | 30 | 363 |
| F3 | 7.1 | 38 | 269.8 |
| F4 | 12.1 | 50 | 605 |
| F5 | 4.7 | 62 | 291.4 |
| F6 | 12.1 | 75 | 907.5 |
| F7 | 7.1 | 88 | 624.8 |
| F8 | 12.1 | 100 | 1210 |
| Total | 79.4 (<96W) | | 4513.5 |
| | | COL = 4513.5/79.4 = 57FT | |

COL = 4,513.5 ÷ 79.4 = 57 ft at 79.4 W.

Table 1, 80 W column: 16 AWG allows 39 ft (fail, < 57 ft); 14 AWG allows 63 ft (pass, > 57 ft). Use 14 AWG copper

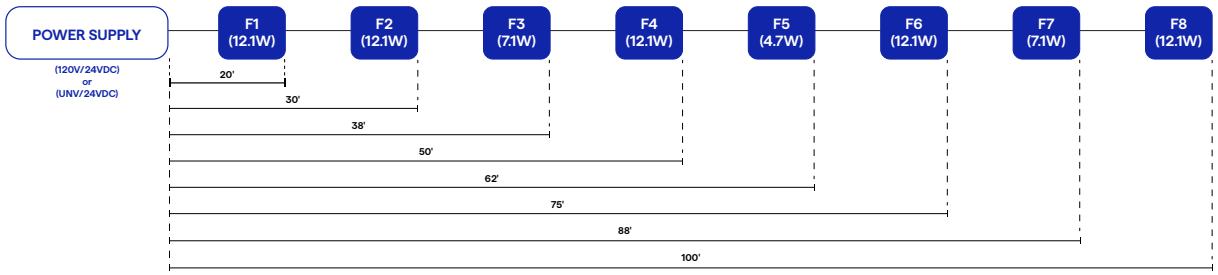



**FIVE 12.1W FIXTURES EVENLY SPACED 15' APART, THE FIRST FIXTURE 25' FROM THE SUPPLY WORKSHEET:**

| FIXTURE | WATTS | DISTANCE FROM POWER SUPPLY (FT) | WATT-FEET |
|---|---|---|---|
| F1 | 12.1 | 25 | 302.5 |
| F2 | 12.1 | 40 | 484 |
| F3 | 12.1 | 55 | 665.5 |
| F4 | 12.1 | 70 | 847 |
| F5 | 12.1 | 85 | 1028.5 |
| Total | 60.5 | | 3227.5 |
| | | COL = 3,327.5/60.5 = 55ft | |

Total 60.5 W: under the 96 W Class 2 limit (pass). COL = 3,327.5 ÷ 60.5 = 55 ft at 60.5 W (2.65 A).

**Shortcut check:** because the fixtures are equal wattage and evenly spaced, the shortcut from Section 4 applies: COL = distance to the first fixture + half of the distance from first to last fixture = 25 + (85 − 25) ÷ 2 = 25 + 30 = 55 ft. Identical to the watt-feet result, as expected. The shortcut may be used only in this equal-and-evenly-spaced case; for mixed wattages or irregular spacing (Example 1), use the watt-feet worksheet.

Table 1, 70 W column: 16 AWG allows 45 ft (fail since < 55 ft); 14 AWG allows 72 ft (pass since > 55 ft). Use 14 AWG copper. The farthest fixture receives 24.0 − 0.79 = 23.2 V, inside the 22.8–24.0 V window. Dimmed or non-dimmed, the result is the same.

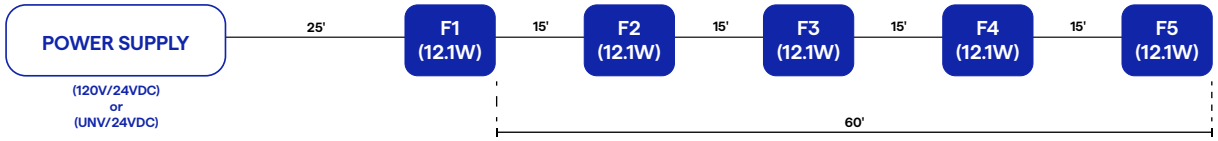



COL = 25'+60'/2 = 55

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## 4.2 HUB (STAR) HOME RUNS

List each fixture with its watts and distance, total the watt-feet column, divide by total watts. Look up the total watts of the run at the COL distance.

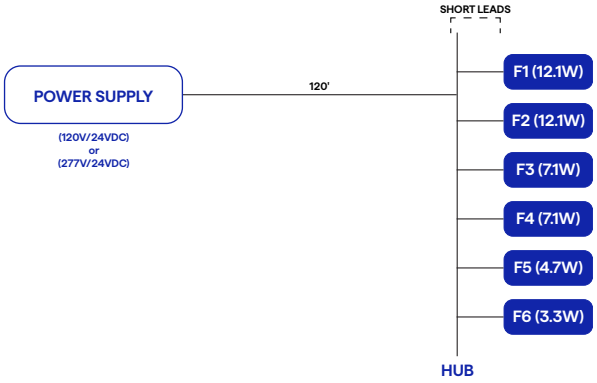


Six fixtures (12.1 + 12.1 + 7.1 + 7.1 + 4.7 + 3.3 = 46.4 W) on short leads at a hub 120 ft from the supply.

Every fixture is at 120 ft, so COL = 120 ft regardless of the mix. 46.4 W ≤ 96 W (pass). Table 1, 50 W column: 12 AWG allows 160 ft (pass). Use 12 AWG copper.

Note: If there are other home runs from the same supply, check each separately with its own load. The 96 W Class 2 limit applies to the sum of all loads on the circuit.


## 4.3 LOOP (RING) CIRCUITS

Both ends of the cable return to the same supply output, so current reaches every fixture from two directions. The lowest voltage occurs at the split point, the fixture where the two feeds meet.

**Balanced loop (roughly even loads and spacing):** cut the loop at the fixture farthest along the cable and check each half as a straight run (Section 4.1) carrying its own fixtures; a fixture at the cut counts half in each half.

**Any loop, general method:** pick one terminal as A and measure each fixture distance d along the cable from A (loop cable length L).

1. Watts arriving from the far terminal W_B = Σ (watts × d) ÷ L, and W_A = total −W_B.
2. Walk from A subtracting each fixture wattage from W_A; the fixture where the running value crosses zero is the split fixture.
3. Treat the A side as a straight run ending at the split fixture, carrying the fixtures before it plus the leftover watts at the split; compute its watt-feet COL and check it with the tables. Both sides give the same drop at the split, so checking one side is enough.

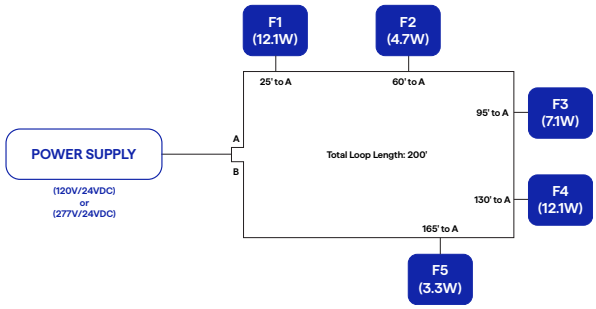


Loop with uneven loads. A 200 ft loop, fixtures measured from terminal A: 12.1 W at 25 ft, 4.7 W at 60 ft, 7.1 W at 95 ft, 12.1 W at 130 ft, 3.3 W at 165 ft. Total 39.3 W ≤ 96 W (pass).

1. Loop watt-feet = 12.1×25 + 4.7×60 + 7.1×95 + 12.1×130 + 3.3×165 = 3,376.5.
   W_B = 3,376.5 ÷ 200 = 16.9 W
   W_A = 39.3 − 16.9 = 22.4 W.
2. Walk from A: 22.4 − 12.1 = 10.3; 10.3 − 4.7 = 5.6; 5.6 − 7.1 = −1.5. The sign flips at the 7.1 W fixture (95 ft): that is the split point. It takes 5.6 W from side A and 1.5 W from side B.
3. Side A as a straight run: 12.1 W at 25 ft, 4.7 W at 60 ft, 5.6 W at 95 ft = 1,118 watt-feet. COL = 1,118 ÷ 22.4 = 50 ft at 22.4 W.

Table 1, 25 W column: 18 AWG allows 79 ft (pass). Side B gives the same drop by construction. Use 18 AWG copper.


Note: The same five fixtures fed from terminal A as a dead-end run (COL 86 ft at 39.3 W) would need 14 AWG. The loop saves two AWG sizes.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

### 4.4 HUB WITH BRANCHES (TWO LEVEL CIRCUITS) PERCENT RULE

Voltage drops add along the path, so each level consumes part of the 1.2 V maximum voltage drop budget. Check it with percentages of allowed distance:

- Home run: actual distance ÷ allowed Table 1 distance at the full connected load = X%.
- Each branch: branch watt-feet COL (measured from the hub) ÷ allowed Table 1 distance at that branch load = Y%.
- Requirement: X + Y ≤ 100% for every branch path. The same rule stacks for any number of levels in series. Branches may use different gauges; each is checked with its own load and COL.

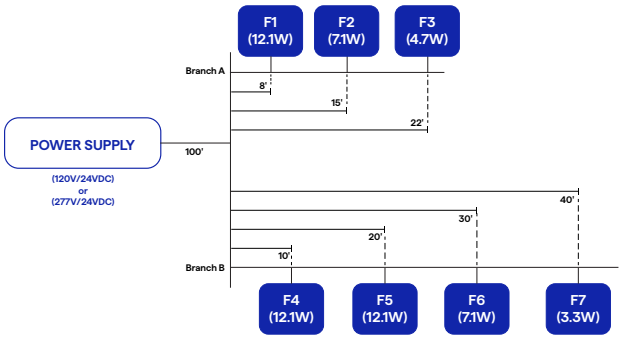


A home run of 100 ft feeds a hub carrying two branches: branch A is 12.1 W at 8 ft, 7.1 W at 15 ft, 4.7 W at 22 ft from the hub (23.9 W, 307 watt-feet, COL 13 ft); branch B is 12.1 W at 10 ft, 12.1 W at 20 ft, 7.1 W at 30 ft, 3.3 W at 40 ft (34.6 W, 708 watt-feet, COL 20 ft). Total 58.5 W ≤ 96 W (pass).

- **Home run:** 12 AWG at 58.5 W (60 W column, 133 ft allowed): 100 ÷ 133 = 75%
- **Branch A:** 16 AWG at 23.9 W (25 W column, 127 ft allowed): 13 ÷ 127 = 10%. Path total 75%+10% = 85% (pass).
- **Branch B:** 16 AWG at 34.6 W (40 W column, 79 ft allowed): 20 ÷ 79 = 26%. Path total 75%+26% = 101% (fail). Upsize branch B to 14 AWG (126 ft allowed): 20 ÷ 126 = 16%. Path total 75%+16% = 91% (pass).

Result: 12 AWG home run, 16 AWG branch A, 14 AWG branch B.

Branches are sized individually. Only the shared home run carries the full 58.5 W

## 5. CODE AND SAFETY NOTES

- **Class 2 wiring:** QTL 24VDC electronic supplies are listed Class 2 sources (100 VA maximum per output circuit).
- Minimum recommended conductor is 18 AWG (the 4.2 A maximum circuit current is within 18 AWG fixture-wire ampacity per NEC 402.5).
- Use direct burial rated low voltage cable outdoors. Under NEC Table 300.5, landscape lighting circuits not exceeding 30 V may be buried at a minimum of 6 inches when using listed cable; local codes govern.
- VOYA 24VDC circuits also fall under NEC Article 411 (lighting systems 30 V or less). Install per the NEC and applicable local codes.
- Make all splices with listed, waterproof low voltage connectors suitable for direct burial.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA 2.5" ADDITIONAL SNOOTS, OPTICS, LENS FILTERS, LAMPS, KITS, & FINISH KEY RINGS

Accessories

## SNOOTS - NO WEEP HOLES

**Flush**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-FL-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-FL-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-FL-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-FL-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-FL-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-FL-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-FL-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-FL-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-FL-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-FL-SNOOT-ASM-SS-P |

**0.5" Regress**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BB |
| BLACK | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BKT |
| BRONZE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-BZT |
| SILVER | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-SL |
| WHITE | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-A-WH |
| BRASS | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-HR-SNOOT-NO-WEEP-ASM-SS-P |

**1" Regress**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BB |
| BLACK | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BKT |
| BRONZE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-BZT |
| SILVER | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-SL |
| WHITE | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-A-WH |
| BRASS | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-1R-SNOOT-NO-WEEP-ASM-SS-P |

**30 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BB |
| BLACK | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BKT |
| BRONZE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-BZT |
| SILVER | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-SL |
| WHITE | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-A-WH |
| BRASS | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-30D-SNOOT-NO-WEEP-ASM-SS-P |

**45 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BB |
| BLACK | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BKT |
| BRONZE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-BZT |
| SILVER | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-SL |
| WHITE | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-A-WH |
| BRASS | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-45D-SNOOT-NO-WEEP-ASM-SS-P |

**60 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BB |
| BLACK | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BKT |
| BRONZE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-BZT |
| SILVER | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-SL |
| WHITE | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-A-WH |
| BRASS | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-60D-SNOOT-NO-WEEP-ASM-SS-P |


**45° Glare Shield**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-45D-GLARE-SHIELD-A-BG |
| BLACK BRONZE | VOYA-2.5-45D-GLARE-SHIELD-A-BB |
| BLACK | VOYA-2.5-45D-GLARE-SHIELD-A-BK |
| BLACK TEXTURE | VOYA-2.5-45D-GLARE-SHIELD-A-BKT |
| BRONZE | VOYA-2.5-45D-GLARE-SHIELD-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-45D-GLARE-SHIELD-A-BZT |
| SILVER | VOYA-2.5-45D-GLARE-SHIELD-A-SL |
| WHITE | VOYA-2.5-45D-GLARE-SHIELD-A-WH |
| BRASS | VOYA-2.5-45D-GLARE-SHIELD-B-P |
| STAINLESS STEEL | VOYA-2.5-45D-GLARE-SHIELD-SS-P |

**Grazer**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-GZR-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-GZR-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-GZR-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-GZR-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-GZR-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-GZR-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-GZR-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-GZR-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-GZR-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-GZR-SNOOT-ASM-SS-P |

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA 2.5" ADDITIONAL SNOOTS, OPTICS, LENS FILTERS, LAMPS, KITS, & FINISH KEY RINGS

Accessories

## SNOOTS - WITH WEEP HOLES

**0.5" Regress**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-HR-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-HR-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-HR-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-HR-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-HR-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-HR-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-HR-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-HR-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-HR-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-HR-SNOOT-ASM-SS-P |

**1" Regress**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-1R-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-1R-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-1R-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-1R-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-1R-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-1R-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-1R-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-1R-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-1R-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-1R-SNOOT-ASM-SS-P |


**30 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-30D-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-30D-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-30D-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-30D-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-30D-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-30D-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-30D-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-30D-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-30D-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-30D-SNOOT-ASM-SS-P |


**45 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-45D-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-45D-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-45D-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-45D-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-45D-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-45D-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-45D-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-45D-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-45D-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-45D-SNOOT-ASM-SS-P |

**60 Degree**




PART NUMBERS:

| | |
|---|---|
| BEIGE | VOYA-2.5-60D-SNOOT-ASM-A-BG |
| BLACK BRONZE | VOYA-2.5-60D-SNOOT-ASM-A-BB |
| BLACK | VOYA-2.5-60D-SNOOT-ASM-A-BK |
| BLACK TEXTURE | VOYA-2.5-60D-SNOOT-ASM-A-BKT |
| BRONZE | VOYA-2.5-60D-SNOOT-ASM-A-BZ |
| BRONZE TEXTURE | VOYA-2.5-60D-SNOOT-ASM-A-BZT |
| SILVER | VOYA-2.5-60D-SNOOT-ASM-A-SL |
| WHITE | VOYA-2.5-60D-SNOOT-ASM-A-WH |
| BRASS | VOYA-2.5-60D-SNOOT-ASM-B-P |
| STAINLESS STEEL | VOYA-2.5-60D-SNOOT-ASM-SS-P |

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA 2.5" ADDITIONAL SNOOTS, OPTICS, LENS FILTERS, LAMPS, KITS, & FINISH KEY RINGS

Accessories

## OPTICS - STATIC WHITE

**12 Degree**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-12 |

**16 Degree**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-16 |

**23 Degree**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-23 |

**37 Degree**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-37 |

**51 Degree**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-51 |

**Grazer**



PART NUMBERS:

| | |
|---|---|
| STATIC WHITE | ACC-VOYA-2.5-OPTIC-SW-GZR |

## OPTICS - AMBER & WARM DIM

**20 Degree**



PART NUMBERS:

| | |
|---|---|
| AMBER | ACC-VOYA-2.5-OPTIC-A-20 |
| WARM DIM | ACC-VOYA-2.5-OPTIC-WD-20 |

**26 Degree**



PART NUMBERS:

| | |
|---|---|
| AMBER | ACC-VOYA-2.5-OPTIC-A-26 |
| WARM DIM | ACC-VOYA-2.5-OPTIC-WD-26 |

**40 Degree**



PART NUMBERS:

| | |
|---|---|
| AMBER | ACC-VOYA-2.5-OPTIC-A-40 |
| WARM DIM | ACC-VOYA-2.5-OPTIC-WD-40 |

**55 Degree**



PART NUMBERS:

| | |
|---|---|
| AMBER | ACC-VOYA-2.5-OPTIC-A-55 |
| WARM DIM | ACC-VOYA-2.5-OPTIC-WD-55 |

## LENS FILTERS

**SPREAD**



PART NUMBERS:

ACC-2.5-SP


**LINEAR SPREAD**



PART NUMBERS:

ACC-2.5-LS

**WALL WASH**



PART NUMBERS:

ACC-2.5-WW

**HONEYCOMB LOUVER**



PART NUMBERS:

ACC-2.5-LV

**RETAINING RING**



PART NUMBERS:

ACC-2.5-RR


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA 2.5" ADDITIONAL SNOOTS, OPTICS, LENS FILTERS, LAMPS, KITS, & FINISH KEY RINGS

Accessories

## LAMPS

**MR16**

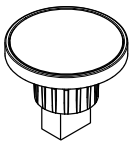


PART NUMBERS:

| | |
|---|---|
| MR16 EMERY ALLEN 1.0W 24 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-24D-2790-D |
| MR16 EMERY ALLEN 1.0W 24 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-24D-3090-D |
| MR16 EMERY ALLEN 1.0W 36 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-36D-2790-D |
| MR16 EMERY ALLEN 1.0W 36 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-36D-3090-D |
| MR16 EMERY ALLEN 1.0W 60 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-60D-2790-D |
| MR16 EMERY ALLEN 1.0W 60 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-60D-3090-D |
| MR16 EMERY ALLEN 1.0W 120 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-120D-2790-D |
| MR16 EMERY ALLEN 1.0W 120 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-1.0W-120D-3090-D |
| MR16 EMERY ALLEN 3.0W 15 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-15D-2790-D |
| MR16 EMERY ALLEN 3.0W 15 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-15D-3090-D |
| MR16 EMERY ALLEN 3.0W 24 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-24D-2790-D |
| MR16 EMERY ALLEN 3.0W 24 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-24D-3090-D |
| MR16 EMERY ALLEN 3.0W 36 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-36D-2790-D |
| MR16 EMERY ALLEN 3.0W 36 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-36D-3090-D |
| MR16 EMERY ALLEN 3.0W 60 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-60D-2790-D |
| MR16 EMERY ALLEN 3.0W 60 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-60D-3090-D |
| MR16 EMERY ALLEN 3.0W 120 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-120D-2790-D |
| MR16 EMERY ALLEN 3.0W 120 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-3.0W-120D-3090-D |
| MR16 EMERY ALLEN 5.0W 15 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-15D-2790-D |
| MR16 EMERY ALLEN 5.0W 15 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-15D-3090-D |
| MR16 EMERY ALLEN 5.0W 24 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-24D-2790-D |
| MR16 EMERY ALLEN 5.0W 24 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-24D-3090-D |
| MR16 EMERY ALLEN 5.0W 36 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-36D-2790-D |
| MR16 EMERY ALLEN 5.0W 36 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-36D-3090-D |
| MR16 EMERY ALLEN 5.0W 60 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-60D-2790-D |
| MR16 EMERY ALLEN 5.0W 60 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-60D-3090-D |
| MR16 EMERY ALLEN 5.0W 120 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-120D-2790-D |
| MR16 EMERY ALLEN 5.0W 120 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-5.0W-120D-3090-D |
| MR16 EMERY ALLEN 7.0W 15 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-15D-2790-D |
| MR16 EMERY ALLEN 7.0W 15 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-15D-3090-D |
| MR16 EMERY ALLEN 7.0W 24 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-24D-2790-D |
| MR16 EMERY ALLEN 7.0W 24 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-24D-3090-D |
| MR16 EMERY ALLEN 7.0W 36 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-36D-2790-D |
| MR16 EMERY ALLEN 7.0W 36 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-36D-3090-D |
| MR16 EMERY ALLEN 7.0W 60 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-60D-2790-D |
| MR16 EMERY ALLEN 7.0W 60 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-60D-3090-D |
| MR16 EMERY ALLEN 7.0W 120 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-120D-2790-D |
| MR16 EMERY ALLEN 7.0W 120 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-7.0W-120D-3090-D |
| MR16 EMERY ALLEN 8.0W 15 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-15D-2790-D |
| MR16 EMERY ALLEN 8.0W 15 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-15D-3090-D |
| MR16 EMERY ALLEN 8.0W 24 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-24D-2790-D |
| MR16 EMERY ALLEN 8.0W 24 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-24D-3090-D |
| MR16 EMERY ALLEN 8.0W 36 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-36D-2790-D |
| MR16 EMERY ALLEN 8.0W 36 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-36D-3090-D |
| MR16 EMERY ALLEN 8.0W 60 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-60D-2790-D |
| MR16 EMERY ALLEN 8.0W 60 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-60D-3090-D |
| MR16 EMERY ALLEN 8.0W 120 DEGREE 2700K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-120D-2790-D |
| MR16 EMERY ALLEN 8.0W 120 DEGREE 3000K STATIC WHITE 90CRI DIMMABLE | EA-MR16-8.0W-120D-3090-D |
| MR16 EMERY ALLEN 3.0W 60 DEGREE AMBER | EA-MR16-3.0W-60D-AMB |

## INSTALL KIT

**Snoot Install Kit**




PART NUMBERS:

VOYA-SNOOT-INSTALL-KIT

## FINISH KEY RING

**Finish Key Ring**



PART NUMBERS:

VOYA-FINISH-KEY-RING

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# 2.5" VOYA LUMINAIRE

Landscape Lighting Installation Instructions


## ATTENTION: Please read all instructions BEFORE installation

- Product to be installed by a licensed electrician - Field modifications void warranty
- Warranty only valid with QTL power supplies
- Diagrams for representation only and not to scale.
- For all up-lighting applications, snoots require the weep hole to be unobstructed — orient at lowest point of aim.
- PC lenses are not rated for use with halogen lamps. Do not use PC lenses in combination with halogen lamp sources.
- Requires remote LV transformer — not included.
- Verify input voltage matches transformer (12VAC vs 24VDC)
- Set DIP switch for desired output level.





## SPECIFICATIONS

- INPUT VOLTAGE: 12VAC OR 24VDC (SEE MODEL)
- DIP SWITCH: 8-POSITION FIELD-ADJUSTABLE OUTPUT
- LEAD WIRE: 36" OF 18GA. WIRE LEADS
- NPS THREAD: 1/2-14 NPS
- LAMP: MR16
- SNOOT SCREW: M5X5mm
- KNUCKLE SCREW: M8X22.5mm


- WIRING DIAGRAM (PAGE 2)
- KNUCKLE INSTALLATION (PAGE 3)
- OPTICS INSTALLATION (PAGE 3)
- DIP SWITCH INSTALLATION (PAGE 4)
- LAMP INSTALLATION (PAGE 5)
- SNOOTS INSTALLATION (PAGE 6)



| OPTICS | LAMP |
|---|---|
|  |  |
| 12°, 16°, 23°, 37°, 51°, COB Spot for GZR OPTICS | MR16 |

**SNOOTS**

| GZR | FL | HR | 1R | 30D | 45D | 60D | GLARE SHIELD |
|---|---|---|---|---|---|---|---|
|   |   |   |   |   |   |   |   |
| GRAZER | FLUSH | 0.5" RECESSED | 1" RECESSED | 30 DEGREE | 45 DEGREE | 60 DEGREE | 45 DEGREE ADAPTER |

## COMPONENTS & HARDWARE

**PROVIDED HARDWARE**

| | | | |
|---|---|---|---|
|  |  |  |  |
| M2.5 Allen Key | M4 Allen Key | Flat Head Screw Driver | 12" Omniflex® Line |
| ALLEN KEY | ALLEN KEY | SCREW DRIVER | FLEXIBLE LINE |




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


Specification subject to change. Rev-07-29-26

## WIRING DIAGRAM

LOW VOLTAGE: 24VDC

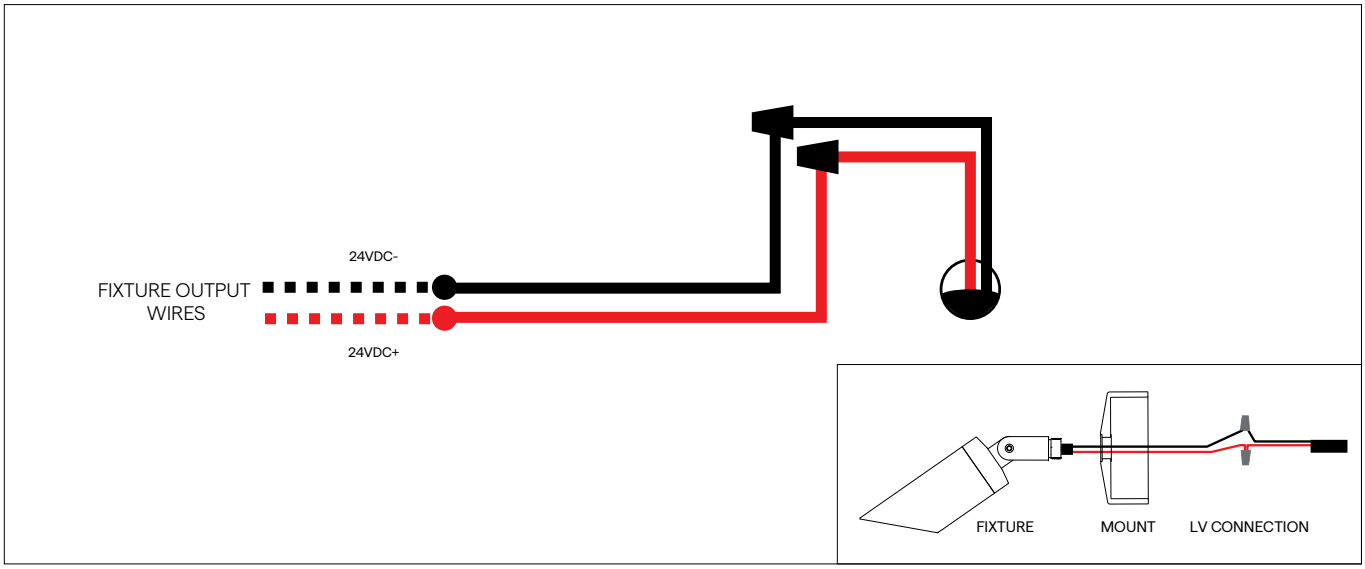



LOW VOLTAGE: 12VAC

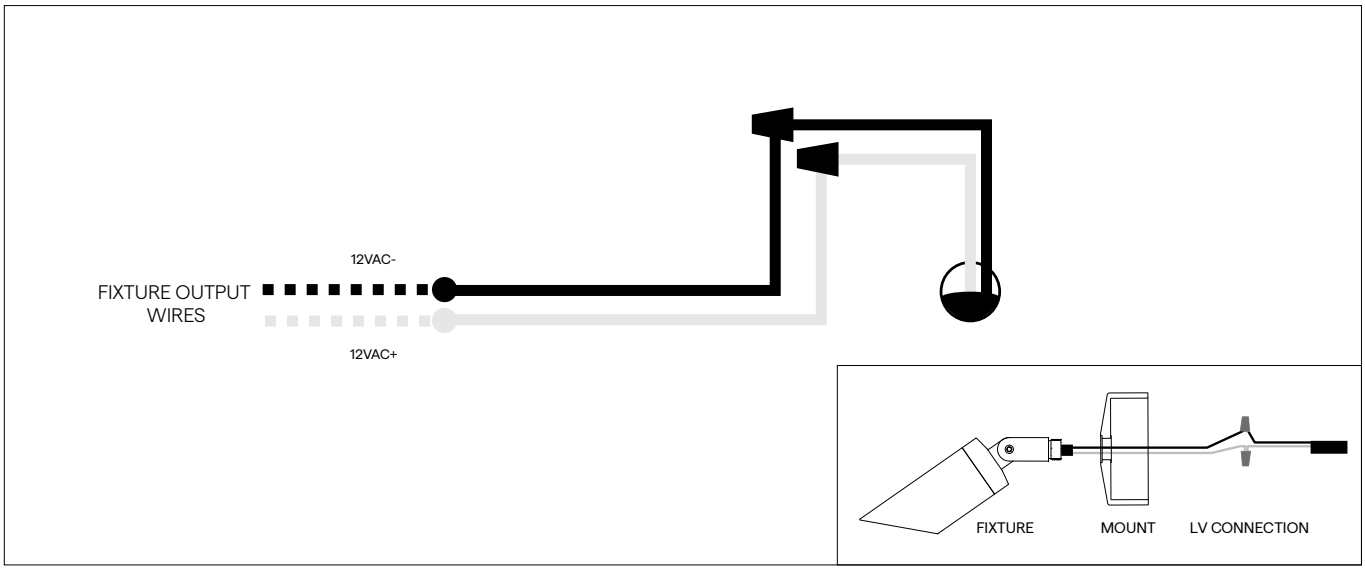





© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## KNUCKLE ADJUSTMENT

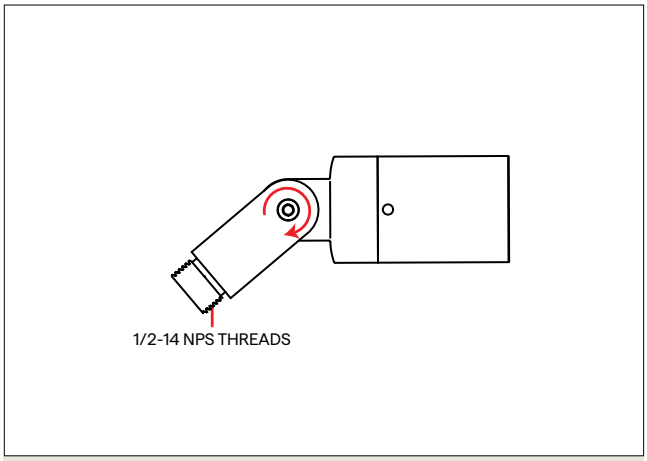



- Adjust and lock fixture at desired angle, using M4 Allen Key provided.

## OPTICS INSTALLATION

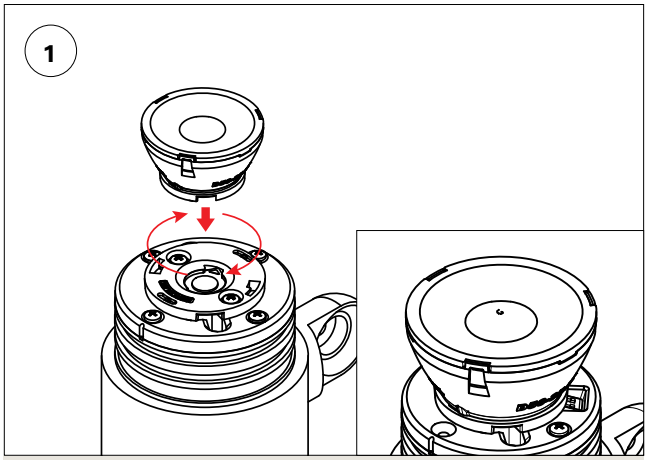


- Position the optic to align with COB holder. Apply downward pressure and rotate clockwise until it clicks into place.

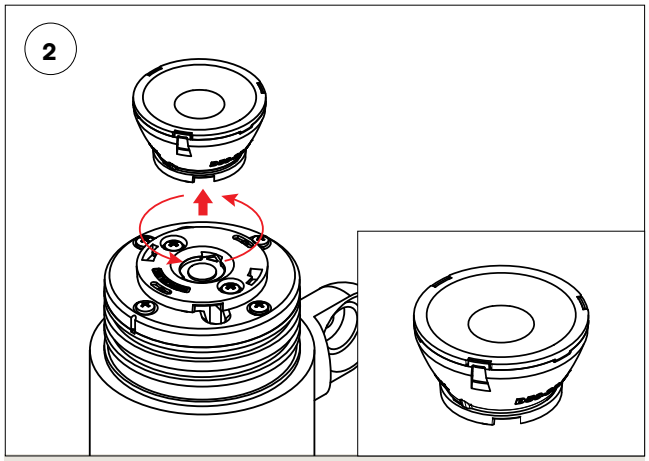



- Rotate the optic counter-clockwise until disengaged from the COB holder. Then pull up to remove.



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## DIP SWITCH ADJUSTMENT

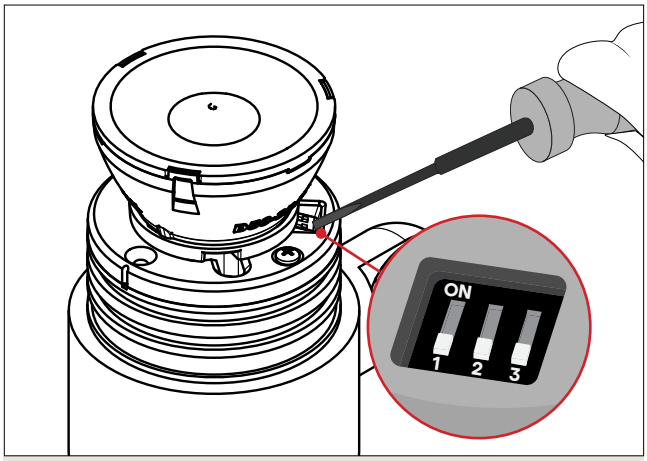


- **To Switch:** Use a flathead screwdriver to toggle dip switch positions to adjust output. Refer to chart below for output settings.

### 12VAC

VOYA-2.5-12VAC-COB-A

| Output | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| Rated Current(A) | 150 | 170 | 190 | 220 | 250 | 300 | 375 | 500 |
| DIP Code | TTT | TT⊥ | T⊥T | T⊥⊥ | ⊥TT | ⊥T⊥ | ⊥⊥T | ⊥⊥⊥ |
| Rated Power(W) | 2.9 | 3.1 | 3.3 | 3.6 | 4.1 | 4.7 | 5.4 | 6.8 |

T On ⊥ Off,

VOYA-2.5-12VAC-COB-SW

| Output | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| Rated Current(A) | 150 | 170 | 190 | 220 | 250 | 300 | 375 | 500 |
| DIP Code | TTT | TT⊥ | T⊥T | T⊥⊥ | ⊥TT | ⊥T⊥ | ⊥⊥T | ⊥⊥⊥ |
| Rated Power(W) | 4.6 | 4.9 | 5.3 | 5.9 | 6.6 | 7.9 | 9.5 | 12.5 |

T On ⊥ Off,

### 24VDC

VOYA-2.5-24VDC-COB-A

| Output | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| Rated Current(A) | 10 | 40 | 70 | 100 | 150 | 225 | 350 | 600 |
| DIP Code | ⊥⊥⊥ | T⊥⊥ | ⊥T⊥ | ⊥⊥T | TT⊥ | T⊥T | ⊥TT | TTT |
| Rated Power(W) | 1.1 | 1.4 | 1.7 | 1.9 | 2.4 | 3.1 | 4.3 | 6.4 |

T On ⊥ Off,

VOYA-2.5-24VDC-COB-SW


| Output | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| Rated Current(A) | 10 | 40 | 70 | 100 | 150 | 225 | 350 | 600 |
| DIP Code | ⊥⊥⊥ | T⊥⊥ | ⊥T⊥ | ⊥⊥T | TT⊥ | T⊥T | ⊥TT | TTT |
| Rated Power(W) | 0.7 | 1.2 | 1.8 | 2.4 | 3.3 | 4.7 | 7.1 | 12.1 |

T On ⊥ Off,




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## LAMP INSTALLATION

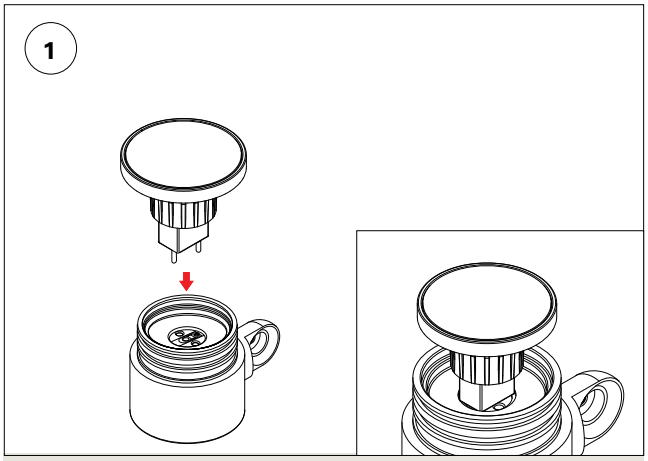


- **To Install:** Position the lamp over the top fixture opening. Apply downward pressure until the lamp engages with the lamp socket.

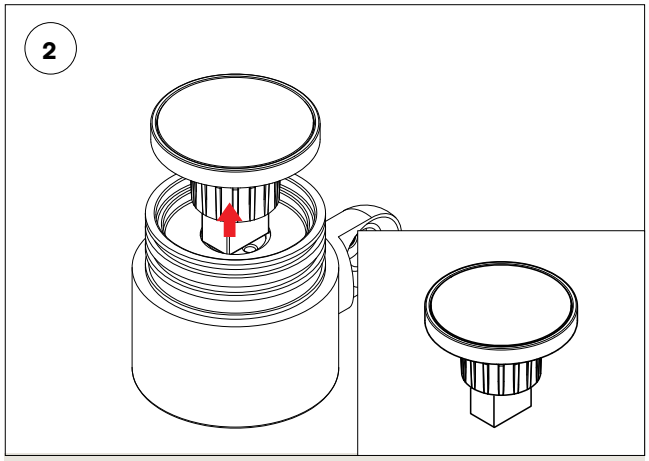



- **To Remove:** Pull the lamp straight out to disengage and remove it from the lamp socket.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## SNOOT INSTALLATION

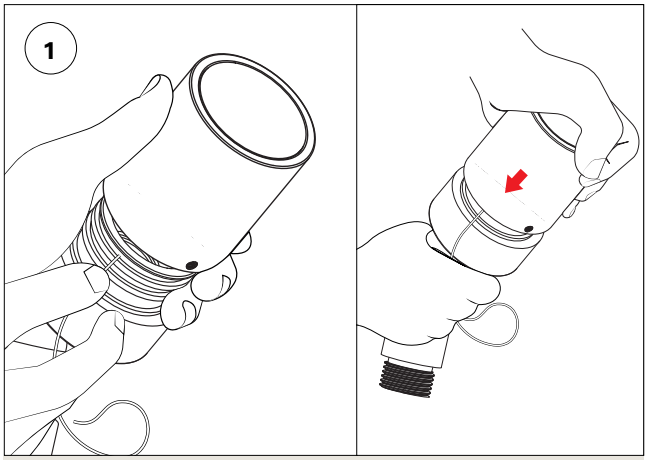



**To Install**

- **Align snoot:** Position snoot over fixture body and align it. Place the Omniflex® line over the gasket area.
- **Slide and rock onto base:** Slide snoot onto one side of fixture body. Rock gently back and forth while pressing down firmly until one side is fully seated.

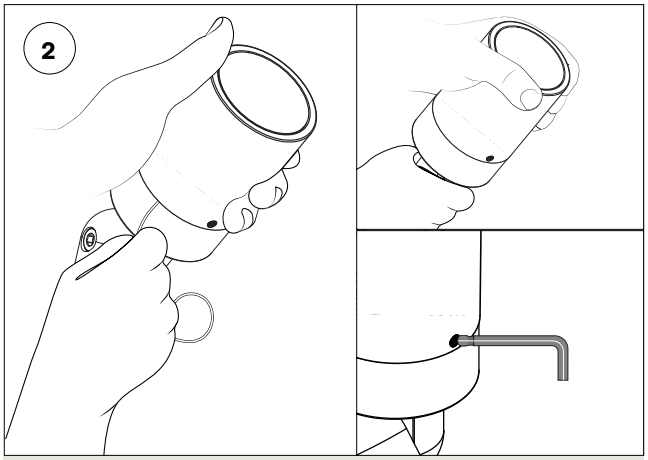



- **Secure the airtight seal:** Once the snoot is fully closed, pull the fishing wire through the snoot. Rotate the snoot until it is fully engaged, ensuring an airtight seal is maintained.
- **Secure set screw:** Tighten snoot set screw with M2.5 Allen Key, snug only. **DO NOT OVERTIGHTEN.**

**For fixtures with weep hole, orient at lowest aiming angle for proper water drainage.**

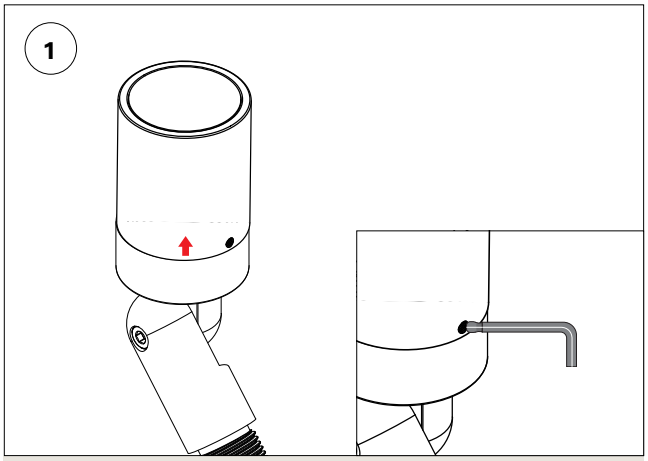


**To Remove**

- **Loosen set screw:** Loosen snoot set screw with M2.5 Allen Key, do not remove fully.

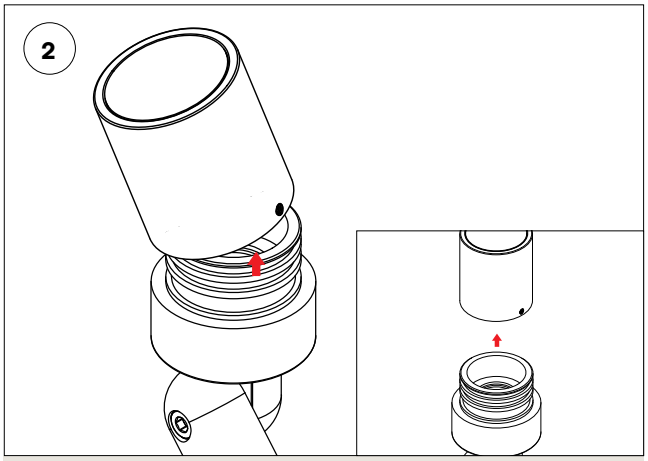


- **Rock and lift off:** Rock snoot side to side while gently pulling upward to release from fixture body.



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# DIRECT BURIAL

Landscape Lighting Installation Instructions

**ATTENTION: Please read all instructions BEFORE installation**

- Product must be installed by a licensed electrician. Field modifications void the warranty.
- Warranty is valid only with QTL power supplies.
- Diagrams are for representation only and are not to scale.
- DO NOT cover the luminaire with soil or mulch.
- Squeeze silicone into the NPT threads on Q-TRIX units before mounting the fixture.
- Burial cable must be rated for direct burial and buried a minimum of 6" deep.
- J-BOX, connectors, and wire are supplied by the installer.
- Use a liquid-tight connector for 120V wire entry to the Q-MT-48.
- Voya 3.5 fixture shipped installed on the mounts - Q-MT-48, Q-MT-49 or Q-MT-50. Follow instructions for how to splice wires

## METHODS OF INSTALLATION

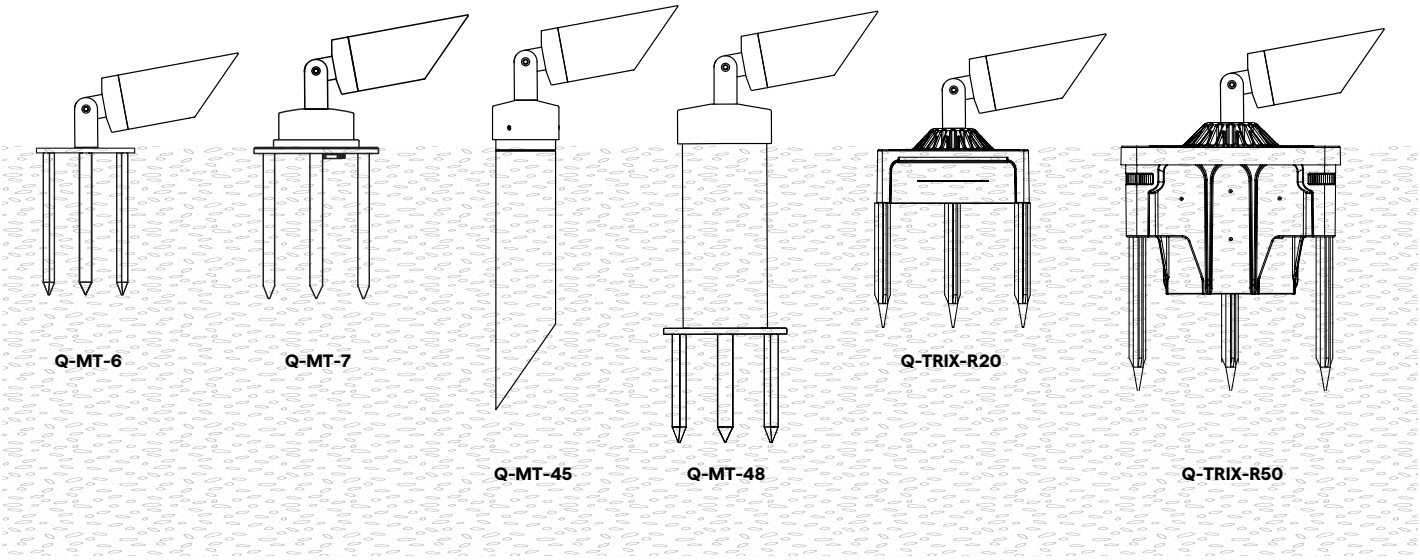



- LUMINAIRE & MOUNT COMPATIBILITY (PAGE 2)
- COMPONENTS & HARDWARE (PAGE 3)
- SURFACE PREP (PAGE 4)
- DIRECT BURIAL - NO DRIVER (PAGE 5-9)
- DIRECT BURIAL - WITH DRIVER (PAGE 10-11)
- DIRECT BURIAL - DRIVER WITH DIMMER (PAGE 12-13)
- DIRECT BURIAL - Q-TRIX (PAGE 14-15)




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## LUMINAIRE & MOUNT COMPATIBILITY

| | Q-MT-6 | Q-MT-7 | Q-MT-45 | Q-MT-48 No Driver | Q-MT-48 With Driver | Q-TRIX-R20 No Driver | Q-TRIX-R50 With Driver |
|---|---|---|---|---|---|---|---|
| VOYA-EM-1.75-MR11-12VAC | ✓ | ✓ | ✓ | | | ✓ | ✓ |
| VOYA-EM/SM-2.5 | ✓ | ✓ | ✓ | | | ✓ | ✓ |
| VOYA-EM/SM-3.0-PAR20/GU10 | | | | ✓ | | | |
| VOYA-EM/SM-3.5-COB-120VAC | | | | | ✓ | | |
| Excelsior UL-1 | ✓ | ✓ | | | | | |
| Excelsior UL-1L | ✓ | ✓ | | | | | |
| Excelsior UL-2 | ✓ | ✓ | | | | | |
| Excelsior UL-2L | ✓ | ✓ | | | | | |
| Excelsior UL-4 | ✓ | ✓ | | | | | |
| Excelsior UL-4L | ✓ | ✓ | | | | | |
| Excelsior UL-5 | ✓ | ✓ | | | | | |
| Excelsior UL-5L | ✓ | ✓ | | | | | |
| Excelsior UL-6 | ✓ | ✓ | | | | | |
| Excelsior UL-6L | ✓ | ✓ | | | | | |
| Excelsior UL-7 | ✓ | ✓ | | | | | |
| Excelsior UL-7L | ✓ | ✓ | | | | | |
| Excelsior PL-1 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-2 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-3 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-4 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-10 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-11 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-15 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-23 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-7 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-7L | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-27 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-28 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-5 | ✓ | ✓ | ✓ | | | | |
| Excelsior PL-6 | ✓ | ✓ | ✓ | | | | |




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# DIRECT BURIAL

Landscape Lighting Installation Instructions

**Q-MT-6**

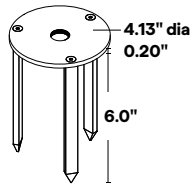



**Q-MT-7**

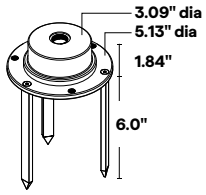



With Water Protection

**Q-MT-45**

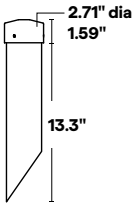



**Q-MT-48**

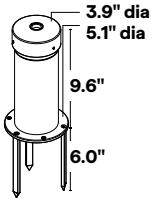



With Water Protection
No Driver | With Driver

**Q-TRIX-R20**

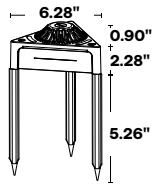


With Water Protection
No Driver








**Q-TRIX-R50**

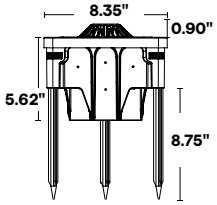





With Water Protection
With Driver

## COMPONENTS & HARDWARE

**PROVIDED HARDWARE**

| | | | |
|---|---|---|---|
|   **#PN** Q-MT-7 **QTY** 3 |   **#PN** Q-MT-6, Q-MT-7 **QTY** 3, 3 |   **#PN** Q-MT-45 **QTY** 3 |   **TYPE** SCREWS For Q-TRIX-R50 **QTY** 3 |
| M4x10mm | M5x12mm | M5x6mm | 1/4"-20x1" |
| FLAT HEAD HEX SCREW | PHILLIPS FLAT HEAD SCREW | SET SCREW | SERRATED-FLANGE HEX HEAD SCREWS |
|   **TYPE** SCREWS For Q-TRIX-R20 **QTY** 3 |   **#PN** Q-MT-6, Q-MT-7, Q-MT-48 **QTY** 3, 3, 3 |   **TYPE** STAKE **QTY** 3 |   **TYPE** STAKE **QTY** 3 |
| 6-32x5/8" | Stake: Use M5×12mm Phillips FH screws | Stake for Q-TRIX-R20 | Stake for Q-TRIX-R50 |
| PHILLIPS FLAT HEAD THREAD SCREW | PLANTING STAKE | PLANTING STAKE | PLANTING STAKE |

**RECOMMENDED HARDWARE** | **SUGGESTED TOOLS/MATERIALS**

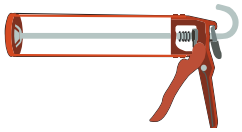
| | | | |
|---|---|---|---|
|  **#PN** Q-MT-6 **QTY** 1 |  **#PN** Q-MT-7, Q-MT-48 **QTY** 1, 1 |  |  |
| 1/2-14 NPS HEX NUT | 1/2" Liquid-Tight Connector (By Others) | Waterproof Silicone | |
| HEX NUT / JAM NUT | CONDUIT CONNECTOR | ALL PURPOSE SILICONE | CAULKING GUN |




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## SURFACE PREP

### EXCAVATE (DIG HOLE): Q-MT-6, Q-MT-7, Q-MT-45, Q-MT-48

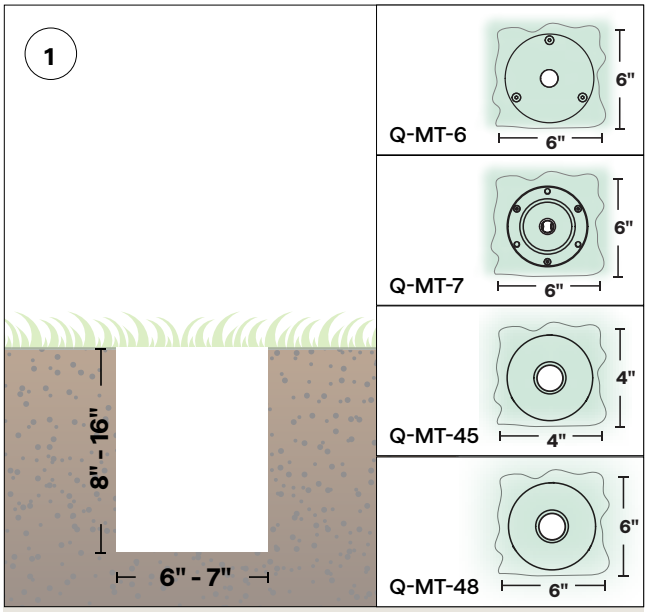



- Dig the hole to match the size of the housing for the product, as shown above for the hole length and width.

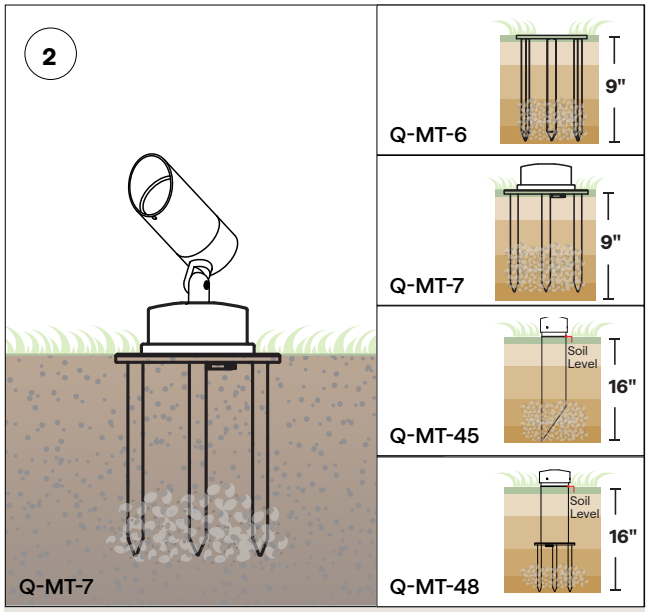



- Dig the hole to match the size of the housing for the product, as shown above for the hole depth.

### EXCAVATE (DIG HOLE): Q-TRIX-R20, Q-TRIX-R50

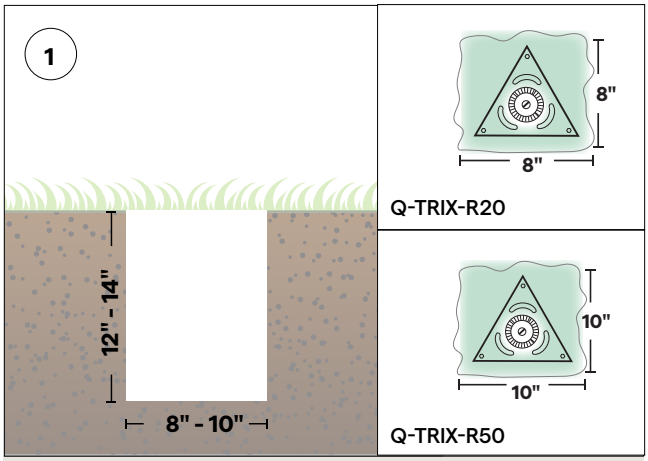


- Dig the hole to match the size of the housing for the product, as shown above for the hole length and width.

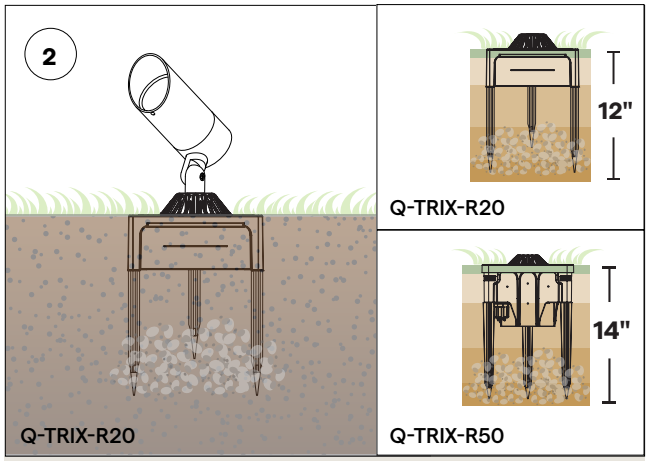


- Dig the hole to match the size of the housing for the product, as shown above for the hole depth.





© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# DIRECT BURIAL


Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - NO DRIVER**
Q-MT-6

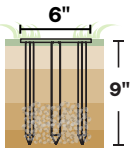


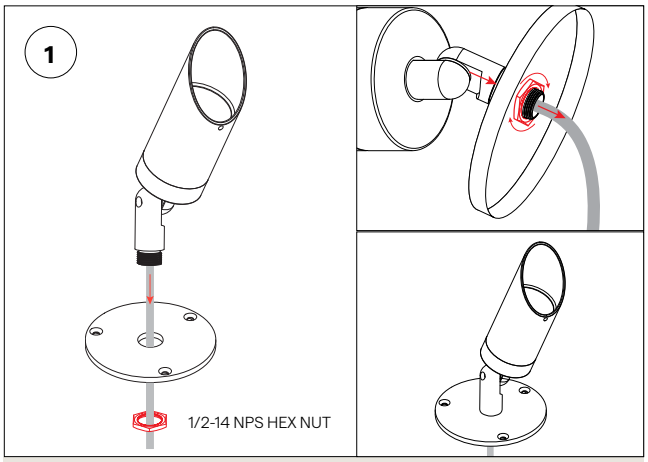

- Feed the fixture lead wire down through the plate, then screw fixture down with HEX NUT until fully seated.

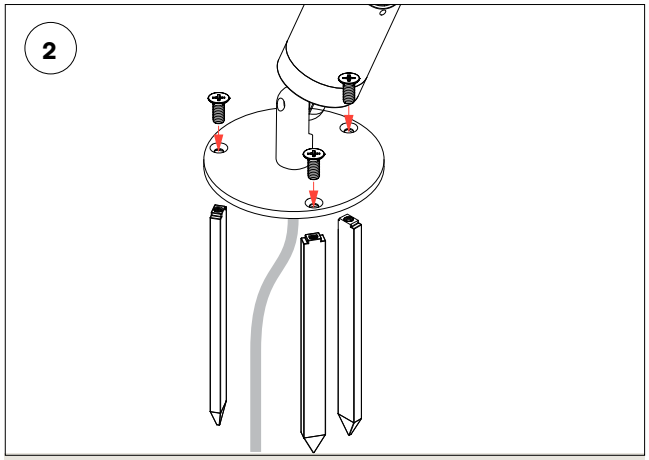


- Attach the three (3) planting stakes to the underside of the mount using the supplied screws.

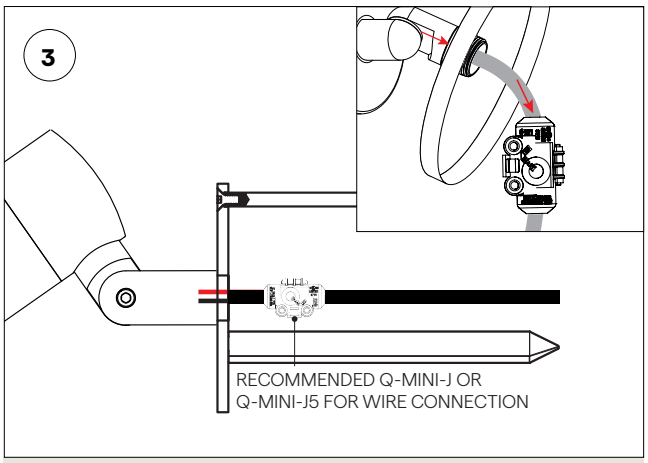


- Use liquid-tight wire nuts or QTL Q-Mini-J and follow the wiring diagram in the luminaire installations.
- Follow the wiring diagram in the luminaire instructions.

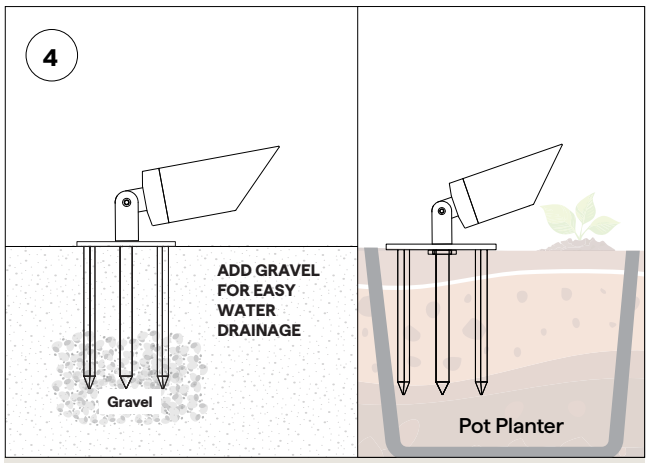


- Add gravel for easy drainage then backfill hole with soil as shown.

**DO NOT COVER THE LUMINAIRE.**





© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# DIRECT BURIAL


Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - NO DRIVER**
Q-MT-7

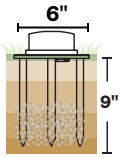


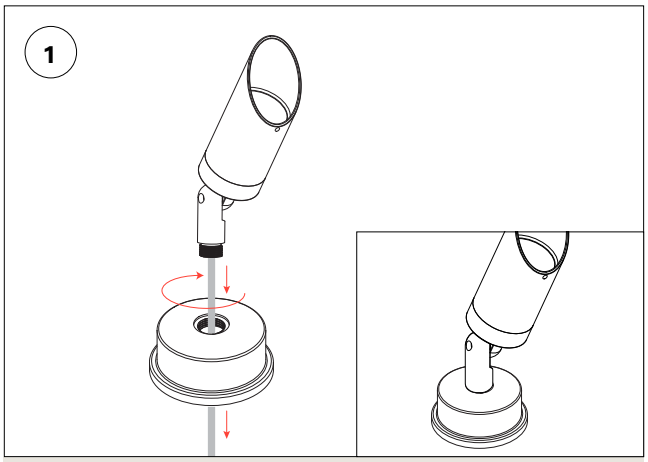

- Feed the fixture lead wire down through the canopy, then thread the fixture stem into the canopy opening and rotate until fully seated.

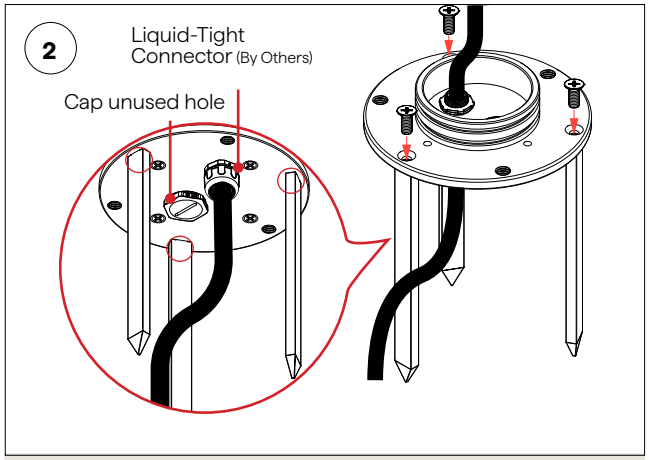


- Route the wire into 1/2" liquid-tight connector.
- Attach the three (3) planting stakes to the underside of the mount using the supplied screws.

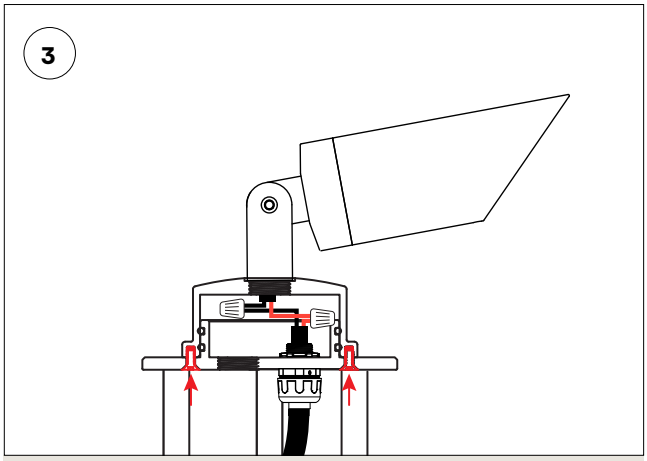


- Follow the wiring diagram in the luminaire instructions. Install canopy screws from under plate to complete the installation.

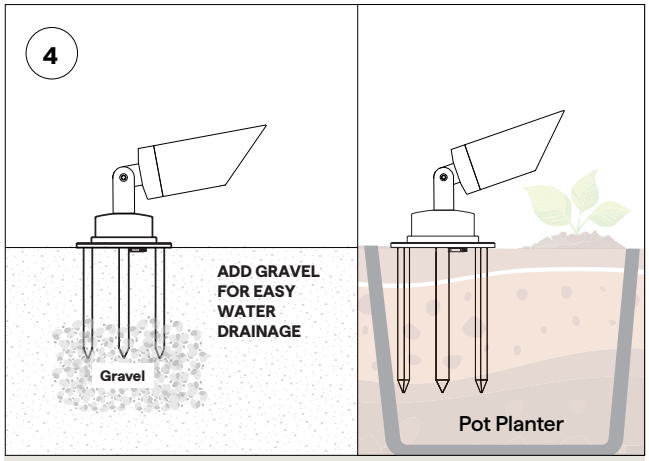


- Add gravel for easy drainage then backfill hole with soil as shown.

**DO NOT COVER THE LUMINAIRE.**





© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# DIRECT BURIAL


Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - NO DRIVER**
Q-MT-45

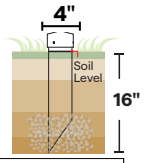


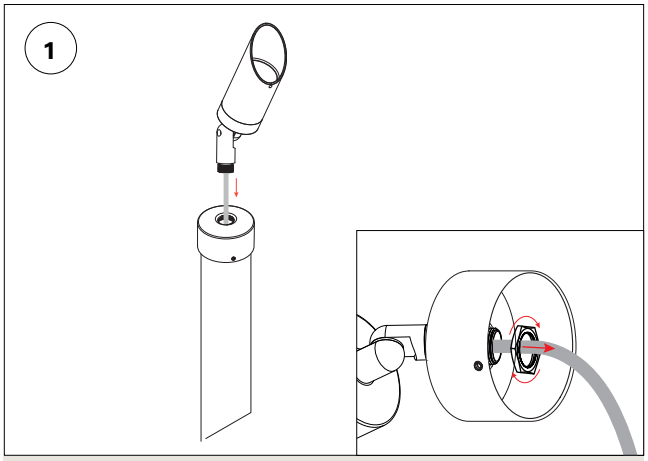

- Feed the fixture lead wire down through the canopy, then thread the fixture stem into the canopy opening and rotate until fully seated.

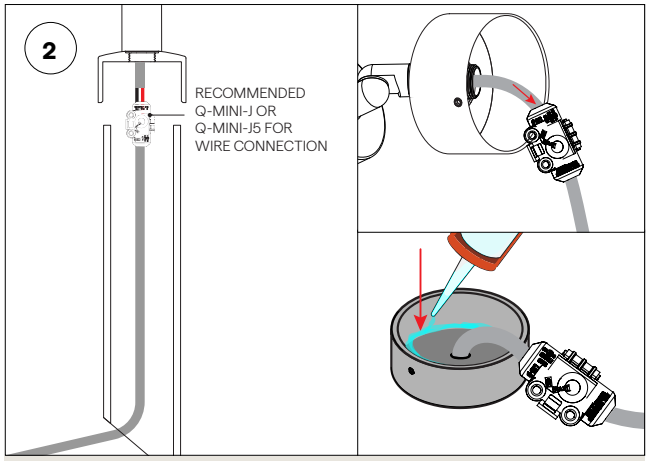


- Pull supply wire out of the PVC tube and splice the fixture wires.
- Use liquid-tight wire nuts or QTL Q-Mini-J and follow the wiring diagram in the luminaire installations.
- After wiring apply a 3/8-inch bead of silicone to the inner corner of the Q-MT-45 cap. Use a finger or tool to spread the bead evenly, ensuring all corners are fully covered.

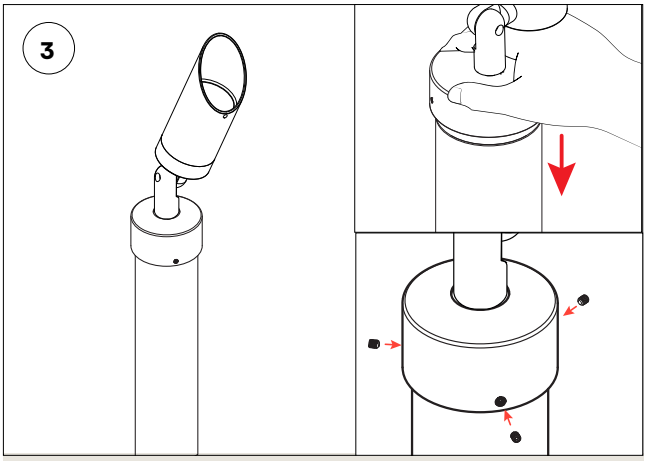


- Place canopy over tube and Press the cap firmly until it is fully seated over the Q-MT-48 tube.
- Insert the three (3) side set screws and tighten until firm. Allow the silicone to set for 2 hours before testing or powering the device.
- Connection complete ready for burial.

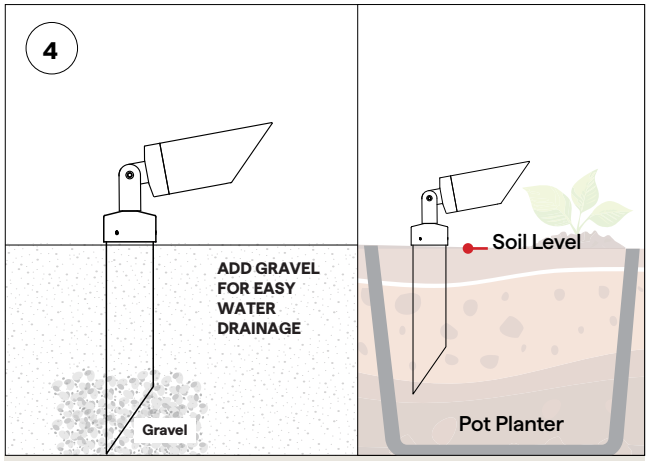


- Add gravel for easy drainage then backfill hole with soil as shown.

**DO NOT COVER THE LUMINAIRE.**





© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# DIRECT BURIAL


Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - NO DRIVER**
Q-MT-48

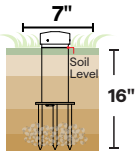


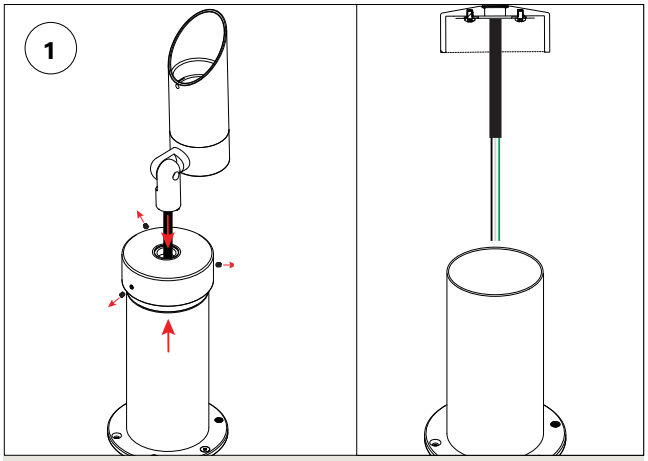

- Remove the set screws, then remove the top cap.
- Install fixture onto canopy.
- Feed the fixture lead wire down through the canopy then thread the fixture into the canopy opening and rotate until fully seated.

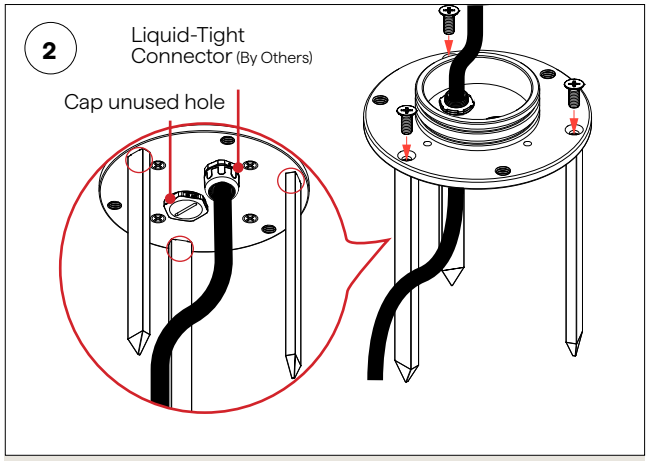


- Route the wire into 1/2" liquid-tight connector (by others).
- Attach the three (3) planting stakes to the underside of the mount using the supplied screws.

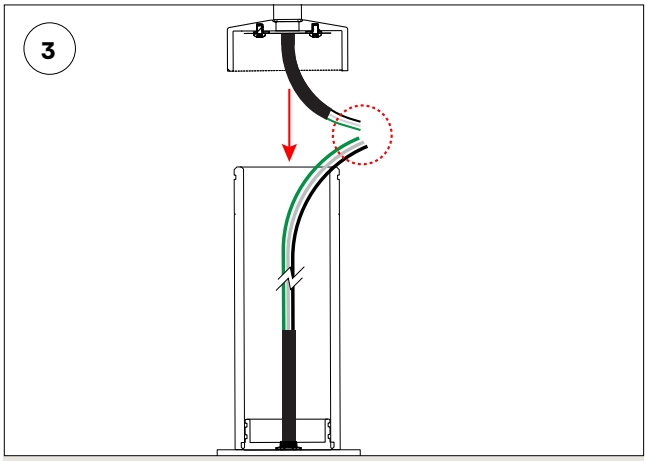


- For ease of splicing, pull the line-voltage wire out of the tube to splice it to the fixture wire using wire nuts (by others) follow luminaire wiring instructions.

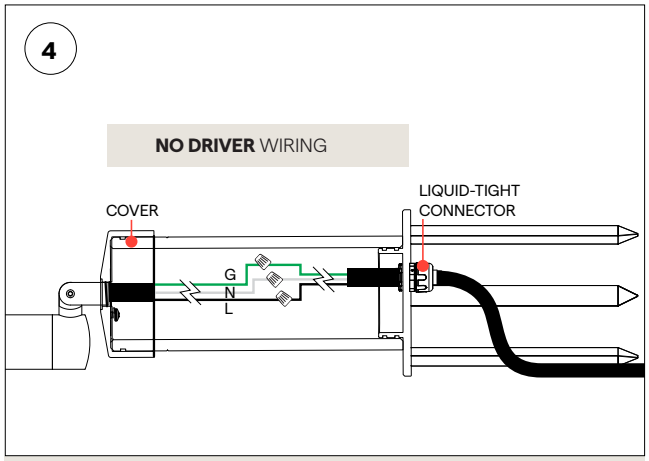



- Visual representation of complete wiring.
- Follow the wiring diagram in the luminaire instructions.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DIRECT BURIAL - NO DRIVER**
Q-MT-48

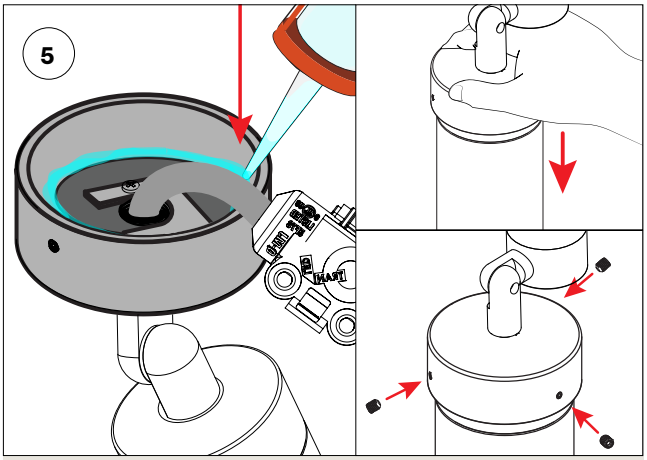


- After wiring apply a 3/8-inch bead of silicone to the inner corner of the Q-MT-48 top cap. Use a finger or tool to spread the bead evenly, ensuring all corners are fully covered.
- Place canopy over tube and Press the cap firmly until it is fully seated over the Q-MT-48 tube.
- Insert the three (3) side set screws and tighten until firm. Allow the silicone to set for 2 hours before testing or powering the device.
- Connection complete ready for burial.

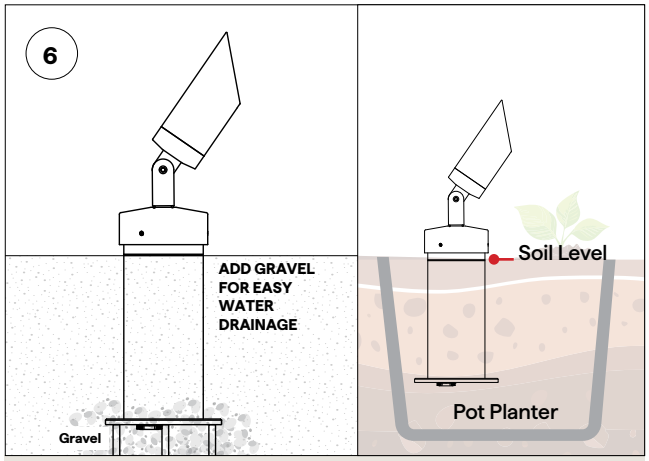



- Add gravel for easy drainage then backfill hole with soil as shown.


**DO NOT COVER THE LUMINAIRE.**




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DIRECT BURIAL - WITH DRIVER**
Q-MT-48

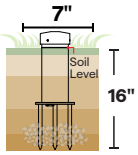


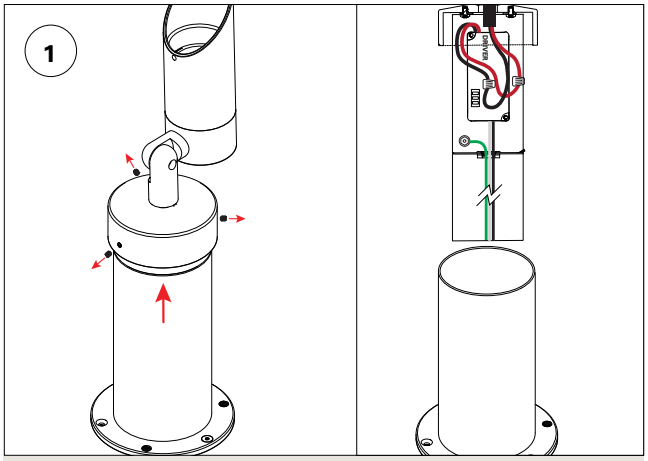

- Remove the set screws, then remove the top cap along with driver attached.

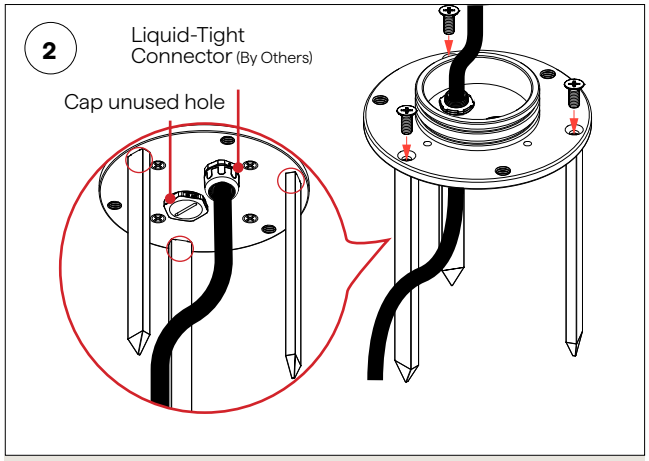


- Route the wire into 1/2" liquid-tight connector (by others).
- Attach the three (3) planting stakes to the underside of the mount using the supplied screws.

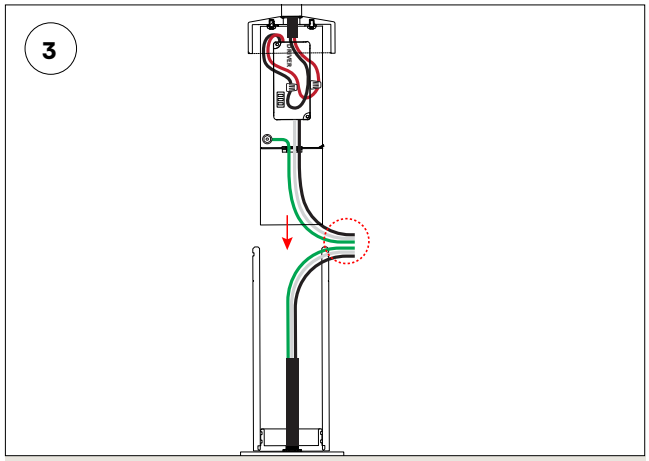


- For ease of splicing, pull the line-voltage wire out of the tube and splice it to the fixture wire using wire nuts (by others) follow luminaire wiring instructions.

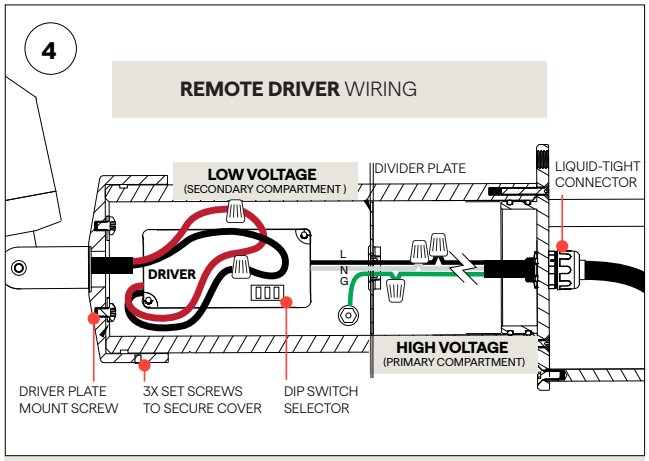



- Visual representation of complete wiring.
- Follow the wiring diagram in the luminaire instructions.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DIRECT BURIAL - WITH DRIVER**
Q-MT-48

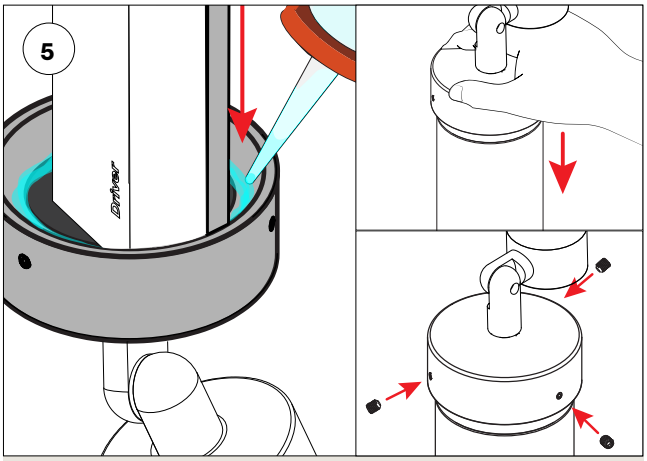


- Apply a 3/8-inch bead of silicone to the inner corner of the Q-MT-48 top cap. Use a finger or tool to spread the bead evenly, ensuring all corners are fully covered.
- Place canopy over tube and Press the cap firmly until it is fully seated over the Q-MT-48 tube.
- Insert the three (3) side set screws and tighten until firm. Allow the silicone to set for 2 hours before testing or powering the device.
- Connection complete ready for burial.

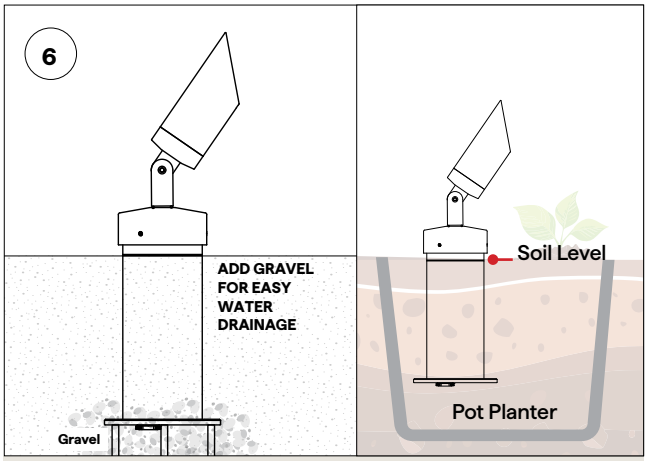



- Add gravel for easy drainage then backfill hole with soil as shown.


**DO NOT COVER THE LUMINAIRE.**




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DIRECT BURIAL - DRIVER WITH DIMMER**
Q-MT-48

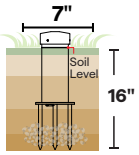


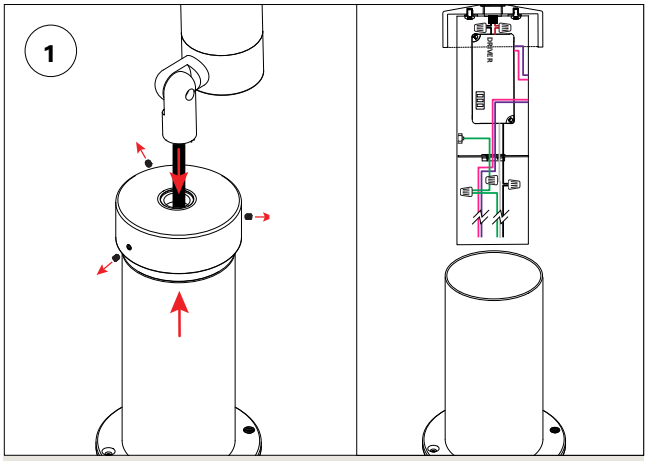

- Remove the set screws, then remove the top cap along with driver attached.

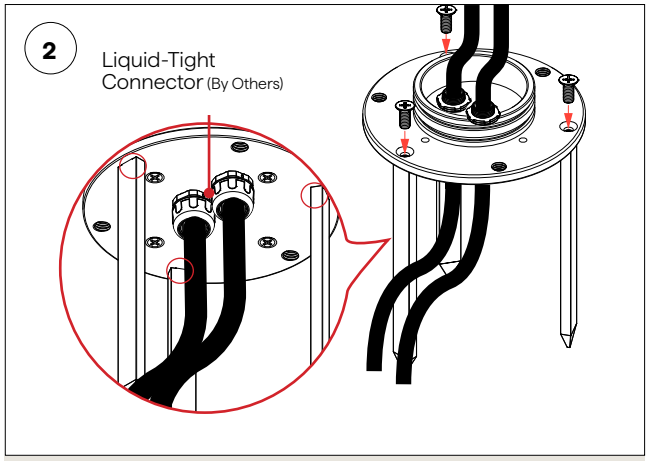


- Route the wire into 1/2" liquid-tight connector (by others).
- Attach the three (3) planting stakes to the underside of the mount using the supplied screws.

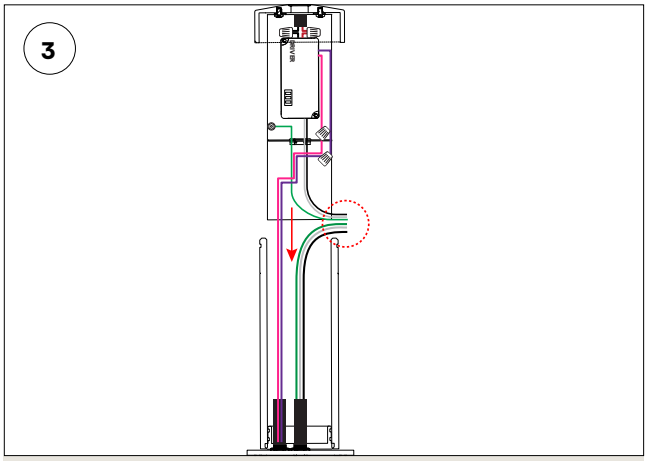


- For ease of splicing, pull the line-voltage wire out of the tube and splice it to the fixture wire using wire nuts (by others) follow luminaire wiring instructions.

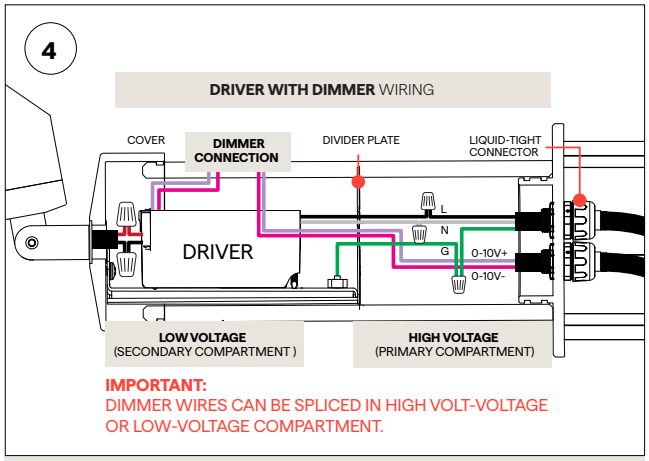



- Visual representation of complete wiring.
- Follow the wiring diagram in the luminaire instructions.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **DIRECT BURIAL - DRIVER WITH DIMMER**
Q-MT-48

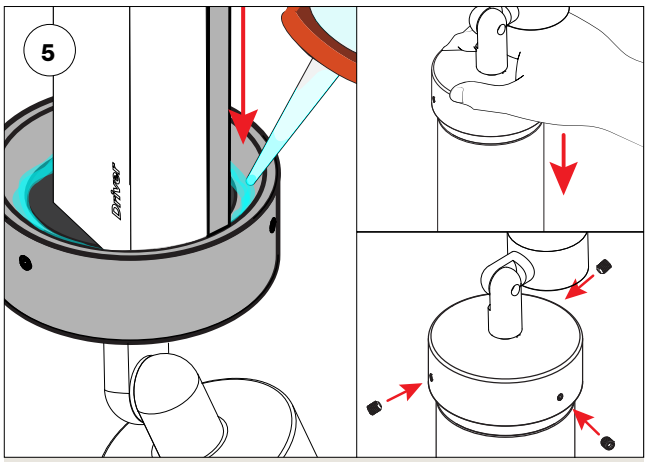


- Apply a 3/8-inch bead of silicone to the inner corner of the Q-MT-48 top cap. Use a finger or tool to spread the bead evenly, ensuring all corners are fully covered.
- Place canopy over tube and Press the cap firmly until it is fully seated over the Q-MT-48 tube.
- Insert the three (3) side set screws and tightened until firm. Allow the silicone to set for 2 hours before testing or powering the device.
- Connection complete ready for burial.

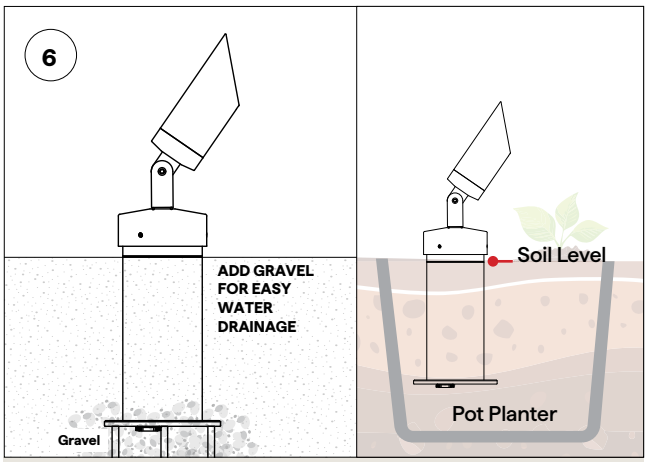


- Add gravel for easy drainage then backfill hole with soil as shown.

**DO NOT COVER THE LUMINAIRE.**




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# DIRECT BURIAL

Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - Q-TRIX NO DRIVER**
Q-TRIX-R20

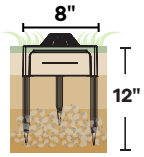



**1**

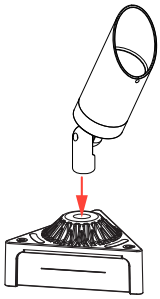


- Remove the cap to expose the 1/2" NPT threads and center knockout (KO), then install the fixture.

**IMPORTANT**
SQUEEZE SILICONE INTO THE THREADS
BEFORE MOUNTING FIXTURE


**2**

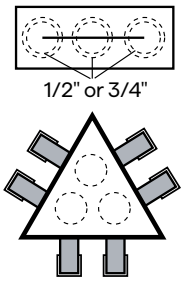

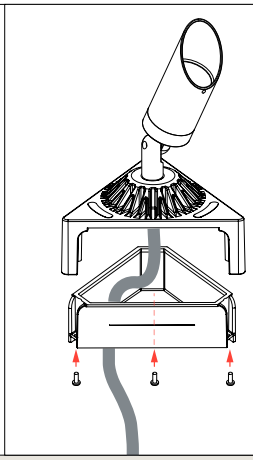
- Complete the wiring and power connection, then secure the bottom of the Q-TRIX unit with the three (3) supplied screws.


**3**

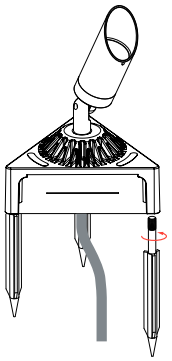

- Install the three (3) stakes to the Q-TRIX-R20 by screwing them in place in the direction shown.

**4**

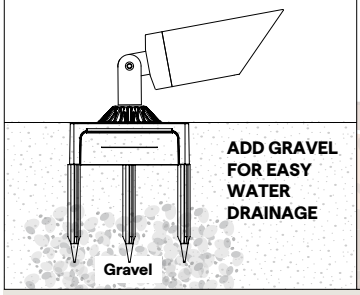

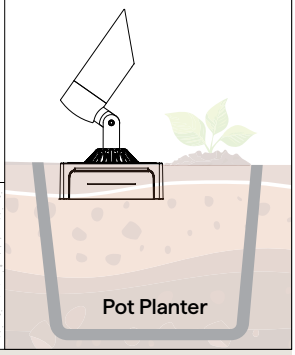
- Add gravel for easy drainage then backfill hole with soil as shown.
- Refer to the Q-TRIX-R20 product page for more detailed installation guidelines.

**DO NOT COVER THE LUMINAIRE.**




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# DIRECT BURIAL


Landscape Lighting Installation Instructions

MOUNTING METHOD: **DIRECT BURIAL - Q-TRIX WITH DRIVER**

Q-TRIX-R50

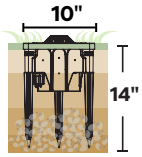



**1**

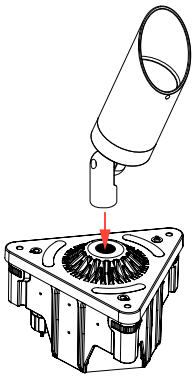

- Remove the cap to expose the 1/2" NPT threads and center knockout (KO), then install the fixture.


**IMPORTANT**
SQUEEZE SILICONE INTO THE THREADS
BEFORE MOUNTING FIXTURE

**2**

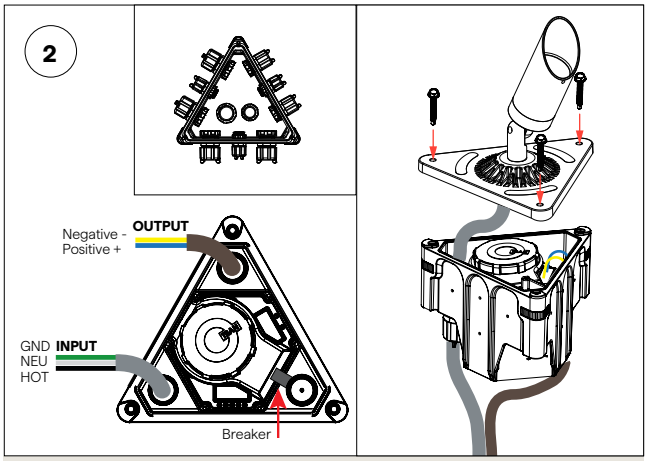



- Complete the wiring and power connection, then secure the bottom of the Q-TRIX unit with the three (3) supplied screws.

**3**

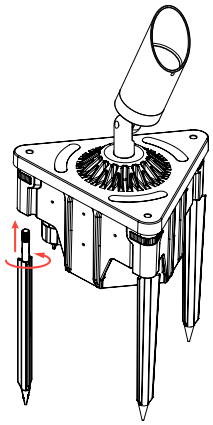

- Install the three (3) stakes to the Q-TRIX-R50 by screwing them in place in the direction shown.

**4**

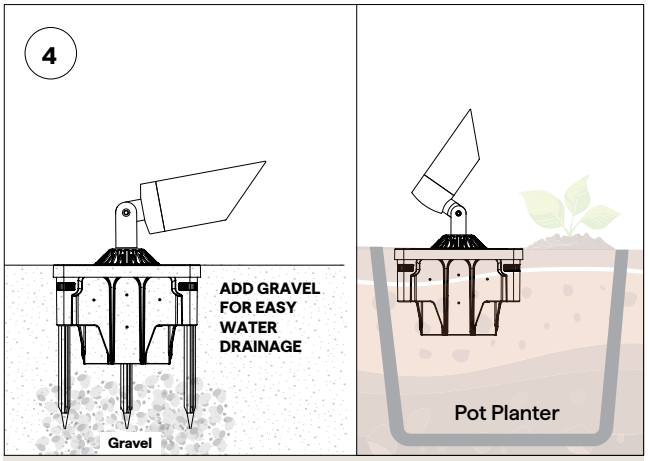


- Add gravel for easy drainage then backfill hole with soil as shown.
- Refer to the Q-TRIX-R50 product page for more detailed installation guidelines.

**DO NOT COVER THE LUMINAIRE.**



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# SURFACE & RECESSED J-BOX

Landscape Lighting Installation Instructions

**ATTENTION: Please read all instructions BEFORE installation**

- Product must be installed by a licensed electrician. Field modifications void the warranty.
- Warranty is valid only with QTL power supplies.
- Diagrams are for representation only and are not to scale.
- Apply silicone around the edge of the canopy for additional water protection.
- Ensure the J-BOX is flush and securely fastened before mounting the canopy.
- J-BOX, conduit, and connectors are supplied by the installer — not included.
- RISK OF FIRE OR INJURY / SAVE THESE INSTRUCTIONS
- Install per NEC and local codes.

## METHODS OF INSTALLATION

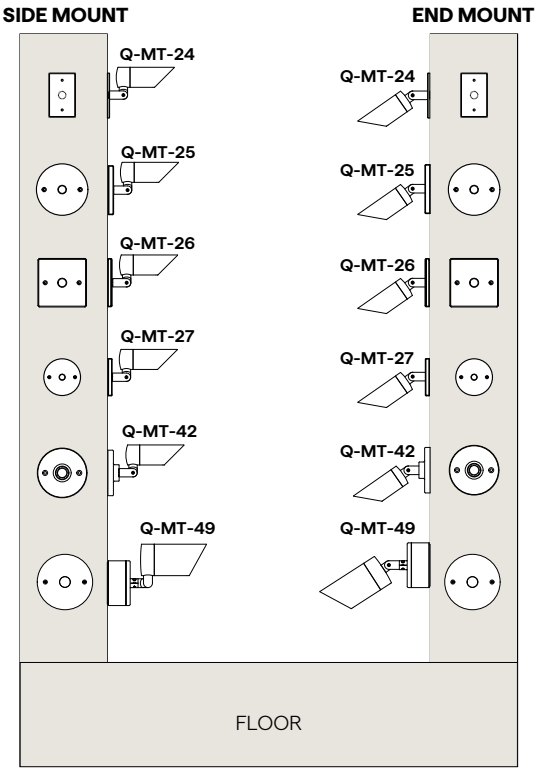



- LUMINAIRE & MOUNT COMPATIBILITY (PAGE 2)
- COMPONENTS & HARDWARE (PAGE 3)
- SURFACE/WALL J-BOX - NO DRIVER (PAGE 4)
- RECESSED J-BOX - NO DRIVER (PAGE 5)
- RECESSED J-BOX - 120V DRIVER (PAGE 6)




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE & RECESSED J-BOX

Landscape Lighting Installation Instructions

## LUMINAIRE & MOUNT COMPATIBILITY

| | Q-MT-24 | Q-MT-25 | Q-MT-26 | Q-MT-27 | Q-MT-42 | Q-MT-49BF No Driver | Q-MT-49BF With Driver | Q-MT-49SF No Driver | Q-MT-49SF With Driver |
|---|---|---|---|---|---|---|---|---|---|
| VOYA-EM-1.75-MR11-12VAC | ✓ | ✓ | ✓ | ✓ | ✓ | | | | |
| VOYA-EM/SM-2.5 | ✓ | ✓ | ✓ | ✓ | ✓ | | | | |
| VOYA-EM/SM-3.0-PAR20/GU10 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | |
| VOYA-EM/SM-3.5-COB-120VAC | | | | | | | ✓ | | ✓ |
| Excelsior DL-6 | | ✓ | | ✓ | | | | | |
| Excelsior DL-7 | | ✓ | | ✓ | | | | | |
| Excelsior DL-8 | | ✓ | | ✓ | | | | | |
| Excelsior DL-10 | | ✓ | | ✓ | | | | | |
| Excelsior DL-10L | | ✓ | | ✓ | | | | | |
| Excelsior DL-11 | | ✓ | | ✓ | | | | | |
| Excelsior DL-11L | | ✓ | | ✓ | | | | | |
| Excelsior DL-12 | | ✓ | | ✓ | | | | | |
| Excelsior DL-12L | | ✓ | | ✓ | | | | | |
| Excelsior DL-13 | | ✓ | | ✓ | | | | | |
| Excelsior DL-13L | | ✓ | | ✓ | | | | | |
| Excelsior DL-14 | | ✓ | | ✓ | | | | | |
| Excelsior DL-14L | | ✓ | | ✓ | | | | | |
| Excelsior DL-28 | ✓ | ✓ | ✓ | ✓ | | | | | |
| Excelsior DL-29 | ✓ | ✓ | ✓ | ✓ | | | | | |
| Excelsior DL-30 | ✓ | ✓ | ✓ | ✓ | | | | | |
| Excelsior UL-28 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior UL-29 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior UL-30 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-1 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-1L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-2 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-2L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-4 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-4L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-5 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-5L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-6 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-6L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-23 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-24 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-25 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-26 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-27 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-28 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-7 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-7L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-8 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-8L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-10 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-10L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-12 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-12L | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-29 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-30 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-31 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-38 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-39 | | ✓ | ✓ | ✓ | | | | | |
| Excelsior WA-40 | | ✓ | ✓ | ✓ | | | | | |



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# SURFACE & RECESSED J-BOX

Landscape Lighting Installation Instructions




## SURFACE/WALL J-BOX PLATES

### Q-MT-24

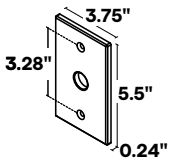



### Q-MT-42

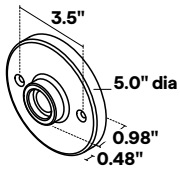



## RECESSED J-BOX PLATES


### Q-MT-25

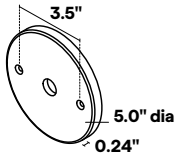


### Q-MT-26

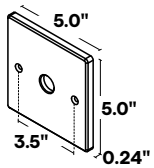



### Q-MT-49

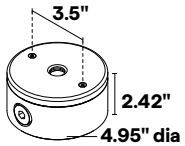



With Water Protection

### Q-MT-27

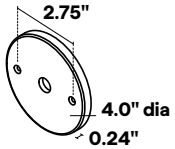



## RECOMMENDED JUNCTION BOXES (BY OTHERS)

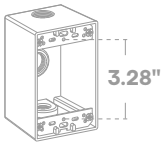



6-32x1.25"

SINGLE GANG
WEATHERPROOF J-BOX

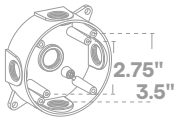



10-24x 1.25"

4/O
WEATHERPROOF J-BOX

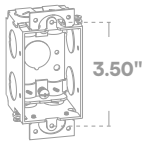



6-32×1.25"

SINGLE GANG
RECESSED J-BOX

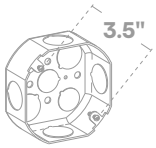


8-32x1.25"

4/O
RECESSED J-BOX

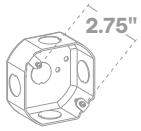



8-32x1.25"

3/O
RECESSED J-BOX

## COMPONENTS & HARDWARE


### PROVIDED HARDWARE




| #PN | QTY |
|---|---|
| Q-MT-24 | 2 |
| Q-MT-49 | 2 |

6-32x1.25"


FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-25 | 2 |
| Q-MT-26 | 2 |
| Q-MT-27 | 2 |

8-32x1.25"

FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-42 | 2 |

10-24x 1.25"

FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-42 | 1 |

10-32x3/16"

SET SCREW


### SUGGESTED TOOLS/MATERIALS



| #PN | QTY |
|---|---|
| Q-MT-24 | 1 |
| Q-MT-25 | 1 |
| Q-MT-26 | 1 |
| Q-MT-27 | 1 |


1/2-14 NPS HEX NUT

HEX NUT / JAM NUT



Waterproof Silicone

ALL PURPOSE SILICONE

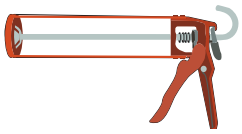

CAULKING GUN


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE & RECESSED J-BOX


Landscape Lighting Installation Instructions

## MOUNTING METHOD: **SURFACE/WALL J-BOX - NO DRIVER**


Q-MT-24, Q-MT-42

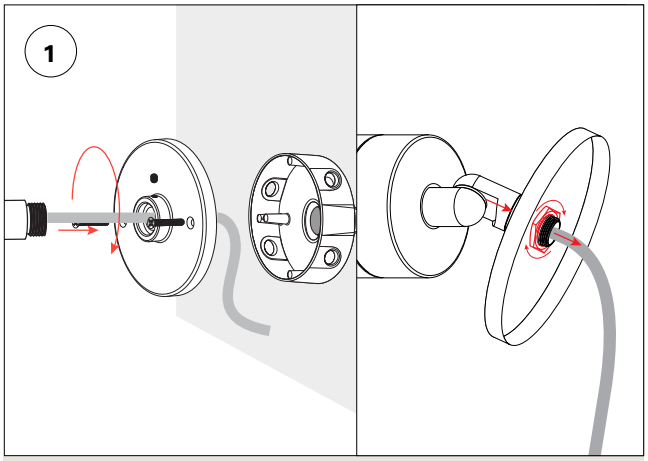



- Prepare the J-BOX by removing knockouts for wire entry
- Install the surface-mount J-BOX on the wall following the manufacturer's instructions.
- Bring the power supply wires through the J-BOX connectors.
- Q-MT-42: Install the fixture onto the canopy and screw it on until seated.
- Q-MT-24: Install the fixture onto the canopy and secure it with the provided jam nut.

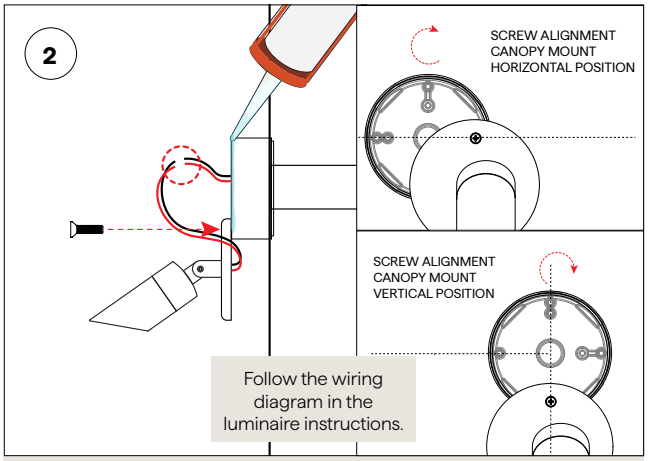


- Mount one side of the canopy with the provided screws.
- Cut the wires to length as needed and splice the fixture and J-BOX wires together.
- Add a bead of silicone around the trim of the J-BOX for additional water protection as needed.

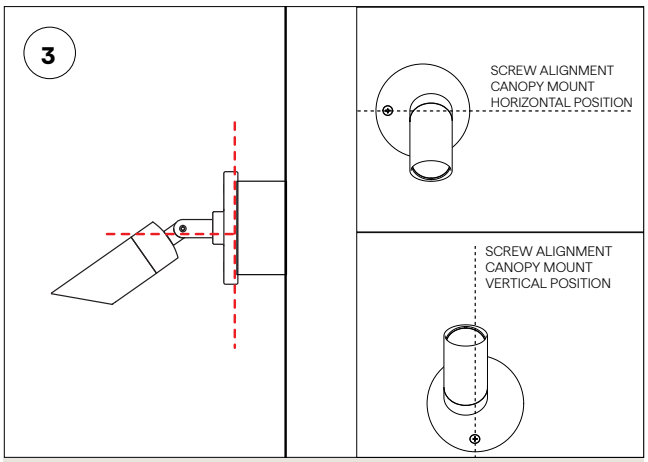


- Tuck the excess wires into the J-BOX, rotate the canopy into position, and install the provided screw into the J-BOX.

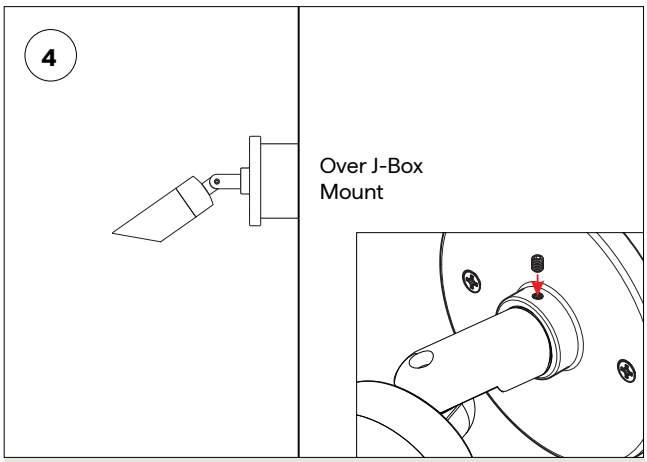



- Q-MT-42: The fixture can be rotationally adjusted slightly with the provided set screw on the canopy. Other canopies do not have this feature.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## MOUNTING METHOD: **RECESSED J-BOX - NO DRIVER**

Q-MT-25, Q-MT-26, Q-MT-27, Q-MT-49BF

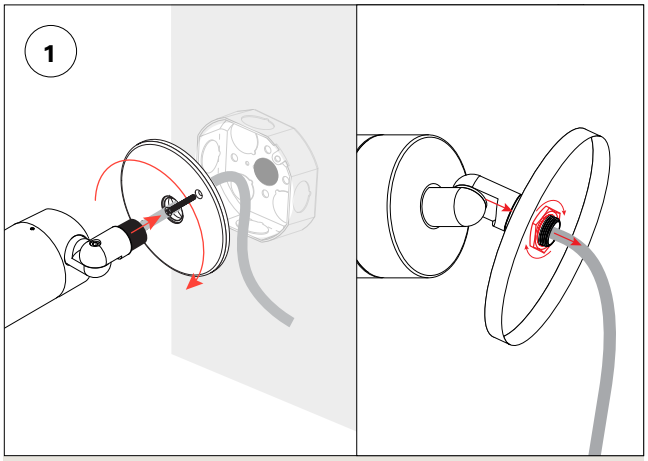



- Prepare the J-BOX by removing knockouts for wire entry.
- Install the recessed J-BOX behind the surface following the manufacturer's instructions.
- Bring the power supply wires through the J-BOX connectors.
- Q-MT-49: Install the fixture onto the canopy and screw it on until seated.
- Q-MT-25, Q-MT-26, Q-MT-27: Install the fixture onto the canopy and secure it with the provided jam nut.

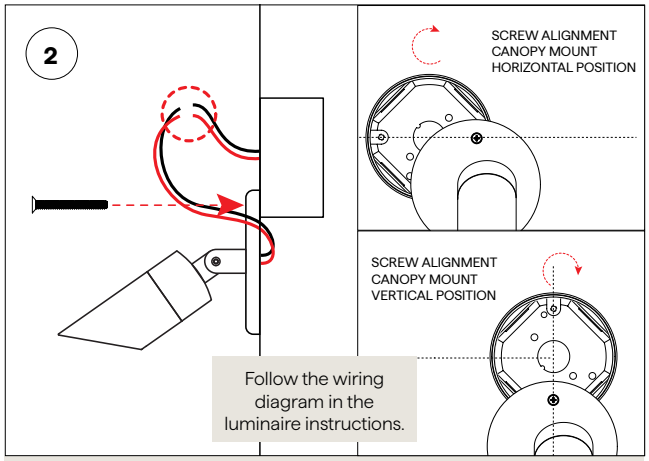



- Mount one side of the canopy with the provided screws.
- Cut the wires to length as needed and splice the fixture and J-BOX wires together.

***NOTE:*** *The canopy must completely cover the J-BOX and the excess hole cutout. Mounting screws are not provided. Secure the Q-MT-49 base using #10 mounting screws (by others).*

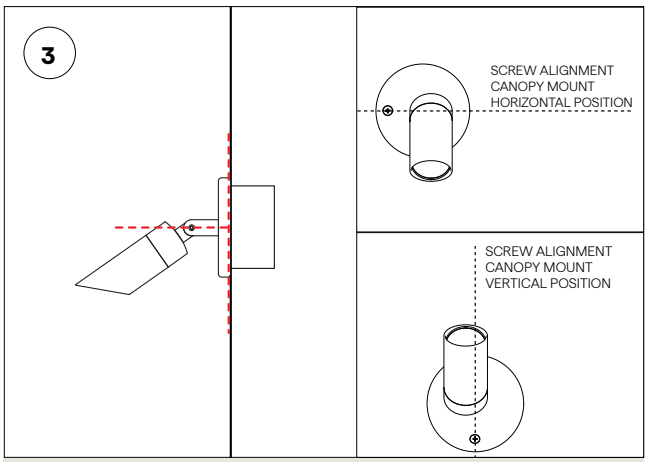


- Tuck the excess wires into the J-BOX, rotate the canopy into position, and install the provided screw into the J-BOX.

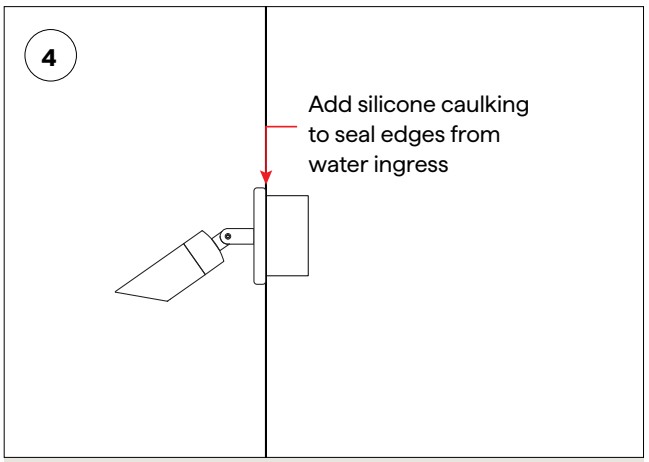


- Add additional silicone caulking for extra protection against water ingress.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE & RECESSED J-BOX


Landscape Lighting Installation Instructions

## MOUNTING METHOD: **RECESSED J-BOX - 120V DRIVER**

Q-MT-49BF, Q-MT-49SF

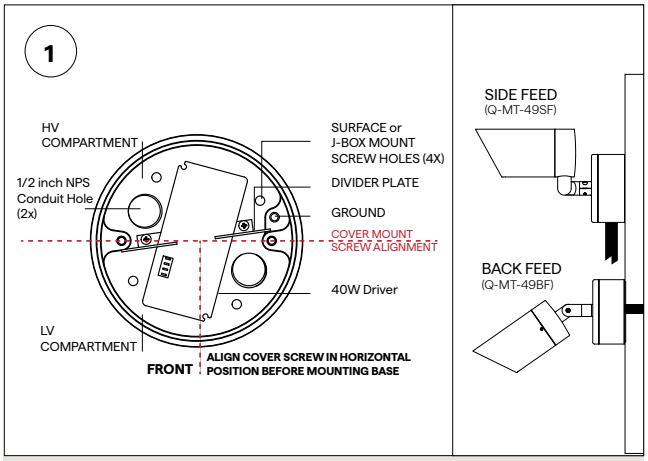



- Prepare the J-BOX by removing knockouts for wire entry.
- Install the recessed J-BOX behind the surface following the manufacturer's instructions.
- Bring the power supply wires through the J-BOX connectors.

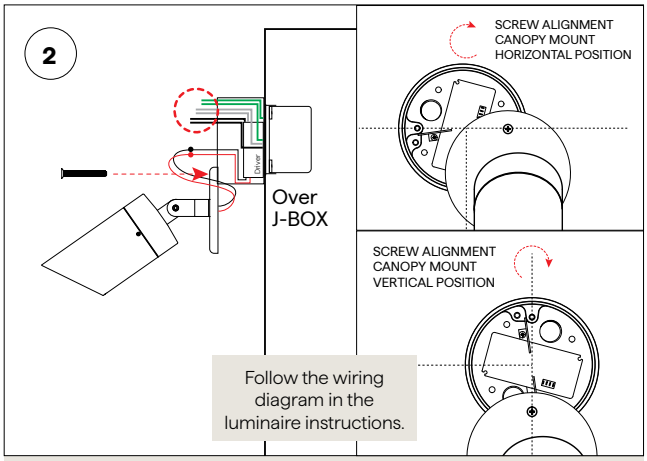



- Remove one canopy screw and rotate the canopy to access the wire compartment.
- Mount the VOYA 3.5" base (Q-MT-49) to the recessed J-BOX using the manufacturer's suggested hardware.
- Cut the wires to length as needed and splice the fixture and power supply / dimming wires together. (Reference the VOYA 3.5" COB luminaire instructions for the specific wiring diagram.)

***NOTE:*** *The canopy must completely cover the J-BOX and the excess hole cutout. Mounting screws are not provided. Secure the Q-MT-49 base using #10 mounting screws (by others).*

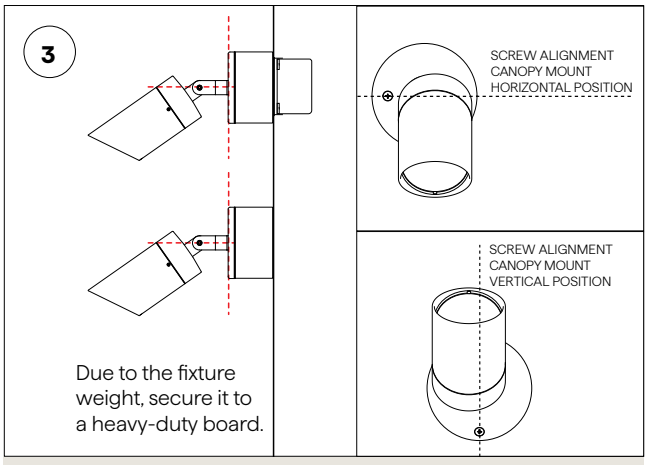


- Tuck the excess wires into the Q-MT-49 base, rotate the canopy back into position, and secure it with the provided screw.

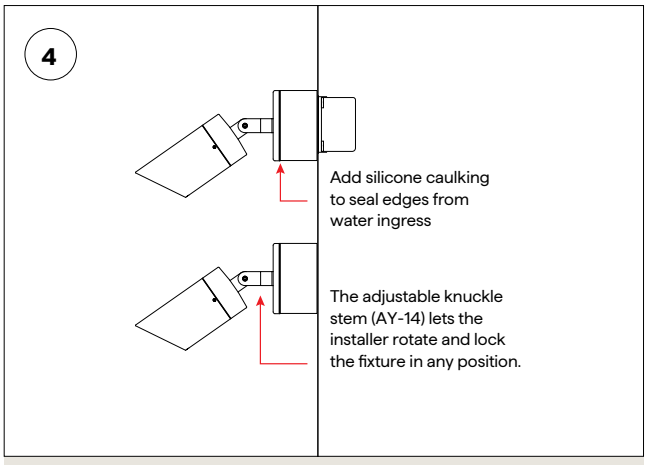


- Add additional silicone caulking for extra protection against water ingress.
- Installation complete.



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE/WALL


Landscape Lighting Installation Instructions

## ⚠ ATTENTION: Please read all instructions BEFORE installation


- Product must be installed by a licensed electrician. Field modifications void the warranty.
- Warranty is valid only with QTL power supplies.
- Diagrams are for representation only and are not to scale.
- Apply silicone around the edge of the canopy for additional water protection.
- Ensure the mounting surface is plumb and can support the fixture weight.
- Use the appropriate wire gauge for the run length.
- Use a liquid-tight connector for 120V wire entry.
- RISK OF FIRE OR INJURY / SAVE THESE INSTRUCTIONS
- Install per NEC and local codes.

## METHODS OF INSTALLATION

**SIDE MOUNT**

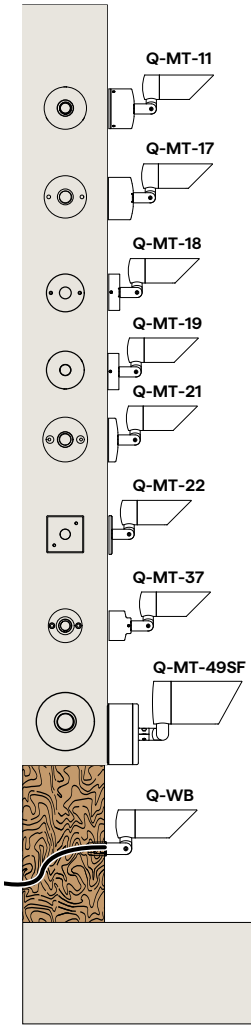


**END MOUNT**

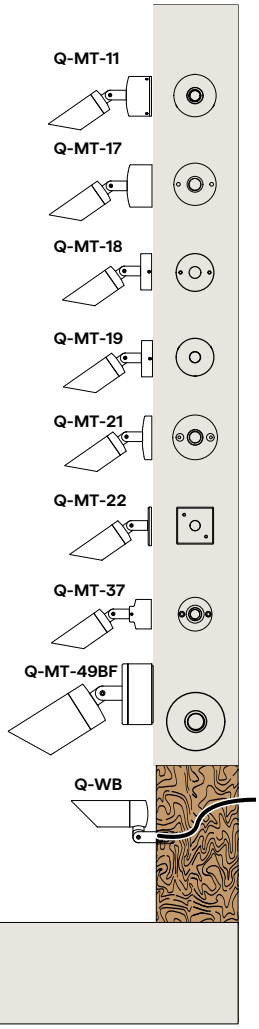



- LUMINAIRE & MOUNT COMPATIBILITY (PAGE 2)
- COMPONENTS & HARDWARE (PAGE 3)
- SURFACE/WALL - NO DRIVER (PAGE 4-5)
- SURFACE/WALL - WITH DRIVER (PAGE 6)
- WOOD BEAM (PAGE 7)




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## LUMINAIRE & MOUNT COMPATIBILITY

| | Q-MT-11 | Q-MT-17 | Q-MT-18 | Q-MT-19 | Q-MT-21 | Q-MT-22 | Q-MT-37 | Q-MT-49BF No Driver | Q-MT-49BF With Driver | Q-MT-49SF No Driver | Q-MT-49SF With Driver | Q-WB |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| VOYA-EM-1.75-MR11-12VAC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | | | | ✓ |
| VOYA-EM/SM-2.5 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | | | | ✓ |
| VOYA-EM/SM-3.0-PAR20/GU10 | | | | | | | | ✓ | | ✓ | | |
| VOYA-EM/SM-3.5-COB-120VAC | | | | | | | | | ✓ | | ✓ | |
| Excelsior DL-6 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-7 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-8 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-10 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-10L | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-11 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-11L | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-12 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-12L | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-13 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-13L | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-14 | ✓ | | | | ✓ | | | | | | | |
| Excelsior DL-14L | ✓ | | | | ✓ | | | | | | | |




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE/WALL


Landscape Lighting Installation Instructions

**Q-MT-11**

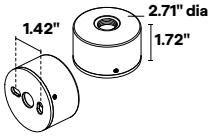



With Water Protection


**Q-MT-17**




**Q-MT-18**





**Q-MT-19**

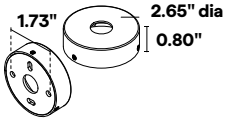



With Water Protection


**Q-MT-21**





**Q-MT-22**

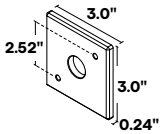


**Q-MT-37**

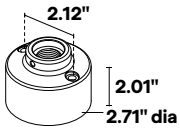



**Q-WB**





Wood Beam Mount

**Q-MT-49BF**




With Water Protection


**Q-MT-49SF**

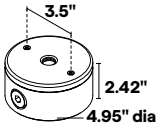


With Water Protection

## COMPONENTS & HARDWARE


**PROVIDED HARDWARE**




| #PN | QTY |
|---|---|
| Q-MT-17 | 2 |
| Q-MT-18 | 2 |

#10-3/16x2"


ROUND HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-21 | 2 |

#8-3/16x1.5"


FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-22 | 2 |

#10-3/16x1.5"


FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-37 | 2 |

#10-3/16x2.5"


FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-11 | 2 |

#12-SS Round Head 1.0"

PHILLIPS ROUND HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-19 | 2 |

316 SS Round Head 1.0"


ROUND HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-11 | 3 |
| Q-MT-19 | 3 |
| Q-MT-37 | 1 |

10-32x3/16"

SET SCREW




| #PN | QTY |
|---|---|
| Q-MT-49 | 2 |

10-32x3/4"

HEX FLAT HEAD SCREW



| #PN | QTY |
|---|---|
| Q-MT-18 | 1 |
| Q-MT-19 | 1 |
| Q-MT-22 | 1 |

1/2-14 NPS HEX NUT


HEX NUT / JAM NUT

**SUGGESTED TOOLS/MATERIALS**



Waterproof Silicone

ALL PURPOSE SILICONE

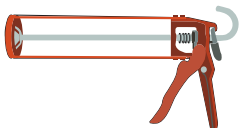


CAULKING GUN




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## MOUNTING METHOD: **SURFACE/WALL - NO DRIVER**

Q-MT-11, Q-MT-17, Q-MT-18, Q-MT-19, Q-MT-21, Q-MT-22, Q-MT-37

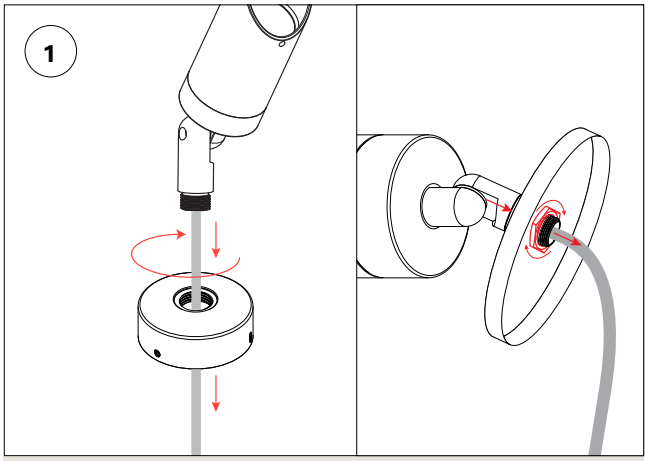



- Feed the fixture lead wire down through the canopy.
- Q-MT-11, Q-MT-17, Q-MT-21, Q-MT-37: Install the fixture onto the canopy and screw it on until seated.
- Q-MT-18, Q-MT-19, Q-MT-22: Install the fixture onto the canopy and secure it with the provided jam nut.

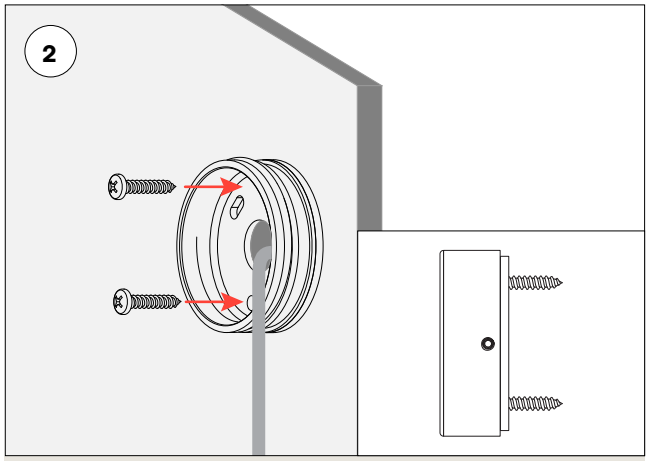



- Align the mounting screw holes in the vertical or horizontal position before mounting the base/canopy.
- Hold the base/canopy against the mounting surface and secure it with the two provided screws. Confirm the surface is level and can support the fixture weight.

***NOTE:*** *Not all mounting methods include both a base and a canopy.*

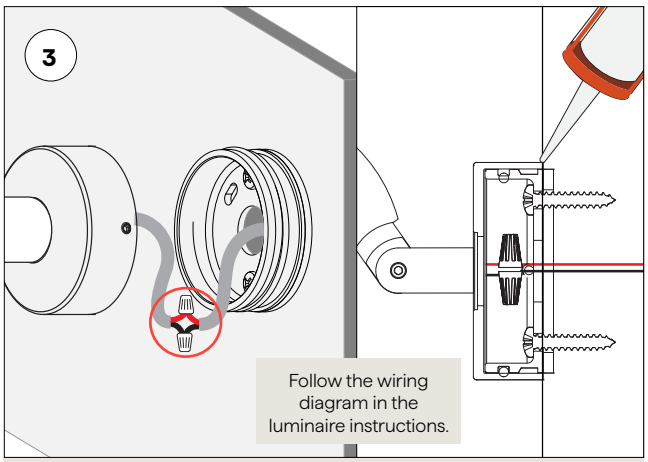


- Cut the wires to length as needed and splice the fixture and line voltage / power supply wires together. (Reference the luminaire instructions for the specific wiring diagram.)

***NOTE:*** *Silicone can be applied to the edge of the canopy before tightening the screws for additional water protection.*

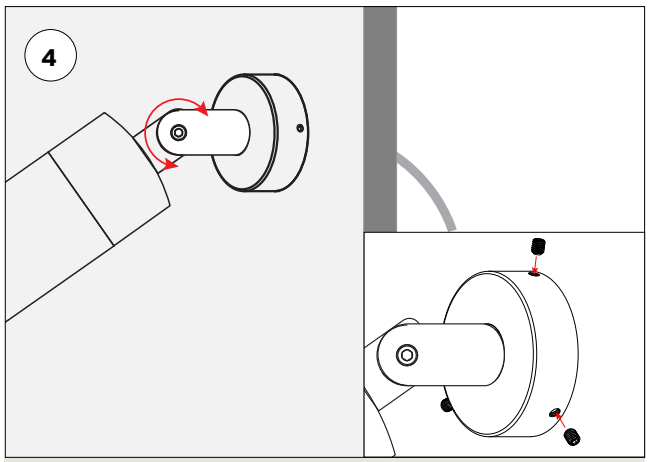



- Q-MT-37: The fixture can be rotationally adjusted slightly with the provided set screw on the canopy. Other canopies do not have this feature.
- Q-MT-11, Q-MT-19: Tighten the provided set screws to secure the fixture in place.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

## MOUNTING METHOD: **SURFACE/WALL - NO DRIVER**


Q-MT-49BF, Q-MT-49SF

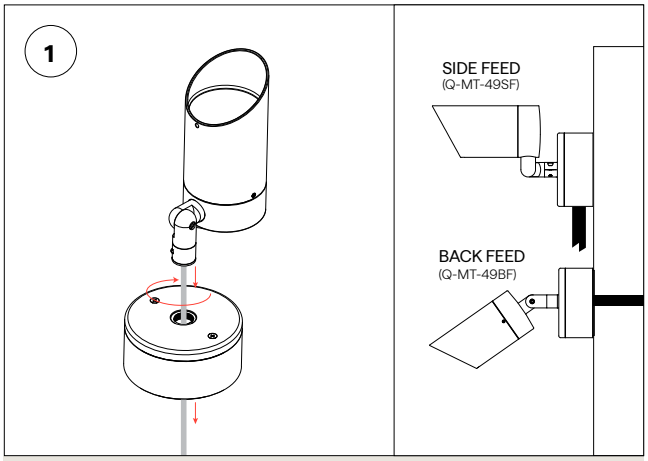



- Remove one canopy screw and rotate the canopy to access the wire compartment.
- Back feed (Q-MT-49BF): Feed the wire through the Q-MT-49 base knockout. Connect per NEC code.
- Side feed (Q-MT-49SF): Feed the wire through the Q-MT-49 base knockout. Connect per NEC code.
- Mount the Q-MT-49 base onto the surface using wood screws (by others). Confirm the surface is level and can support the fixture weight.

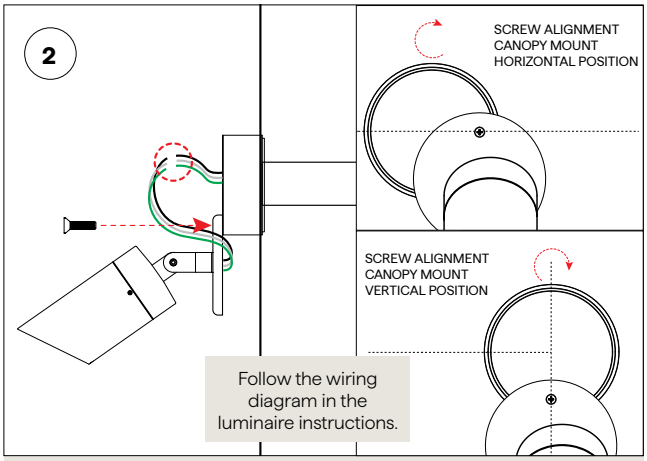


- Mount one side of the canopy with the provided screws.
- Cut the wires to length as needed and splice the fixture and line voltage wires together.

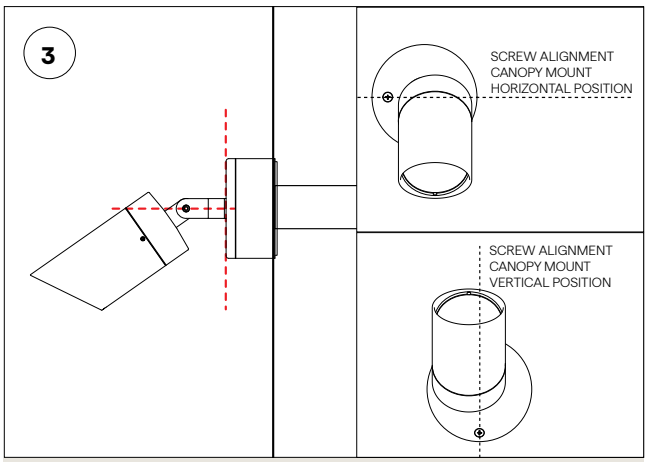


- Tuck the excess wires into the Q-MT-49 base, rotate the canopy back into position, and secure it with the provided screw.

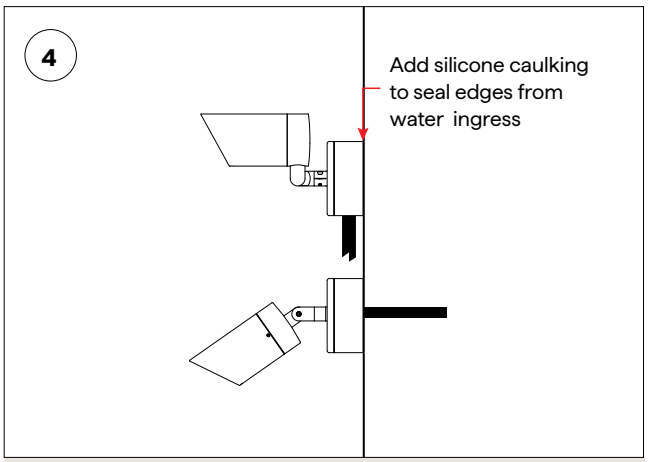


- Add additional silicone caulking for extra protection against water ingress.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# SURFACE/WALL


Landscape Lighting Installation Instructions

## MOUNTING METHOD: **SURFACE/WALL - 120V DRIVER**


Q-MT-49BF, Q-MT-49SF

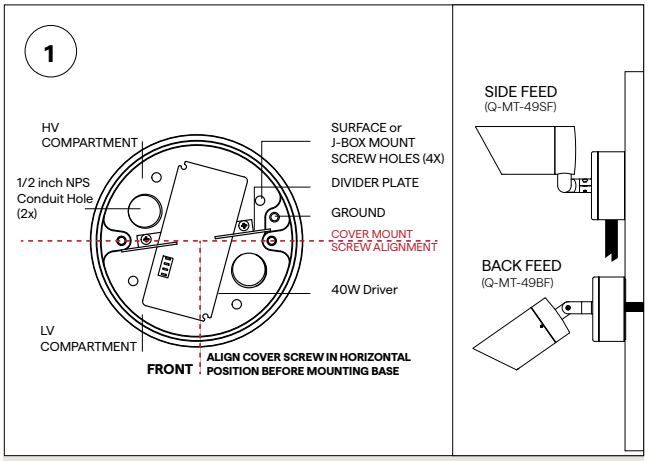



- Remove one canopy screw and rotate the canopy to access the wire compartment.
- Back feed (Q-MT-49BF): Feed the wire through the Q-MT-49 base knockout. Connect per NEC code.
- Side feed (Q-MT-49SF): Feed the wire through the Q-MT-49 base knockout. Connect per NEC code.
- Mount the Q-MT-49 base onto the surface using wood screws (by others). Confirm the surface is level and can support the fixture weight.

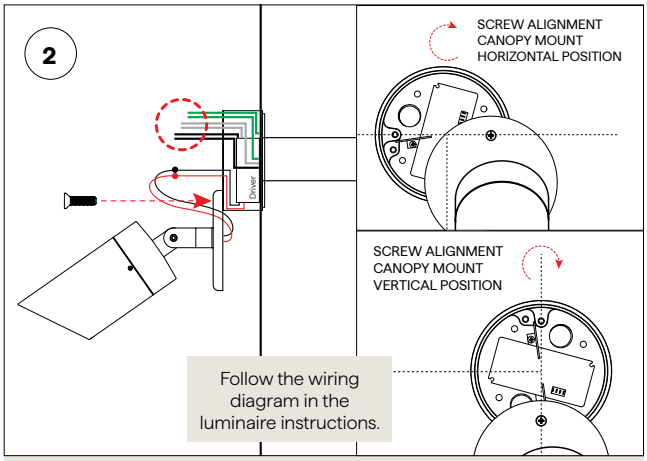


- Mount one side of the canopy with the provided screws.
- Cut the wires to length as needed and splice the fixture and power supply / dimming wires together. (Reference the VOYA 3.5" COB luminaire instructions for the specific wiring diagram.)

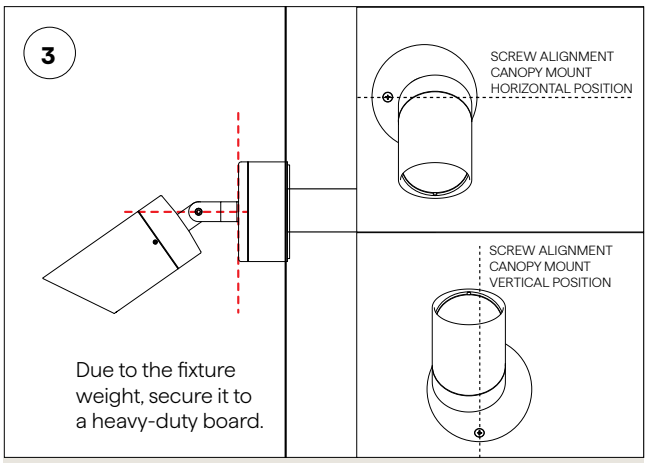


- Tuck the excess wires into the Q-MT-49 base, rotate the canopy back into position, and secure it with the provided screw.

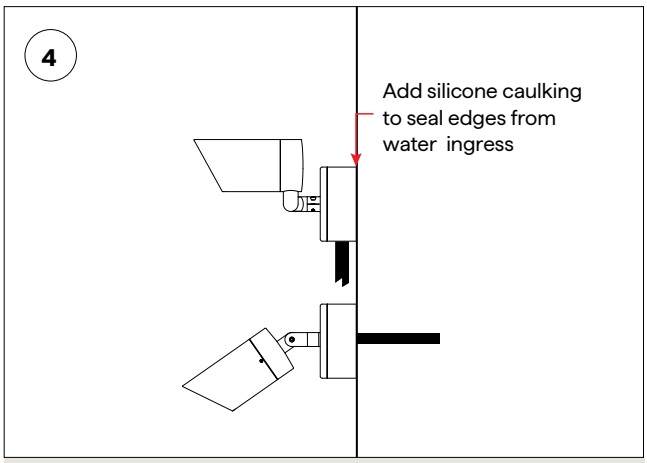



- Add additional silicone caulking for extra protection against water ingress.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MOUNTING METHOD: **WOOD BEAM - NO DRIVER**
Q-WB

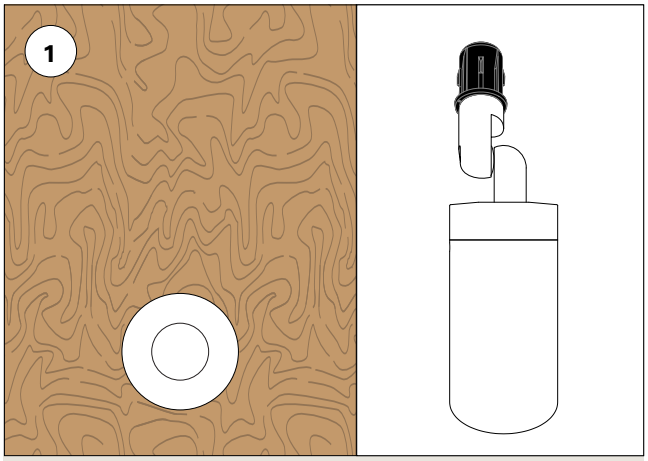



- Drill a 1" diameter hole, 3" deep. Then drill a wire access hole to route the fixture cable through the wood beam.
- Rotate the fixture into the Q-WB mount until fully seated.

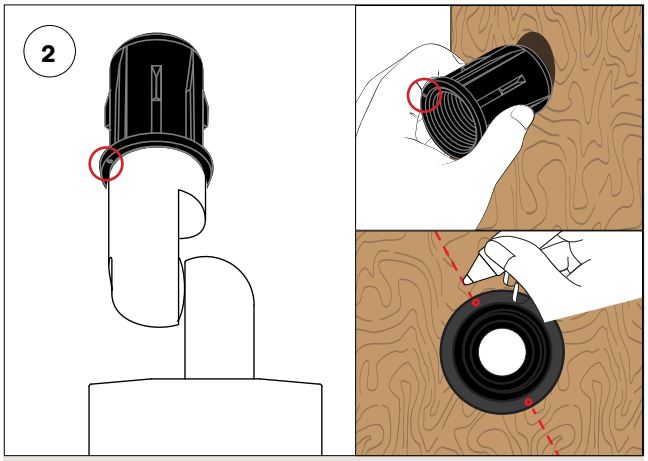



- Orient the fixture in the desired position, then use the indicator dots as reference markers to mark the final fixture position.
- Remove the fixture from the Q-WB mount then proceed to step 3.

***NOTE:*** *The Q-WB mount can only be inserted once and cannot be adjusted afterward.*

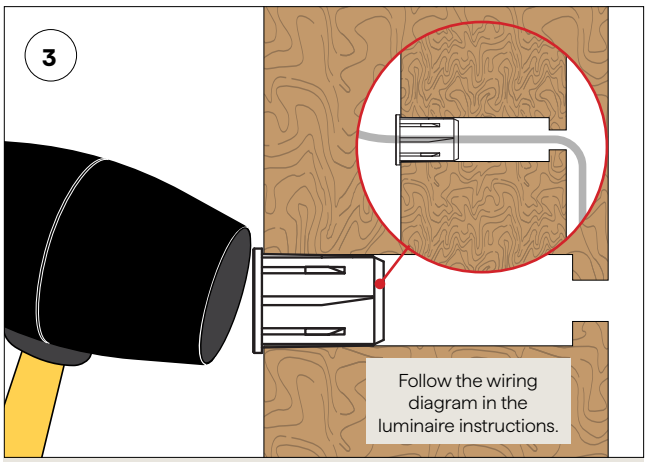


- Ensure the indicator dots are aligned with the reference marks.
- Tap the Q-WB mount into the wood with a mallet until it is flush, as shown.
- Cut the wires to length as needed and splice the fixture and power supply wires together. (Reference the luminaire instructions for the specific wiring diagram.)

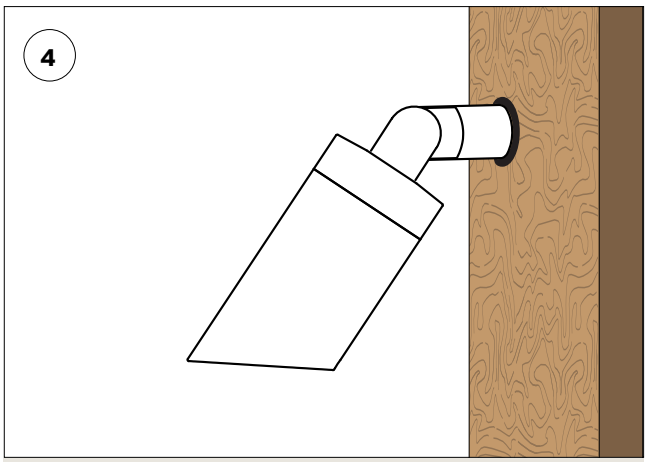


- Rotate the fixture into the Q-WB mount until fully seated.
- Installation complete.

***NOTE:*** *The Q-WB mount can only be inserted once and cannot be adjusted afterward.*



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# TREE MOUNT


Landscape Lighting Installation Instructions

**ATTENTION: Please read all instructions BEFORE installation**

- Product must be installed by a licensed electrician. Field modifications void the warranty.
- Warranty is valid only with QTL power supplies.
- Diagrams are for representation only and are not to scale.
- Wrap the nylon ratchet strap around the tree. DO NOT OVERTIGHTEN — overtightening can damage the tree.
- Use the provided or recommended bolts to attach mounts to the tree.
- Use a liquid-tight connector for 120V wire entry.
- RISK OF FIRE OR INJURY / SAVE THESE INSTRUCTIONS
- Install per NEC and local codes.



## METHODS OF INSTALLATION

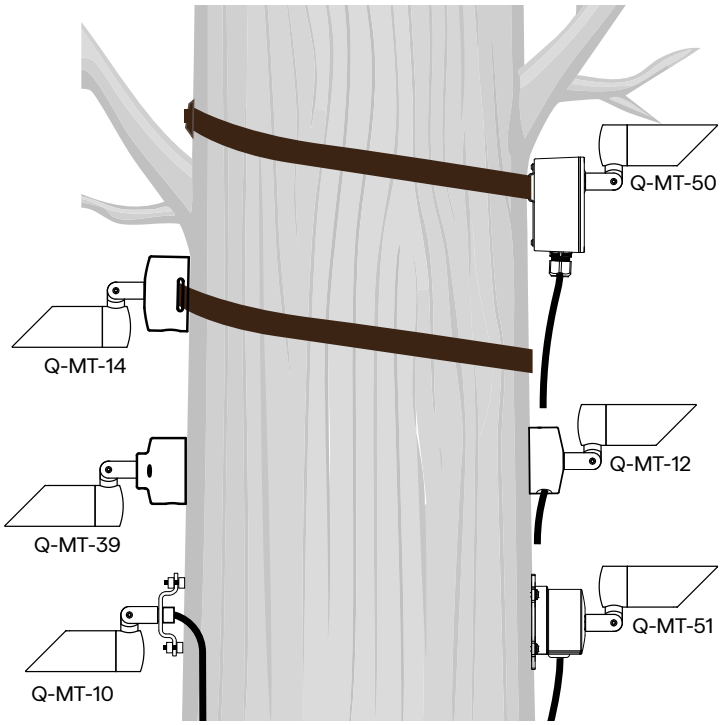



- COMPONENTS & HARDWARE (PAGE 2)
- TREE MOUNT - NO DRIVER (PAGE 3-4)
- TREE MOUNT - 120V DRIVER (PAGE 5)


## LUMINAIRE & MOUNT COMPATIBILITY


| | Q-MT-10 | Q-MT-12 | Q-MT-14 | Q-MT-39 | Q-MT-50 No Driver | Q-MT-50 With Driver | Q-MT-51 |
|---|---|---|---|---|---|---|---|
| VOYA-EM-1.75-MR11-12VAC | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ |
| VOYA-EM/SM-2.5 | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ |
| VOYA-EM/SM-3.0-PAR20/GU10 | | | | | ✓ | | ✓ |
| VOYA-EM/SM-3.5-COB-120VAC | | | | | | ✓ | |

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# TREE MOUNT

Landscape Lighting Installation Instructions


**Q-MT-10**

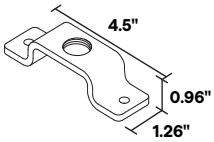


**Q-MT-12**

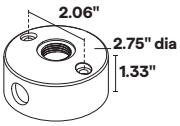



**Q-MT-14**





With Tree Strap

**Q-MT-39**

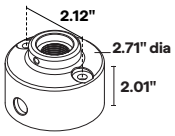



**Q-MT-51**

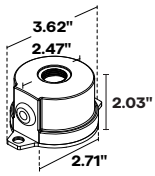


With Water Protection

**Q-MT-50**

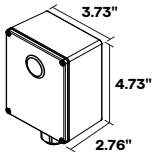



With Water Protection & Tree Strap

No Driver | With Driver

## COMPONENTS & HARDWARE

**PROVIDED HARDWARE**




| #PN | QTY |
|---|---|
| Q-MT-12 | 2 |

#10-3/16x2"


PHILLIPS ROUND HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-50 | 4 |
| Q-MT-51 | 3 |

6-32x0.5"

FLAT HEAD SCREW




| #PN | QTY |
|---|---|
| Q-MT-51 | 2 |


#10-3/16x1.5"

PHILLIPS ROUND HEAD SCREW



1/4-20 NUT


| #PN | QTY |
|---|---|
| Q-MT-10 | 4 |




1/4-20x3"

| #PN | QTY |
|---|---|
| Q-MT-10 | 2 |

HANGER BOLT




| #PN | QTY |
|---|---|
| Q-MT-39 | 2 |

1/4"-20X3"

HEX BOLT SCREW



| #PN | QTY |
|---|---|
| Q-MT-10 | 1 |
| Q-MT-50 | 1 |

1/2-14 NPS HEX NUT

HEX NUT / JAM NUT




| #PN | QTY |
|---|---|
| Q-MT-14 | 1 |
| Q-MT-50 | 1 |

Nylon Strap Ratchet

TREE MOUNT STRAP

**RECOMMENDED HARDWARE**



| #PN | QTY |
|---|---|
| Q-MT-50 | 1 |

1/2" Liquid-Tight Connector
(By Others)

CONDUIT CONNECTOR



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# TREE MOUNT

Landscape Lighting Installation Instructions




## MOUNTING METHOD: **TREE MOUNT - NO DRIVER**

Q-MT-10, Q-MT-12, Q-MT-14, Q-MT-39, Q-MT-51

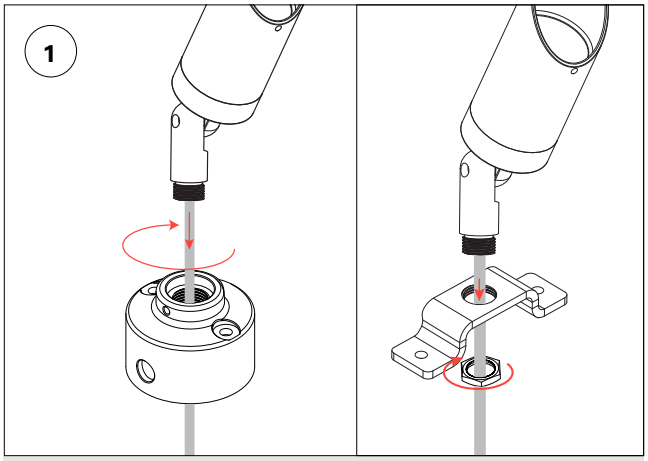



- Feed the fixture lead wire down through the canopy.
- Q-MT-12, Q-MT-14, Q-MT-39, Q-MT-51: Install the fixture onto the canopy and screw it on until seated.
- Q-MT-10: Install the fixture onto the canopy and secure it with the provided jam nut.

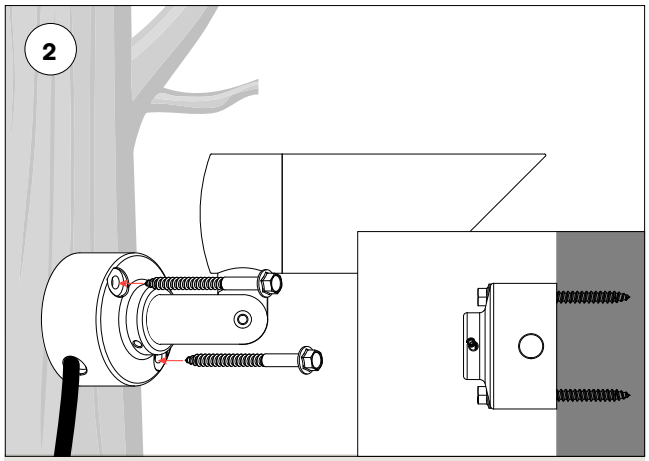



- Align the mounting screw holes in the vertical or horizontal position before mounting the base/canopy.
- Hold the base/canopy against the mounting surface and secure it with the two provided screws.

***NOTE:*** *Not all mounting methods include both a base and a canopy.*

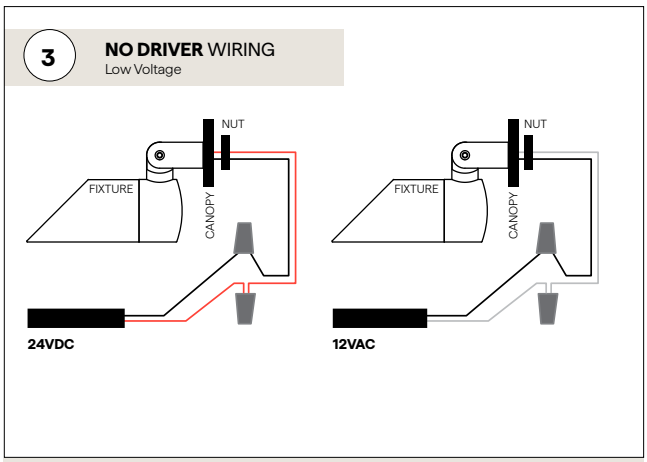


- If the mount has a wire hole, run the power supply wire through the hole before splicing. (Reference the luminaire instructions for wiring details).
- Cut the fixture wire to length as needed and splice the fixture and power supply wires together with liquid-tight wire nuts (by others).

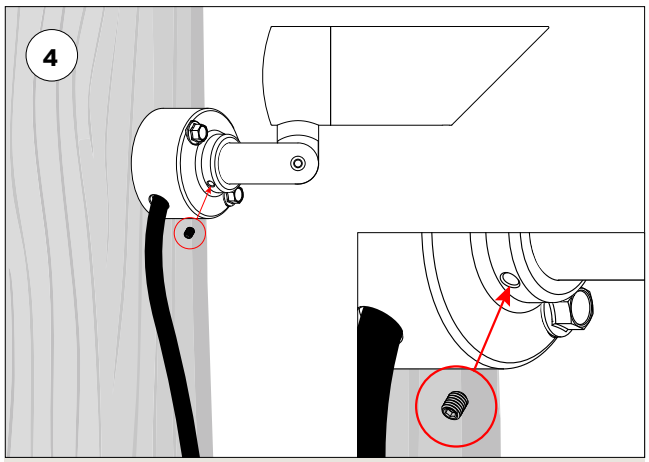



- Q-MT-39: After installation, the fixture can be rotationally adjusted slightly with the provided set screw on the canopy. Other canopies do not have this feature.
- Installation complete.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# TREE MOUNT

Landscape Lighting Installation Instructions


MOUNTING METHOD: **TREE MOUNT - NO DRIVER**
Q-MT-50

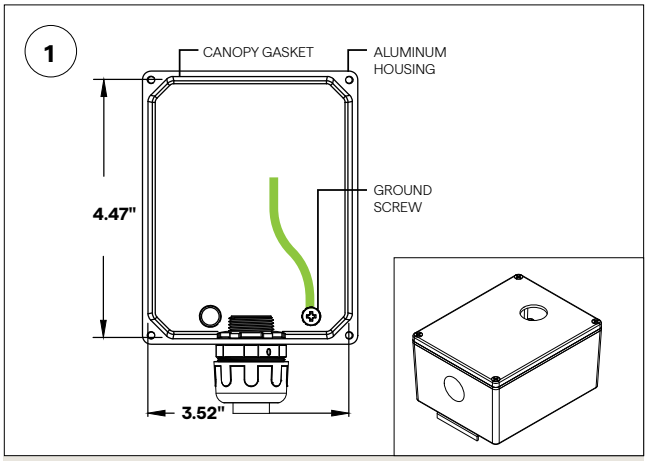



- Remove the four (4) canopy screws and lift off the canopy gasket. Route the power supply cable into the housing through recommended liquid-tight connector.

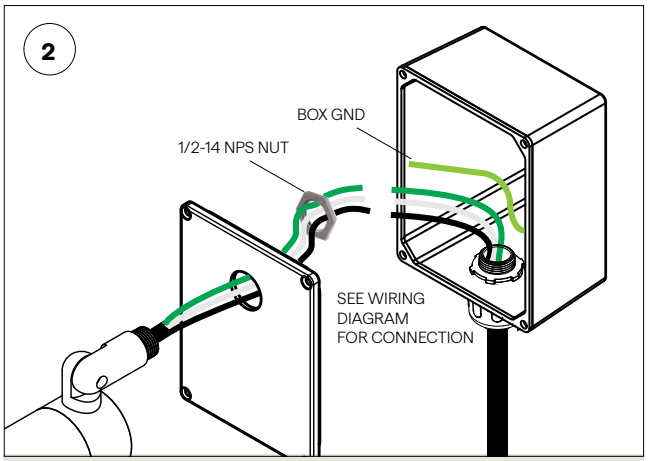


- Mount the fixture onto the canopy with the 1/2-14 jam nut.
- Splice the wires together with wire nuts (by others). See the luminaire instructions for wiring details.
- Reinstall the canopy.

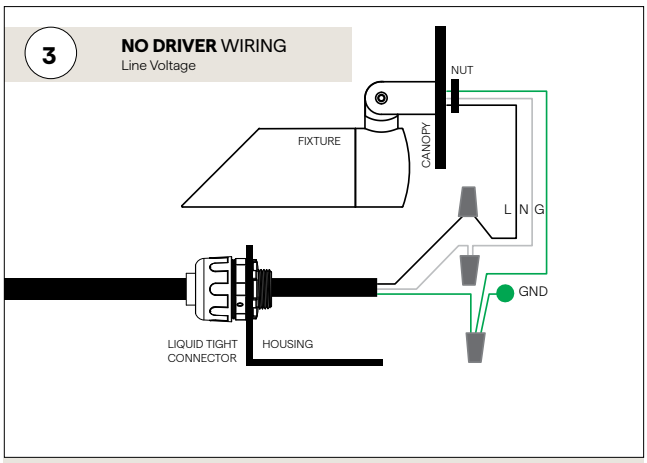


- Cut the fixture wire to length as needed and splice the fixture and power supply wires together with liquid-tight wire nuts (by others).

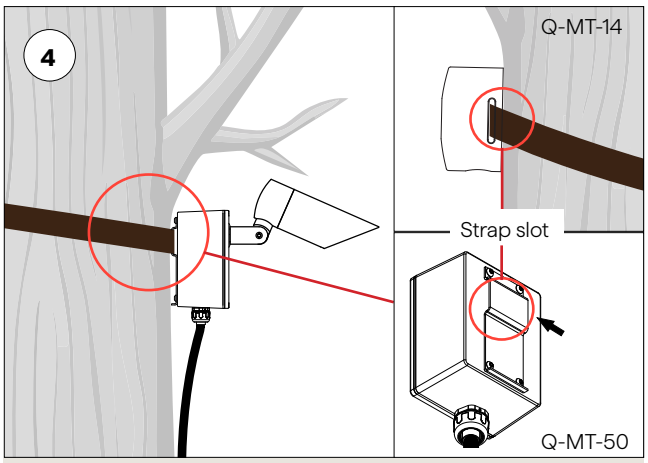


- Weave the tree strap through the slot on the back of the housing, wrap it around the tree, and tighten it with the ratchet until secure. **DO NOT OVERTIGHTEN** — overtightening can damage the tree.
- Installation complete.




© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


# TREE MOUNT

Landscape Lighting Installation Instructions


MOUNTING METHOD: **TREE MOUNT - 120V DRIVER**
Q-MT-50

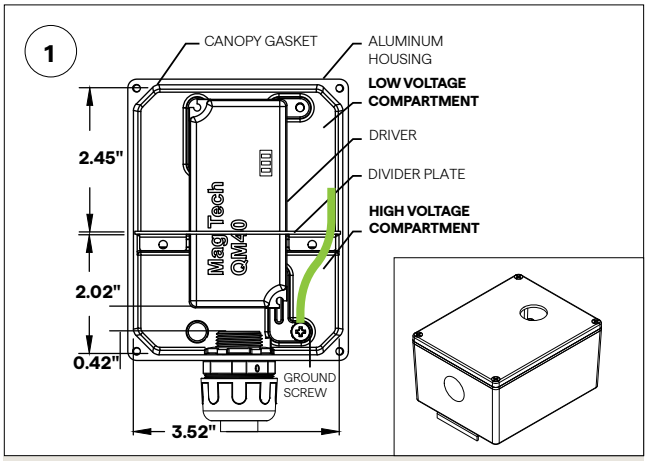



- Remove the four (4) canopy screws and lift off the canopy and gasket. The divider plate separates the HIGH-VOLTAGE (HV) and LOW-VOLTAGE (LV) compartments; the lower part of the 40W driver has the line-voltage wires. Bring the 120V cable into the HV compartment through the liquid-tight connector and splice the wires.
- See the luminaire wiring diagram for additional details.

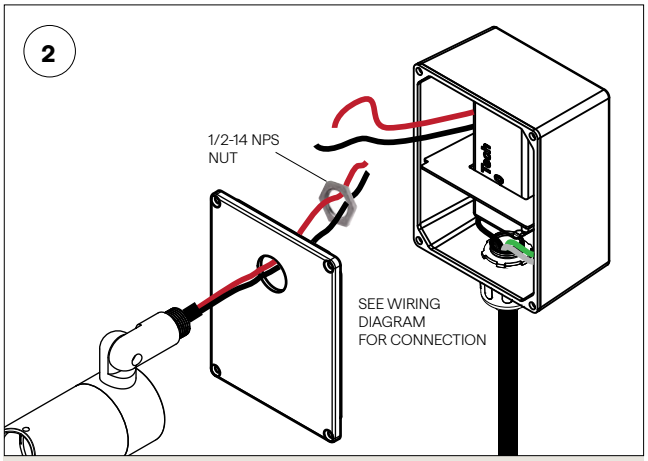


- Install the fixture on the canopy with the jam nut, rotating the fixture to the desired angle and tightening the nut.
- Use liquid-tight wire nuts to splice the fixture wires and driver wires together, following the wiring diagram in the luminaire instructions.
- Place the canopy over the box and tighten the screws.

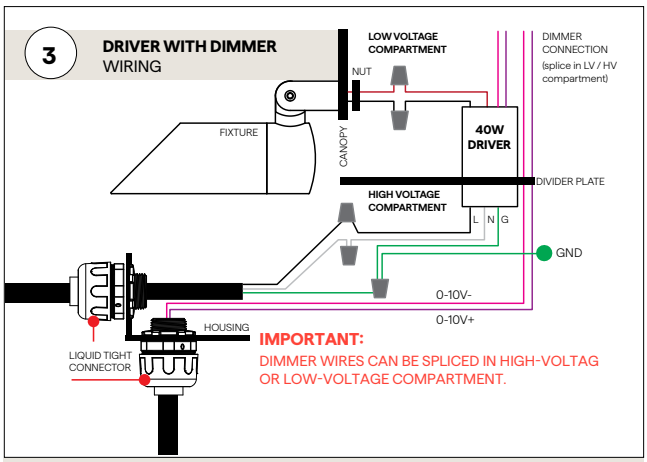


- Cut the fixture wire to length as needed and splice the fixture and power supply wires together with liquid-tight wire nuts (by others).

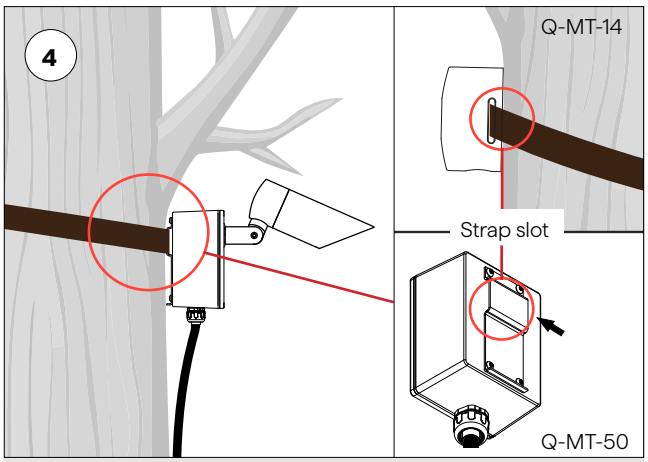


- Weave the tree strap through the slot on the back of the housing, wrap it around the tree, and tighten it with the ratchet until secure. **DO NOT OVERTIGHTEN** — overtightening can damage the tree.
- Installation complete.



© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

# VOYA 2.5" COB WARM DIM

Landscape Lighting Color Data

## VOYA-2.5-COB-12VAC-WD-ST-95-18/30-FL-COB-20-**-**-09

3229 K

**CRI:** 98.0

**CRI R9:** 98.9

**TM30 Rf:** 93.6

**TM30 Rg:** 99.4

**CQS:** 95.3


**X:** 0.424


**Y:** 0.404


**U:** 0.242

**V:** 0.346

**Δuv:** 0.0019

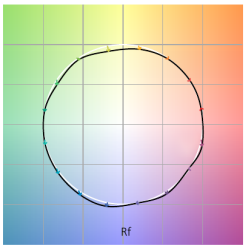

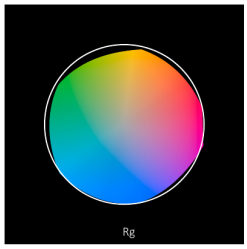
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.1 | 99.5 | 95.9 | 97.9 | 98.4 | 98.4 | 98.1 | 98.0 | 98.9 | 97.7 | 96.7 | 82.5 | 98.4 | 96.7 | 97.7 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 92.0 | 96.4 | 94.4 | 94.2 | 95.5 | 96.6 | 98.2 | 97.6 | 95.4 | 94.4 | 95.4 | 95.3 | 95.9 | 97.6 | 95.4 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 95.7 | 97.1 | 96.1 | 93.1 | 92.2 | 96.1 | 90.8 | 95.7 | 92.4 | 90.1 | 91.6 | 93.0 | 95.5 | 93.9 | 92.2 | 91.0 |
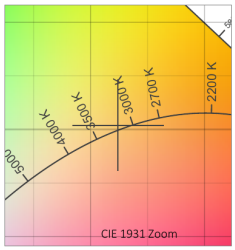
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 96 | -1% | -2% |
| 4 | 93 | -4% | -3% |
| 5 | 92 | -7% | 0% |
| 6 | 96 | -2% | 2% |
| 7 | 91 | -4% | 5% |
| 8 | 96 | 0% | 3% |
| 9 | 92 | 1% | 5% |
| 10 | 90 | 1% | 6% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 5% | -1% |
| 13 | 96 | 0% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 92 | -1% | -1% |
| 16 | 91 | 2% | -7% |

## VOYA-2.5-COB-12VAC-WD-ST-95-18/30-FL-COB-26-**-**-09

3232 K

**CRI:** 98.1

**CRI R9:** 99.0

**TM30 Rf:** 93.7

**TM30 Rg:** 99.6

**CQS:** 95.4


**X:** 0.424


**Y:** 0.403


**U:** 0.242

**V:** 0.346

**Δuv:** 0.0016

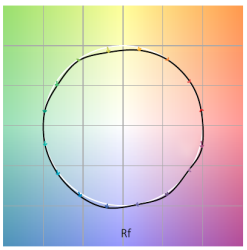

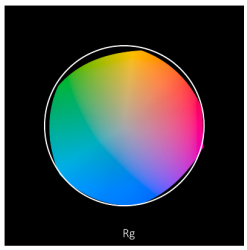
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.0 | 99.6 | 95.9 | 98.0 | 98.4 | 98.3 | 98.2 | 98.0 | 99.0 | 97.9 | 96.7 | 82.5 | 98.3 | 96.8 | 97.7 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 92.2 | 96.6 | 94.2 | 94.1 | 95.5 | 96.8 | 98.4 | 97.8 | 95.8 | 94.9 | 95.8 | 95.6 | 96.0 | 97.5 | 95.4 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 95.8 | 97.1 | 96.1 | 93.3 | 92.4 | 96.3 | 91.0 | 95.9 | 92.5 | 90.1 | 91.5 | 92.9 | 95.6 | 93.9 | 92.3 | 90.9 |
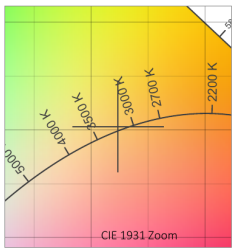
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 96 | 0% | -1% |
| 4 | 93 | -4% | -3% |
| 5 | 92 | -6% | 0% |
| 6 | 96 | -2% | 2% |
| 7 | 91 | -3% | 5% |
| 8 | 96 | 0% | 3% |
| 9 | 93 | 1% | 5% |
| 10 | 90 | 1% | 6% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 5% | 0% |
| 13 | 96 | 0% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 92 | -1% | -1% |
| 16 | 91 | 2% | -7% |

## VOYA-2.5-COB-12VAC-WD-ST-95-18/30-FL-COB-40-**-**-09

3249 K

**CRI:** 98.0

**CRI R9:** 98.9

**TM30 Rf:** 93.6

**TM30 Rg:** 99.4

**CQS:** 95.4


**X:** 0.423


**Y:** 0.403


**U:** 0.242

**V:** 0.346

**Δuv:** 0.0018

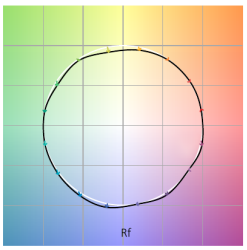

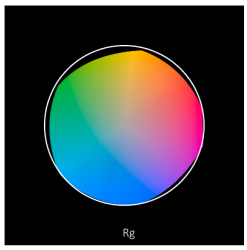
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.1 | 99.5 | 95.8 | 98.0 | 98.4 | 98.3 | 98.1 | 98.0 | 98.9 | 97.6 | 96.8 | 82.2 | 98.4 | 96.7 | 97.7 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 92.2 | 96.6 | 94.2 | 94.1 | 95.5 | 96.8 | 98.4 | 97.8 | 95.7 | 94.7 | 95.7 | 95.5 | 96.0 | 97.6 | 95.4 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 95.6 | 97.1 | 96.1 | 93.2 | 92.3 | 96.2 | 90.9 | 95.8 | 92.4 | 90.0 | 91.4 | 92.9 | 95.6 | 93.9 | 92.2 | 91.8 |
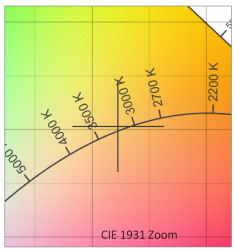
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 96 | -1% | -1% |
| 4 | 93 | -4% | -3% |
| 5 | 92 | -7% | 0% |
| 6 | 96 | -2% | 2% |
| 7 | 91 | -4% | 5% |
| 8 | 96 | 0% | 3% |
| 9 | 92 | 0% | 5% |
| 10 | 90 | 1% | 6% |
| 11 | 91 | 3% | 5% |
| 12 | 93 | 5% | 0% |
| 13 | 96 | 0% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 92 | -1% | -1% |
| 16 | 92 | 2% | -5% |

**NOTES:**
- CRI R values, only R1-R8 are used to calculate RA CRI values
- TM30 C values, 16 binned values out of total of 99 C values
- CQS Q values
- Data subject to change, all data has +/- 5% tolerance

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTLlighting | QTL.lighting

Specification subject to change. Rev-07-23-26

# VOYA 2.5" COB WARM DIM

Landscape Lighting Color Data

## VOYA-2.5-COB-12VAC-WD-ST-95-18/30-FL-COB-55-**-**-09

3248 K

**CRI:** 98.0

**CRI R9:** 98.9

**TM30 Rf:** 93.6

**TM30 Rg:** 99.4

**CQS:** 95.3


**X:** 0.423


**Y:** 0.403


**U:** 0.242

**V:** 0.346

**Δuv:** 0.0018

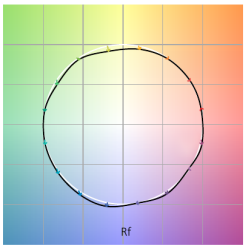

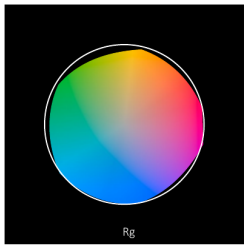
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.2 | 99.5 | 95.8 | 98.0 | 98.4 | 98.3 | 98.1 | 98.0 | 98.9 | 97.6 | 96.9 | 82.1 | 98.4 | 96.7 | 97.7 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 92.1 | 96.5 | 94.2 | 94.0 | 95.4 | 96.7 | 98.4 | 97.8 | 95.7 | 94.7 | 95.6 | 95.5 | 96.0 | 97.6 | 95.4 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 95.5 | 97.1 | 96.1 | 93.1 | 92.2 | 96.2 | 90.8 | 95.7 | 92.4 | 89.9 | 91.4 | 92.9 | 95.6 | 93.9 | 92.2 | 91.8 |
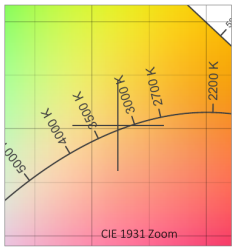
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 96 | -1% | -1% |
| 4 | 93 | -4% | -3% |
| 5 | 92 | -7% | 0% |
| 6 | 96 | -2% | 2% |
| 7 | 91 | -4% | 5% |
| 8 | 96 | 0% | 3% |
| 9 | 92 | 0% | 5% |
| 10 | 90 | 1% | 6% |
| 11 | 91 | 3% | 5% |
| 12 | 93 | 5% | 0% |
| 13 | 96 | 0% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 92 | -1% | -1% |
| 16 | 92 | 2% | -5% |

## VOYA-2.5-COB-24VDC-WD-ST-95-18/30-FL-COB-20-**-**-07

3208 K

**CRI:** 98.2

**CRI R9:** 97.8

**TM30 Rf:** 94.3

**TM30 Rg:** 99.9

**CQS:** 95.6


**X:** 0.425


**Y:** 0.404


**U:** 0.243

**V:** 0.347

**Δuv:** 0.0019

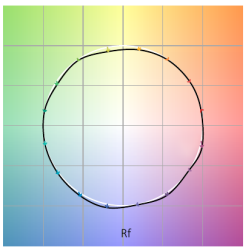

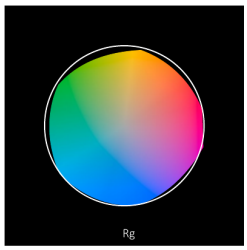
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.5 | 99.3 | 95.4 | 98.1 | 98.9 | 98.4 | 98.8 | 98.6 | 97.8 | 96.8 | 96.4 | 83.4 | 98.8 | 96.5 | 98.2 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 93.2 | 97.0 | 94.0 | 94.5 | 96.3 | 97.8 | 98.1 | 97.7 | 95.9 | 94.9 | 95.4 | 95.4 | 95.9 | 97.8 | 96.0 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 96.4 | 97.5 | 96.5 | 94.3 | 93.3 | 96.8 | 92.7 | 96.6 | 93.8 | 91.3 | 92.0 | 93.2 | 95.9 | 94.1 | 92.8 | 91.1 |
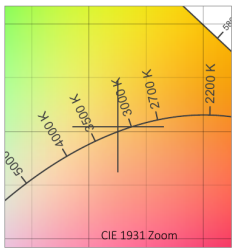
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 97 | -1% | -1% |
| 4 | 94 | -3% | -2% |
| 5 | 93 | -6% | 0% |
| 6 | 97 | -1% | 2% |
| 7 | 93 | -3% | 4% |
| 8 | 97 | 0% | 2% |
| 9 | 94 | 0% | 4% |
| 10 | 91 | 1% | 5% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 4% | 0% |
| 13 | 96 | 0% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 93 | 0% | -1% |
| 16 | 91 | 2% | -7% |

## VOYA-2.5-COB-24VDC-WD-ST-95-18/30-FL-COB-26-**-**-07

3166 K

**CRI:** 98.2

**CRI R9:** 98.5

**TM30 Rf:** 94.5

**TM30 Rg:** 100.1

**CQS:** 95.7


**X:** 0.428


**Y:** 0.404


**U:** 0.245

**V:** 0.347

**Δuv:** 0.0015

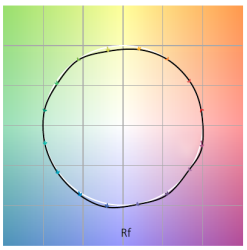

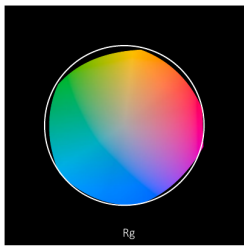
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.1 | 99.6 | 95.4 | 97.8 | 98.8 | 98.4 | 98.9 | 98.6 | 98.5 | 97.4 | 95.9 | 84.2 | 98.4 | 96.5 | 98.2 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 93.3 | 97.0 | 94.0 | 94.6 | 96.5 | 98.1 | 97.9 | 97.7 | 96.2 | 95.5 | 95.7 | 95.5 | 95.9 | 97.5 | 95.9 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 96.5 | 97.4 | 96.5 | 94.6 | 93.5 | 96.9 | 93.0 | 96.8 | 94.0 | 91.8 | 92.3 | 93.2 | 95.9 | 94.2 | 93.0 | 91.2 |
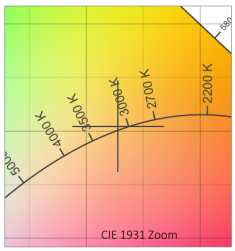
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 97 | 0% | -1% |
| 4 | 95 | -3% | -2% |
| 5 | 94 | -5% | 0% |
| 6 | 97 | -1% | 2% |
| 7 | 93 | -2% | 4% |
| 8 | 97 | 0% | 2% |
| 9 | 94 | 1% | 4% |
| 10 | 92 | 1% | 5% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 4% | 0% |
| 13 | 96 | 1% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 93 | 0% | -1% |
| 16 | 91 | 2% | -7% |

**NOTES:**
- CRI R values, only R1-R8 are used to calculate RA CRI values
- TM30 C values, 16 binned values out of total of 99 C values
- CQS Q values
- Data subject to change, all data has +/- 5% tolerance

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTLlighting | QTL.lighting

Specification subject to change. Rev-07-23-26

# VOYA 2.5" COB WARM DIM

Landscape Lighting Color Data

## VOYA-2.5-COB-24VDC-WD-ST-95-18/30-FL-COB-40-**-**-07

3223 K

**CRI:** 98.2

**CRI R9:** 98.5

**TM30 Rf:** 94.4

**TM30 Rg:** 100.0

**CQS:** 95.8


**X:** 0.424


**Y:** 0.403


**U:** 0.243

**V:** 0.346

**Δuv:** 0.0017

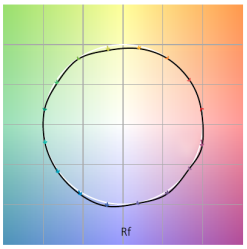

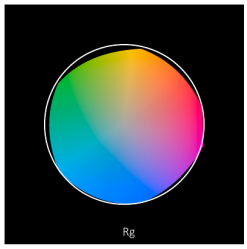
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.3 | 99.4 | 95.3 | 98.0 | 98.9 | 98.3 | 98.8 | 98.6 | 98.5 | 96.9 | 96.3 | 83.4 | 98.7 | 96.4 | 98.2 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 93.4 | 97.1 | 93.9 | 94.4 | 96.4 | 98.1 | 98.0 | 97.8 | 96.2 | 95.4 | 95.8 | 95.6 | 96.0 | 97.7 | 96.1 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 96.4 | 97.4 | 96.5 | 94.5 | 93.4 | 96.9 | 92.9 | 96.8 | 93.9 | 91.4 | 91.9 | 93.2 | 96.0 | 94.1 | 92.9 | 91.0 |
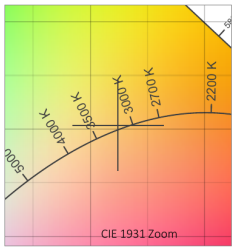
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 97 | 0% | -1% |
| 4 | 94 | -3% | -2% |
| 5 | 93 | -5% | 0% |
| 6 | 97 | -1% | 2% |
| 7 | 93 | -3% | 4% |
| 8 | 97 | 0% | 2% |
| 9 | 94 | 0% | 4% |
| 10 | 91 | 1% | 5% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 4% | 0% |
| 13 | 96 | 1% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 93 | 0% | -1% |
| 16 | 91 | 2% | -7% |

## VOYA-2.5-COB-24VDC-WD-ST-95-18/30-FL-COB-55-**-**-07

3226 K

**CRI:** 98.2

**CRI R9:** 98.6

**TM30 Rf:** 94.3

**TM30 Rg:** 100.0

**CQS:** 95.8


**X:** 0.424


**Y:** 0.403


**U:** 0.243

**V:** 0.346

**Δuv:** 0.0017

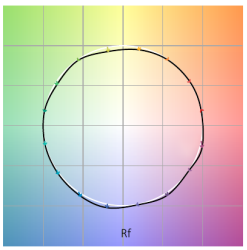

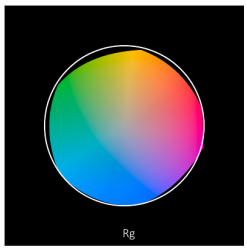
| R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | R9 | R10 | R11 | R12 | R13 | R14 | R15 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 98.3 | 99.4 | 95.3 | 98.0 | 98.8 | 98.3 | 98.8 | 98.6 | 98.6 | 96.9 | 96.3 | 83.2 | 98.6 | 96.4 | 98.1 |
| **Q1** | **Q2** | **Q3** | **Q4** | **Q5** | **Q6** | **Q7** | **Q8** | **Q9** | **Q10** | **Q11** | **Q12** | **Q13** | **Q14** | **Q15** |
| 93.3 | 97.1 | 93.9 | 94.4 | 96.4 | 98.0 | 98.0 | 97.8 | 96.2 | 95.4 | 95.8 | 95.6 | 96.0 | 97.7 | 96.0 |
| **C1** | **C2** | **C3** | **C4** | **C5** | **C6** | **C7** | **C8** | **C9** | **C10** | **C11** | **C12** | **C13** | **C14** | **C15** | **C16** |
| 96.4 | 97.4 | 96.5 | 94.4 | 93.3 | 96.9 | 92.8 | 96.7 | 93.8 | 91.3 | 91.8 | 93.2 | 96.0 | 94.1 | 92.8 | 91.0 |
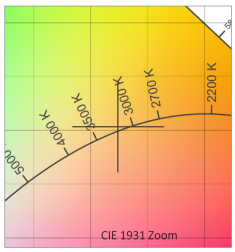
| TM30 | | | |
|---|---|---|---|
| Hue Bin | $R_f$ | Chroma | Hue |
| 1 | 96 | 0% | 1% |
| 2 | 97 | 0% | -1% |
| 3 | 97 | 0% | -1% |
| 4 | 94 | -3% | -2% |
| 5 | 93 | -5% | 0% |
| 6 | 97 | -1% | 2% |
| 7 | 93 | -3% | 4% |
| 8 | 97 | 0% | 2% |
| 9 | 94 | 0% | 4% |
| 10 | 91 | 1% | 5% |
| 11 | 92 | 3% | 5% |
| 12 | 93 | 4% | 0% |
| 13 | 96 | 1% | -3% |
| 14 | 94 | 3% | -3% |
| 15 | 93 | 0% | -1% |
| 16 | 91 | 2% | -7% |

**NOTES:**
- CRI R values, only R1-R8 are used to calculate RA CRI values
- TM30 C values, 16 binned values out of total of 99 C values
- CQS Q values
- Data subject to change, all data has +/- 5% tolerance

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTLlighting | QTL.lighting

Specification subject to change. Rev-07-23-26