

THIN

Field Assembled Extrusion - Surface & Recessed

SEE THIS EXTRUSION AS A FACTORY BUILT FIXTURE ▶

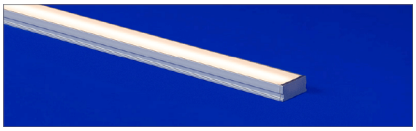



- QTL's smallest extrusion, making it a perfect fit for surface mount applications that require light to be low-profile.
- With a diffused lens, THIN will provide near diode-free results.

1 PRODUCT	2 FINISH	3 MOUNTING	4 LENS	5 WIRE INPUT/OUTPUT	6 EXTRUSION LENGTH (IN)
THIN				NI	

Sample Part Number: **THIN-ST-SST-DF-NI-48"**

1 PRODUCT

THIN

2 FINISH

ST	Satin
BK	Black
CU	Custom Color

Custom finishes require a longer lead time, consult factory

3 MOUNTING

SST	Stainless Steel
M4	Low Profile Magnet
MG	Magnet

Refer to following pages for mounting clip option details and provided quantities.

4 LENS

DF	Diffused
PR	Polar
FR	Frosted
CL	Clear
N/A	For wet rated LED Strips

For representation of LED visibility, see Diode Visibility section on following pages.
For beam angles, see Photometric Performance section on following pages.
WET rated strips are only compatible without a lens.

5 WIRE INPUT/OUTPUT

NI Not Installed

Not compatible with CL2P wire.

6 EXTRUSION LENGTH (IN)

1" increments from 1" - 98.43"
Tolerance +0.0"/-0.5"

COMPATIBLE LED STRIPS

	STATIC WHITE (SW)	STATIC WHITE STANDARD (SD-SW)	STATIC WHITE HIGH EFFICACY (SW-HE)	STATIC WHITE HIGH EFFICACY PLUS (SW-HE+)	SHIELD STATIC WHITE (SHLD-SW)	SHIELD STATIC WHITE HIGH EFFICACY (SHLD-SW-HE)	STATIC WHITE SCOB (SW-SCOB)	DYNAMIC WHITE HIGH EFFICACY (DW-HE)	WARM DIM (WD)	STATIC COLOR (SC)	RGB	RGBW	RGBW HIGH EFFICACY (RGBW-HE)
DRY	✓ W/FT: 1.5, 3.0, 4.0, 5.0	✓ W/FT: 1.0, 2.0, 4.0, 6.0	✓ W/FT: 1.5, 3.0, 6.0	✓ W/FT: 3.0, 6.0	✓ W/FT: 1.5, 3.0, 5.0	✓ W/FT: 1.5, 3.0, 6.0	✓ W/FT: 1.5, 3.0, 4.0, 5.0	✓ W/FT: 1.5, 2.5	✓ W/FT: 6.0	✓ W/FT: 5.0	✓ W/FT: 6.0	✓ W/FT: 6.0	✓ W/FT: 4.0 **NO CLEAR LENS**
DMP	✓ W/FT: 1.5, 3.0, 4.0, 5.0		✓ W/FT: 1.5, 3.0, 6.0					✓ W/FT: 1.5, 2.5	✓ W/FT: 6.0	✓ W/FT: 5.0	✓ W/FT: 6.0	✓ W/FT: 6.0	✓ W/FT: 4.0 **NO CLEAR LENS**
ENC													
WET	✓ W/FT: 1.5, 3.0, 4.0, 5.0 **NO LENS**	✓ W/FT: 1.0, 2.0, 4.0 **NO LENS**		✓ W/FT: 3.0, 6.0 **NO LENS**	✓ W/FT: 1.5, 3.0, 5.0	✓ W/FT: 1.5, 3.0, 6.0		✓ W/FT: 1.5, 2.5 **NO LENS**	✓ W/FT: 6.0 **NO LENS**	✓ W/FT: 5.0 **NO LENS**	✓ W/FT: 6.0 **NO LENS**		✓ W/FT: 4.0 **NO LENS**

Field modifications must comply with QTL's installation methods otherwise warranty is null & void | Painted end caps match the extrusion finish and have a white painted interior. Satin end caps utilize a metallic paint | Wet rated strip only compatible with no lens


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting

THIN


Field Assembled Extrusion - Surface & Recessed

SEE THIS EXTRUSION AS A FACTORY BUILT FIXTURE ▶


1 PRODUCT - DIMENSIONS




Profile




Profile with flat lens



Profile with stainless steel mounting clip

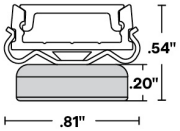

Profile with magnet mounting clip




Profile with low profile magnet

END CAPS

One pair of end caps is provided with each length of extrusion ordered.


Flat end caps

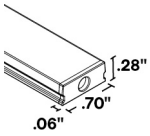

Feed

To order separately, use THIN-EC

2 FINISH



Satin

Black

Custom finishes require a longer lead time, consult factory

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting


THIN

Field Assembled Extrusion - Surface & Recessed

SEE THIS EXTRUSION AS A FACTORY BUILT FIXTURE ▶

3 MOUNTING

SST




Stainless Steel Clip

2 clips provided for 4' or less; 4 clips provided for greater than 4'

To order separately use SST-01

Each clip comes with a #4 x 5/8" Flat Head SS

M4

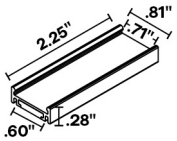


Low Profile Magnet

One M4 provided per foot.

To order separately use MG-04

MMA-04




Magnet Mount
Accessory for M4

Sold separately, to order use MMA-04

Each bracket comes with 2 #6 x 5/8 Flat Head SS

Required when mounting to a non-magnetic surface

MG




Magnet Clip

One MG provided per foot.

To order separately use MG-01

MMA-01



Magnet Mount
Accessory of MG-01

Sold separately, to order use MMA-01

Each bracket comes with 2 #6 x 5/8 Flat Head SS

Required when mounting to a non-magnetic surface

4 DIODE VISIBILITY



DF - Diffused lens

PR - Polar lens


FR - Frosted lens

CL - Clear lens

PHOTOMETRIC PERFORMANCE

Nominal beam spread shown, beam spread varies based on light engine. For more detailed information, see factory built fixture photometric data.


CL



Clear 109°


COMPATIBLE ACCESSORIES

HINGE - HMB-M



Adjustable mounting bracket - Medium

HINGE - HMB-L



Adjustable mounting bracket - Large

HINGE - HMB-XL



Adjustable mounting bracket - XLarge

Q-PIVOT




Small mounting accessory

Q-ANGLE



Adjustable mounting accessory

QUOVA-STANDARD




QUOVA Knife Edge

VHB




Double sided mounting tape

MMA-01



Magnet Mount Accessory of MG-01

MMA-04



Magnet Mount Accessory of MG-04

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | www.QTL.lighting

Specification subject to change. Rev-03-17-26

THIN LUMEN MULTIPLIER

LUMEN MULTIPLIER FORMULA

Bare LED Lumens x Extrusion Finish/Lens Value = Delivered Lumens

Example: **172 lm/ft x 0.88 = 151 lm/ft**

SW24/1.5 at 3000K x THIN Extrusion in Satin with FR Lens

Diode free or near Diode free

SW			
LENS	Finish		
	Satin	Black	Bronze
	(ST)	(BK)	(BZ)
CL	0.89	0.77	N/A
FR	0.88	0.76	N/A
PR	0.83	0.72	N/A
DF	0.75	0.65	N/A

SW-HE			
LENS	Finish		
	Satin	Black	Bronze
	(ST)	(BK)	(BZ)
CL	0.90	0.80	N/A
FR	0.90	0.80	N/A
PR	0.85	0.74	N/A
DF	0.78	0.63	N/A

Data is subject to change | All data has +/- 5% tolerance


© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

THIN


Field Assembled Extrusion Installation Instructions

ATTENTION: Please read all instructions BEFORE installation

- Product to be installed by a licensed electrician
- Always ensure power supply connection to electrical circuit is disconnected before working on it
- Follow diagram to connect Secondary Voltage wires to power supply. Refer to QTL power supply instructions for wiring
- Use only with Class 2 power supply unit — Warranty only valid with QTL power supplies
- Surface mount
- Suitable for DRY, DAMP, and WET rated without lens
- Suitable for installation in storage area of a clothes closet when assembled as a finished extrusion up to 4W/ft at QTL facility
- Not rated for walkover
- Input Voltage: 24VDC
- Diagrams for representation only and not to scale.
- Once a wet strip or a damp strip is cut, it cannot be reconnected.

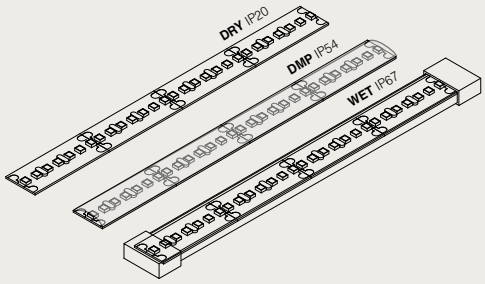

METHODS OF INSTALLATION:

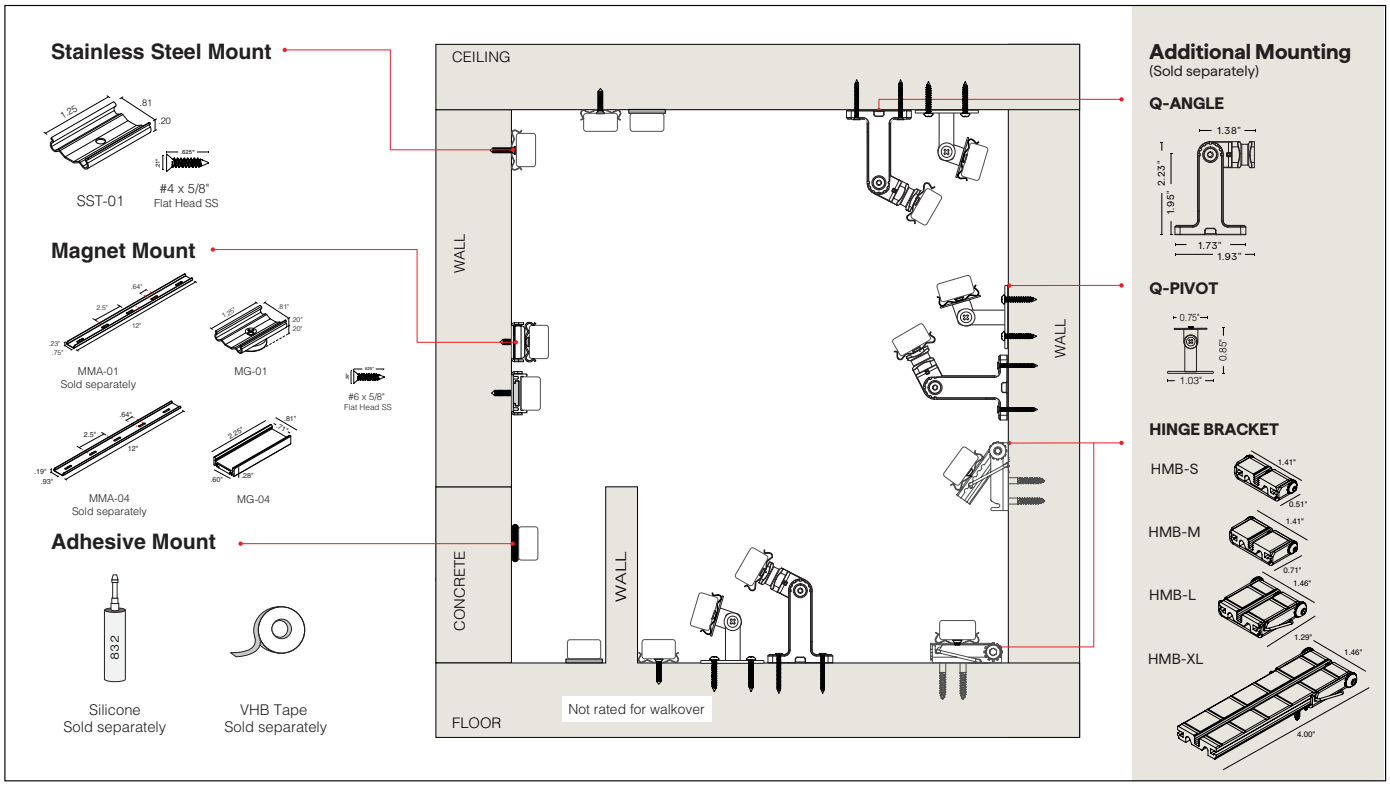

SURFACE MOUNTING METHOD

- VHB Mount (page 9-10)
- Silicone Mount (page 11)
- Screw Mount (page 12)
- Magnet Mount (page 13)
- Low Profile Magnet Mount (page 14)

RECESSED MOUNTING METHOD

- Screw Mount (page 15)


NOTES:

- *Avoid bending in sharp angles which may damage the LED.*
- *Always test LED operation before installing in extrusion. Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure.*
- *Diagrams for representation only and not to scale.*


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

THIN

Field Assembled Extrusion Installation Instructions



THIN-PROFILE

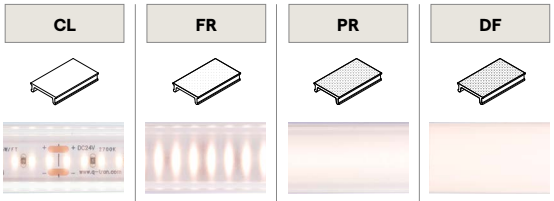


Clear | Frosted | Polar | Diffused

COMPONENTS & HARDWARE

Alternate screw lengths can be used in installation as long as the screw diameter size is consistent with the included screw diameter size

STAINLESS STEEL CLIP




SST-01

Included	
	Flat Head Screw #4x5/8"

- 2 clips provided for 4' or less; 4 clips provided for greater than 4'

MAGNET CLIP




MG-01

Included	
	Flat Head Screw #6x5/8"

- One magnet clip per foot

LOW PROFILE MAGNET CLIP




MG-04

Included	
	Flat Head Screw #6x5/8"

- One magnet clip per foot

ACCESSORIES SOLD SEPARATELY

MAGNET MOUNT ACCESSORY; sold individually

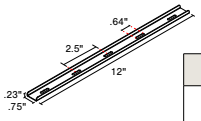


Included
Flat Head Screw #6x5/8"

MMA-01

- MMA-01 comes in 12" pieces; use at least one clip per MMA-01 accessory
- MMA-01 can be cut into smaller pieces, if desired


HINGE BRACKET; sold individually



HMB-S
HMB-M
HMB-L
HMB-XL

Included
• 3/4" long mount screw • 1/4" #4 clip mount screw

Q-ANGLE; sold in pairs



Q-ANGLE

Included
• 2 SS 6-32 Fillister screws • 2 SS 4-40 Flat head clip screws • 4 SS #6x1.25" Flat head wood screws


Q-PIVOT; sold in pairs



Q-PIVOT

Included
• SS #4-40x3/16 Flat head screw • 2 #4x3/4 Pan head screws

LOW PROFILE MAGNET MOUNT ACCESSORY; sold Individually




Included
2 #6x5/8" Flat Head screws

MMA-04

- MMA-03 comes in 96" pieces; can be cut into smaller pieces, if desired
- Required when mounting to a non-magnetic surface


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

ADHESIVE SOLD SEPARATELY	
SILICONE	VHB TAPE; sold in 15' increments
 DOWSIL 832	 TAPE-VHB-IP20


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

LED STRIP LEAD WIRE & JUMPER INSTRUCTIONS: **DRY IP20**

If LED wires are pre-soldered from the factory, skip to page 7.

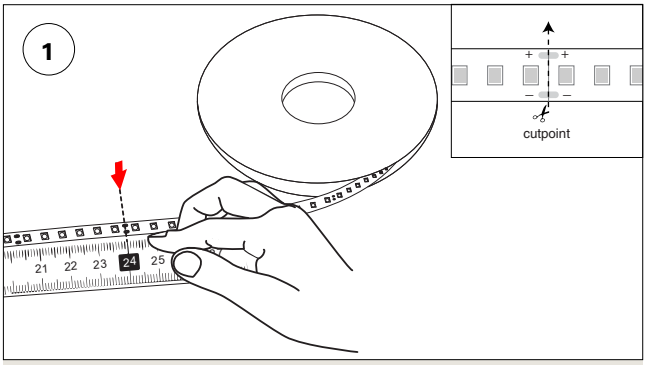


Measure and cut LED strip to desired length with scissors along the cut point.

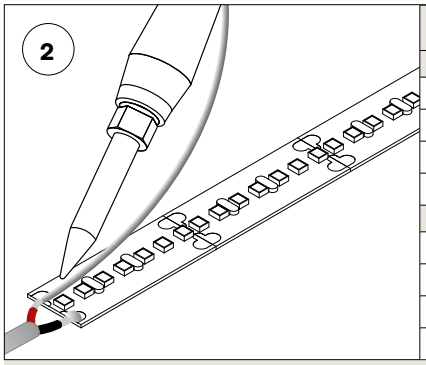


ITEMS INCLUDED
iQ-LED-24-KIT
(1) 24" Lead wire
(1) 6" Solder
(1) 1" Shrink Tube
(1) 1/2" Shrink Tube
iQ-JUMP-6-KIT
(1) 6" Lead wire
(1) 6" Solder
(2) 1" Shrink Tube
(2) 1/2" Shrink Tube

Solder lead wire onto solder pad. Confirm wires are matched up correctly before soldering. See wiring diagrams below for specific light engine details.

NOTE: Recommended soldering iron temperature of 650˚ – 700˚F for lead-free solder.

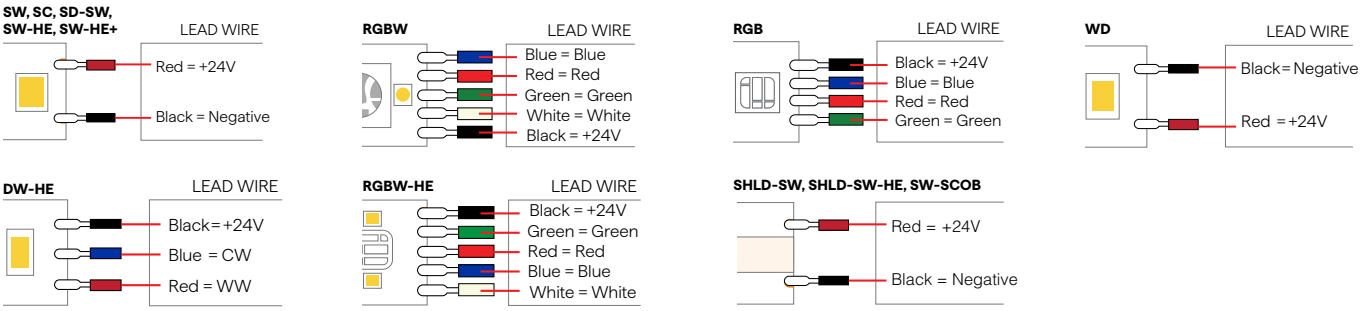

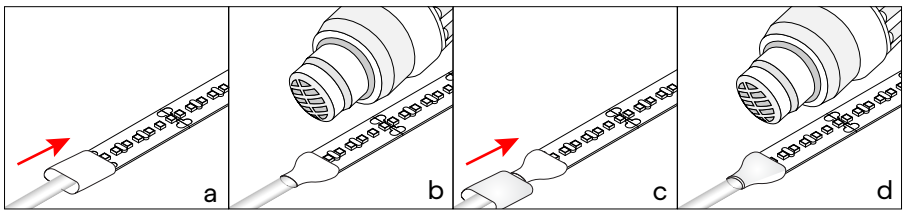

NOTE:
Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure before proceeding with step #3.

ONCE ALL CONNECTIONS ARE FUNCTIONING PROPERLY, DISCONNECT POWER AND BEGIN HEAT SHRINKING INSTRUCTIONS BELOW:

a: Place 1st sleeve (1/2" Shrink Tube) on lead wire.

b: Shrink the tube with heat gun.

c: Place 2nd sleeve (1" Shrink Tube) on lead wire.

d: Shrink the tube with heat gun.


NOTES:

- *Avoid bending in sharp angles which may damage the LED.*
- *Always test LED operation before installing in extrusion. Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure.*
- *Diagrams for representation only and not to scale.*

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


LED STRIP LEAD WIRE & JUMPER INSTRUCTIONS: **DMP IP54**

If LED wires are pre-soldered from the factory, skip to page 7.

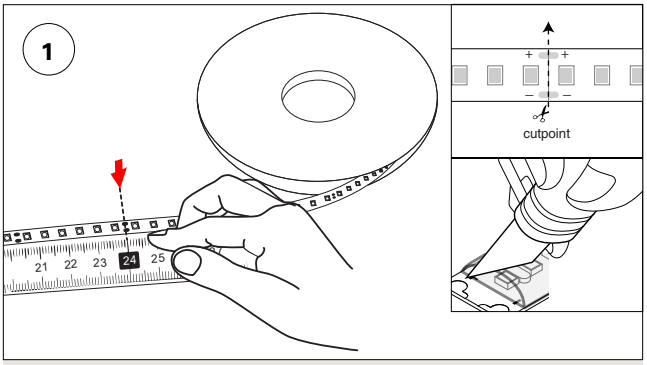

Measure and cut LED strip to desired length with scissors along the cut point.


- Carefully peel polyurethane back to expose the solder pads.

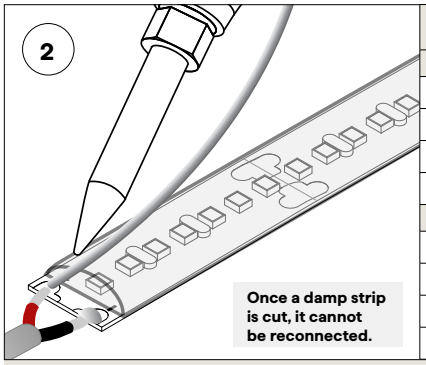



ITEMS INCLUDED
iQ-LED-24-KIT
(1) 24" Lead wire
(1) 6" Solder
(1) 1" Shrink Tube
(1) 1/2" Shrink Tube
iQ-JUMP-6-KIT
(1) 6" Lead wire
(1) 6" Solder
(2) 1" Shrink Tube
(2) 1/2" Shrink Tube


Solder lead wire onto solder pad. Confirm wires are matched up correctly before soldering. See wiring diagrams below for specific light engine details.


NOTE: Recommended soldering iron temperature of 650˚ – 700˚F for lead-free solder.

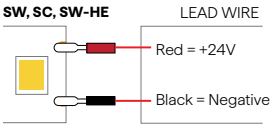

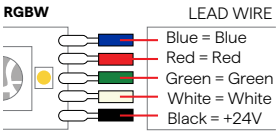

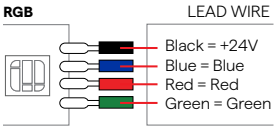


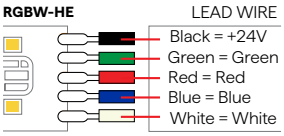

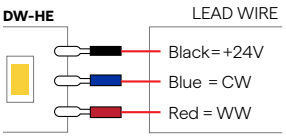

3

NOTE:
Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure before proceeding with step #3.

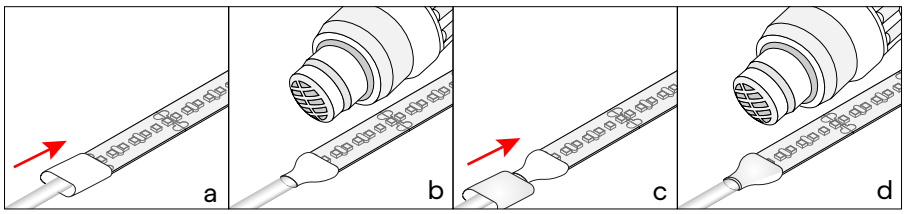

ONCE ALL CONNECTIONS ARE FUNCTIONING PROPERLY, DISCONNECT POWER AND BEGIN HEAT SHRINKING INSTRUCTIONS BELOW:

a: Place 1st sleeve (1/2" Shrink Tube) on lead wire.

b: Shrink the tube with heat gun.

c: Place 2nd sleeve (1" Shrink Tube) on lead wire.

d: Shrink the tube with heat gun.


NOTES:

- *Avoid bending in sharp angles which may damage the LED.*
- *Always test LED operation before installing in extrusion. Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure.*
- *Diagrams for representation only and not to scale.*


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

LED STRIP LEAD WIRE & JUMPER INSTRUCTIONS: **WET IP67**

If LED wires are pre-soldered from the factory, skip to page 7.

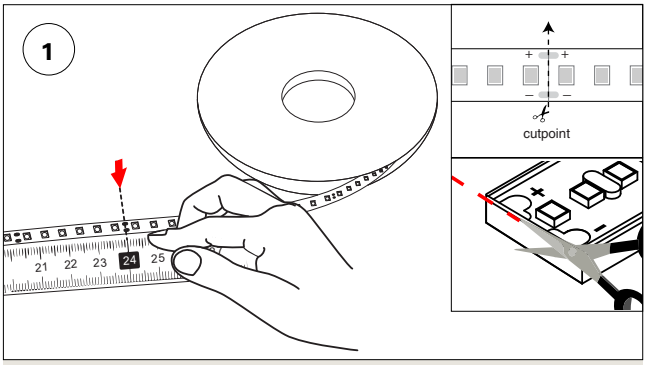


Measure and cut LED strip to desired length with scissors along the cut point.

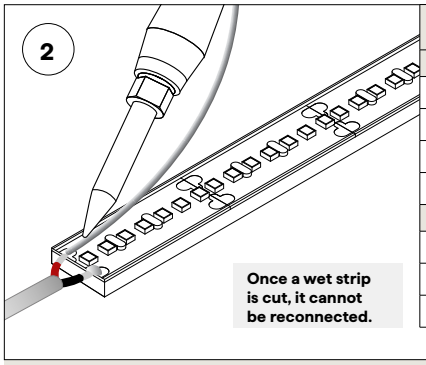



ITEMS INCLUDED
iQ-LED-67-KIT
(1) 24" Lead wire
(1) 6" Solder
(1) Lead wire cap
(1) End Cap
iQ-JUMP-67-KIT
(1) 6" Lead wire
(1) 6" Solder
(2) Lead wire Caps


Solder lead wire onto solder pad. Confirm wires are matched up correctly before soldering. See wiring diagrams below for specific light engine details.


NOTE: Recommended soldering iron temperature of 650˚ – 700˚F for lead-free solder.

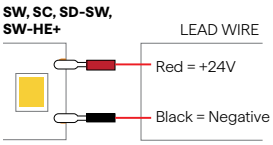

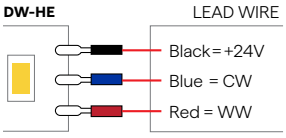

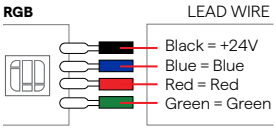


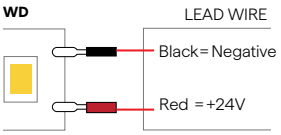

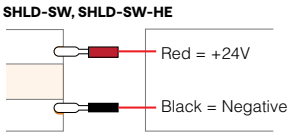

3

NOTE:
Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure before proceeding with step #3.

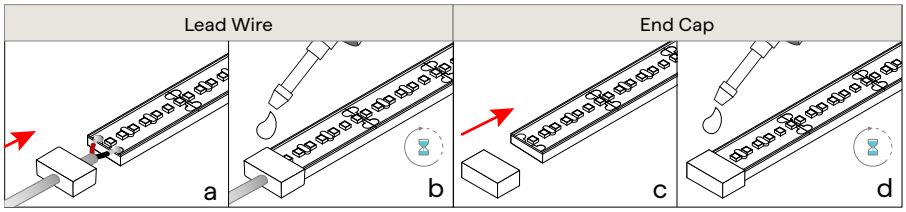

ONCE ALL CONNECTIONS ARE FUNCTIONING PROPERLY, DISCONNECT POWER AND BEGIN HEAT SHRINKING INSTRUCTIONS BELOW:

a: Place lead wire cap over wire

b: Add silicone inside connector and glue around the edge to secure gap; allow time for glue to dry.

c: Place end cap over the end of LED

d: Add silicone inside connector and glue around the edge to secure gap; allow time for glue to dry.

NOTES:

- *Avoid bending in sharp angles which may damage the LED.*
- *Always test LED operation before installing in extrusion. Connect LED to power supply to ensure it is working properly and all non-factory soldered connections are secure.*
- *Diagrams for representation only and not to scale.*


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

THIN

Field Assembled Extrusion Installation Instructions


CUTTING EXTRUSIONS FOR IN-FIELD ASSEMBLY INSTALLATION

QTL strongly recommends cutting the extrusion and lens together to achieve a clean cut.

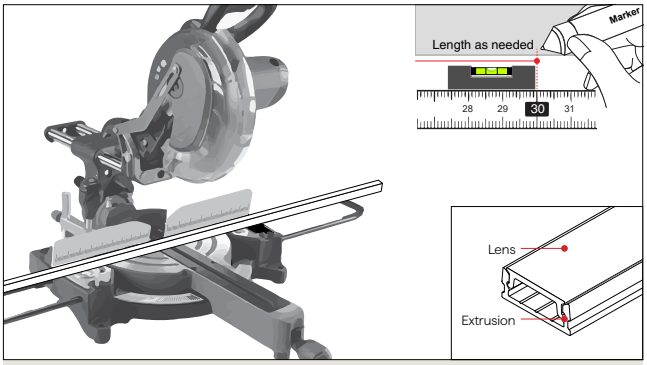

To achieve corners or angles, measure the LED extrusion to desired length and cut with a miter saw.


OR

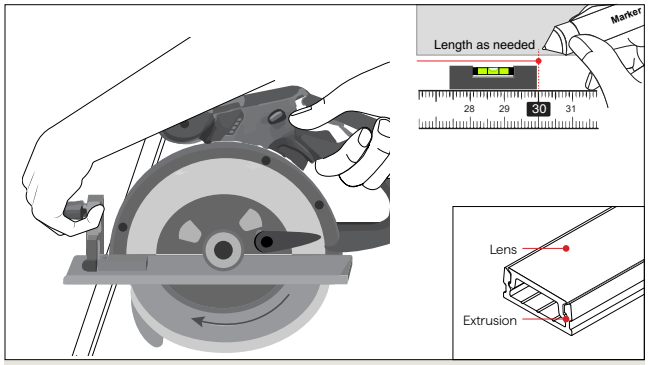


For straight runs, measure LED extrusion to desired length and cut it with a circular saw.

NOTE: Using the proper blade for aluminum, cut to the desired length. Recommend using a 10 in.x 80 tooth medium aluminum saw blade.

CONFIGURATION OPTIONS




Single End Feed

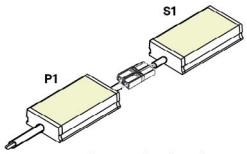


Connection by others

Non-Continuous End Feed




Connection by others

Non-Continuous Corner Feed

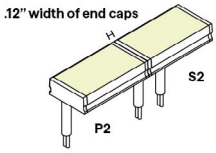

Continuous Bottom Feed

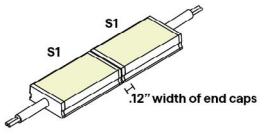

Continuous End to End Feed


Review wire method to ensure clean installation prior to mounting finished Fixture.

NOTE: Additional wire methods include:
S1 & S2: Connector/Wire Input only
P1 & P2: Connector/Wire Input and Output


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

LED INSERTION FOR IN-FIELD ASSEMBLY INSTALLATION


STRIP IN EXTRUSION

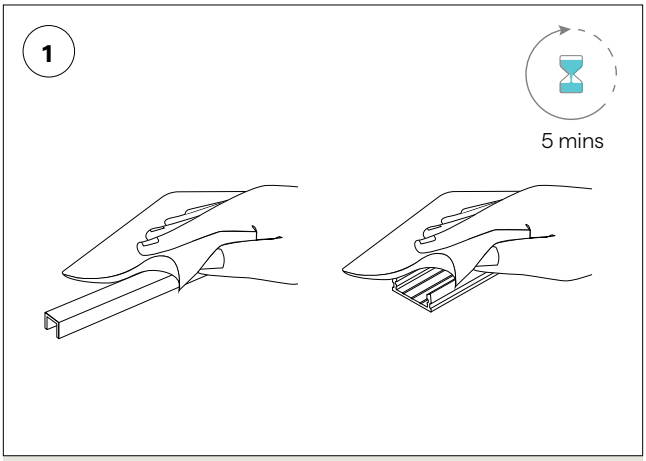


Using a 50/50 alcohol mix, thoroughly clean surface area of the extrusion and tray. Allow 5 minutes to dry.

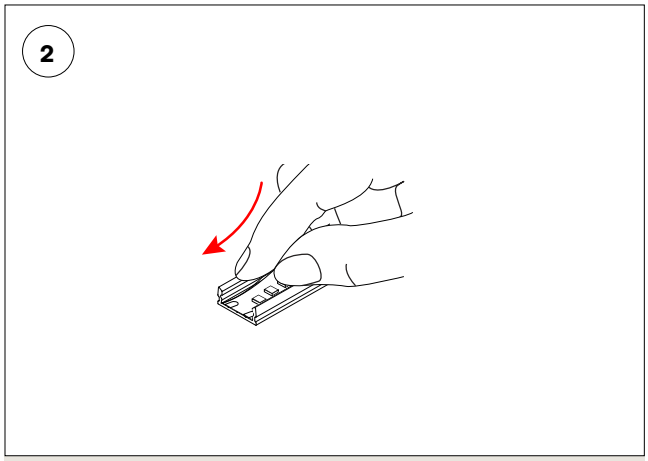

Peel back 0.5" of the VHB tape's protective film on one end of LED and use firm pressure to adhere it to the extrusion, avoiding air bubbles. Continue peeling the film and adhering the strip in small sections until the entire length is installed.

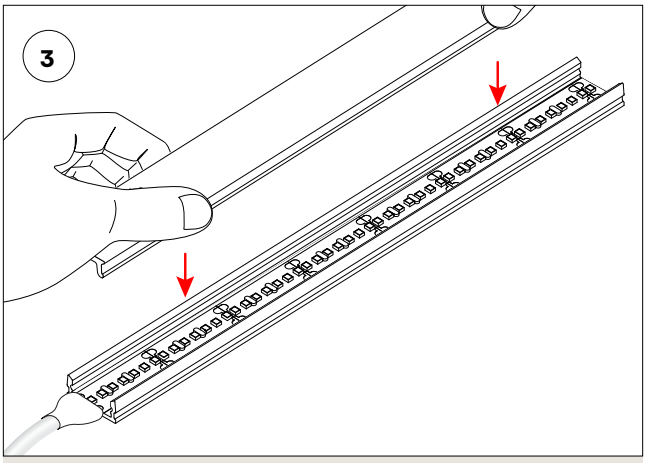

Apply uniform pressure until the extrusion and lens snap securely together.

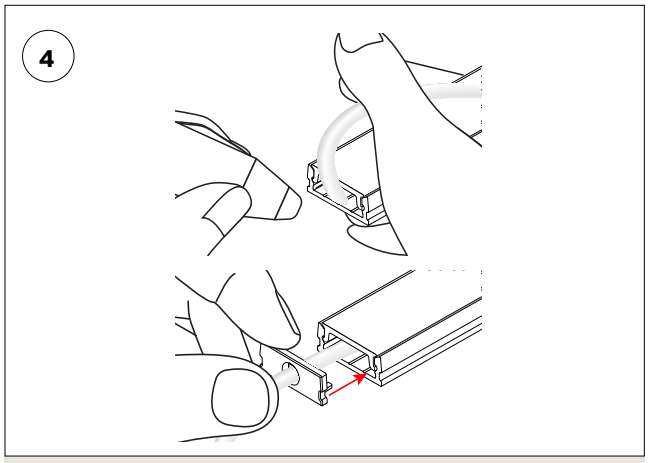


Add glue inside the end cap and glue around edges to secure end cap in place. Do not allow glue to come in contact with LED.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

SURFACE MOUNTING METHOD

SURFACE PREPARATION


1

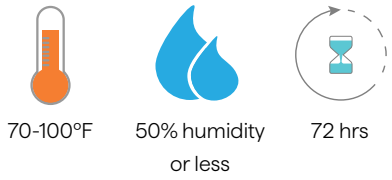

Temperature and environmental concerns:

- Ideal application environment is 70-100°F in 50% humidity or less.
- Minimum application temperature: 50°F
- This temperature and humidity should be maintained for 72 hours after application for maximum bond strength.


2

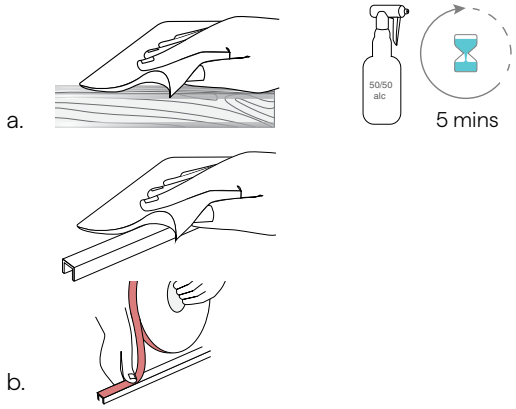

a. Using a 50/50 alcohol mix, thoroughly clean the backside of the extrusion and the surface area where extrusion will be installed. Allow 5 minutes to dry.

b. Peel back 0.5" of the VHB tape's protective film on one end and use firm pressure to adhere it to the desired surface, avoiding air bubbles. Continue peeling the film and adhering the tape in small sections until the entire length is installed.

3

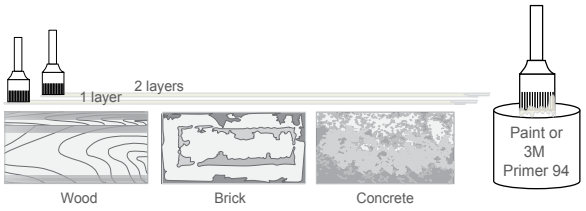


For porous materials (Wood, Brick, Concrete etc.) apply two layers of paint or primer to the surface. This will help create a better bonding surface for these materials. These can be purchased from a local hardware store.

MATERIALS	SUGGESTED EPOXIES
Concrete, Stone, Cinderblock, Metal, and Brick	Loctite Metal and Concrete Two-Part Epoxy
ABS, Fiberglass, Plastic, and PVC	Loctite Plastic Two-Part Epoxy
Tile, Wood, Ceramic, Glass, or Metal	Loctite Clear Two-Part Epoxy
All Purpose	Strong Stik


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

SURFACE MOUNTING METHOD: **VHB ADHESIVE MOUNT**

BEFORE installation, the surface must be thoroughly cleaned and dried for maximum bond strength.

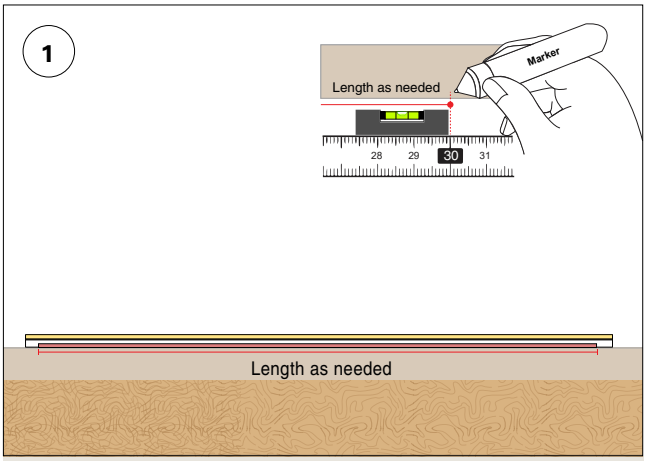


Determine the THIN extrusion(s) location and positioning on desired surface before adhering extrusion to surface. Make any necessary reference markings to indicate extrusion placement.

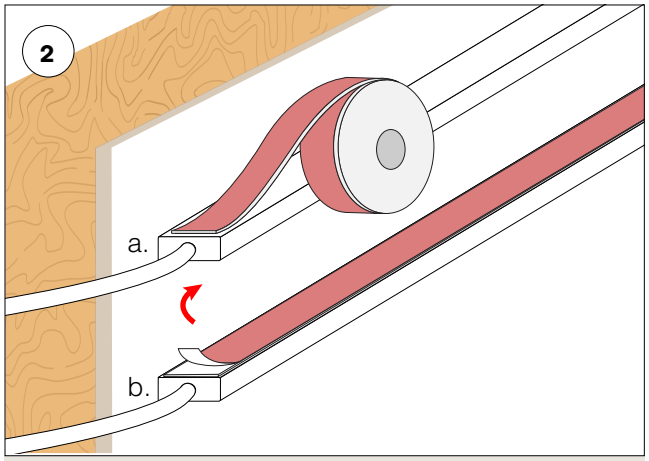

a. To adhere the VHB adhesive, peel the white film back while evenly applying the tape to the mounting side of the extrusion. The red side should be visible.

b. Remove the red film and position extrusion in place according to your previous reference marking(s).

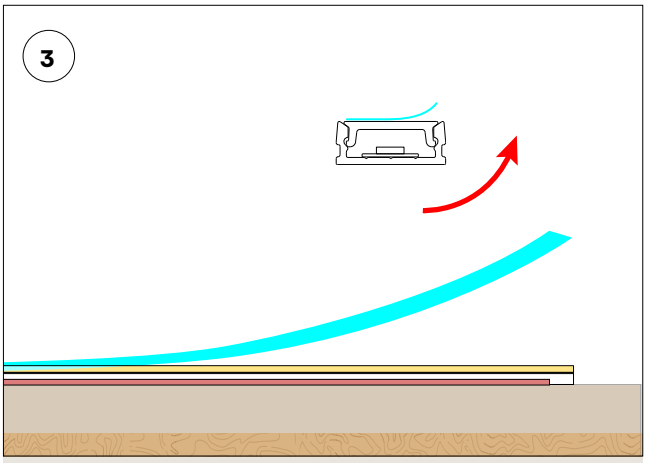


Remove protective film from the surface of the extrusion's lens.

NOTES: *EPOXY ALTERNATIVE: For improved bonding strength, apply a small amount of epoxy at each end. Refer to table on* page 9 *for suggested epoxies. These can be purchased at a local hardware store. Please follow all manufacturer instructions for suggested epoxy.*


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

SURFACE MOUNTING METHOD: **SILICONE**

- 2 clips provided for 4’ or less; 4 clips provided for greater than 4’

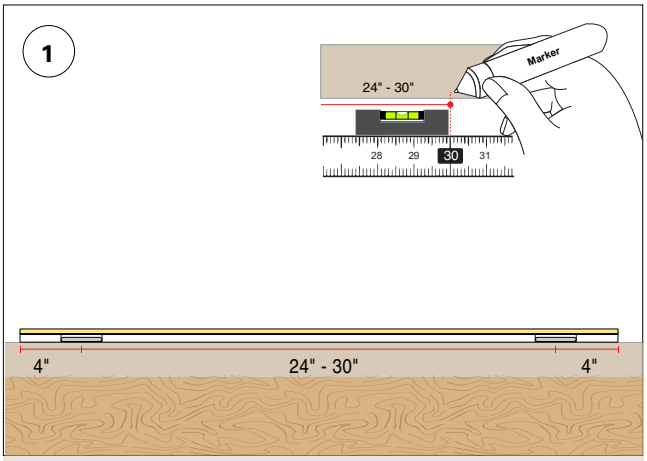


Determine the THIN extrusion(s) location and positioning on desired surface; evenly distribute clips. Make any necessary reference markings to indicate where each clip is to be secured in place. Recommended every 24” - 30”.

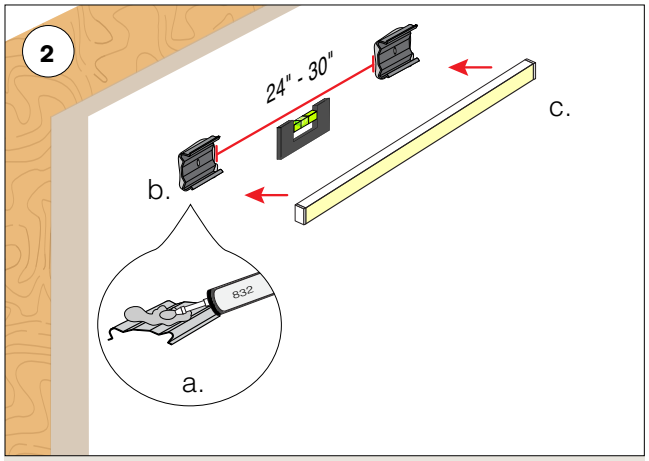

a. Firmly press the silicone-coated clips on the marked reference points.
b. Wait for silicone adhesive to cure completely before snapping extrusion into place.
c. Snap extrusion onto clips.

NOTE: Cure time is dependent on the type of silicone adhesive used. Refer to silicone product manufacturer for accurate drying time.

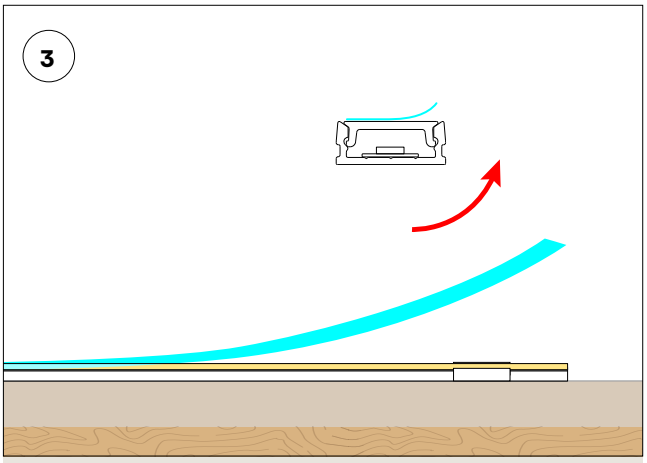

Remove protective film from the surface of the extrusion’s lens.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

THIN


Field Assembled Extrusion Installation Instructions

SURFACE MOUNTING METHOD: **SCREW MOUNT**

- 2 clips provided for 4’ or less; 4 clips provided for greater than 4’

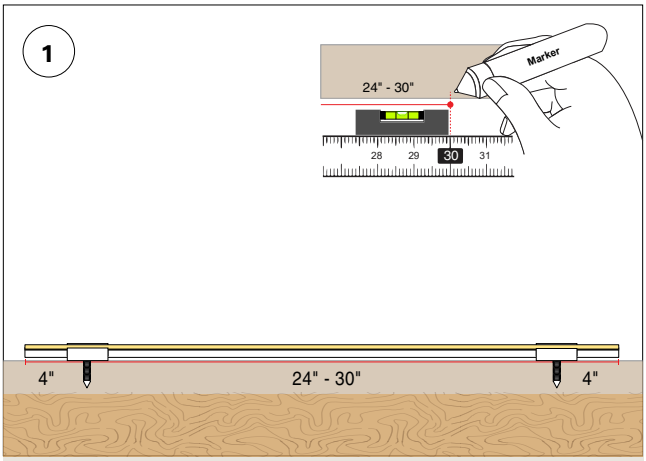

Determine the THIN extrusion(s) location and positioning on desired surface; evenly distribute clips. Make any necessary reference markings to indicate where each clip is to be secured in place. Recommended every 24” - 30”.

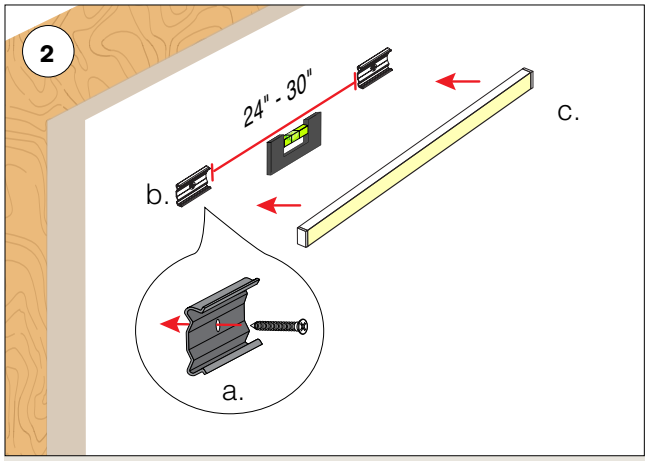


a. Secure clips using the #4 flat head hardware provided.

b. Ensure the screw head is flush with the clip’s base.

c. Snap extrusion onto clips.

NOTE: Flat head screw type is dependent on surface/application material. Alternative flat head screws may be required. Refer to the surface material manufacturer for suggested screw type.

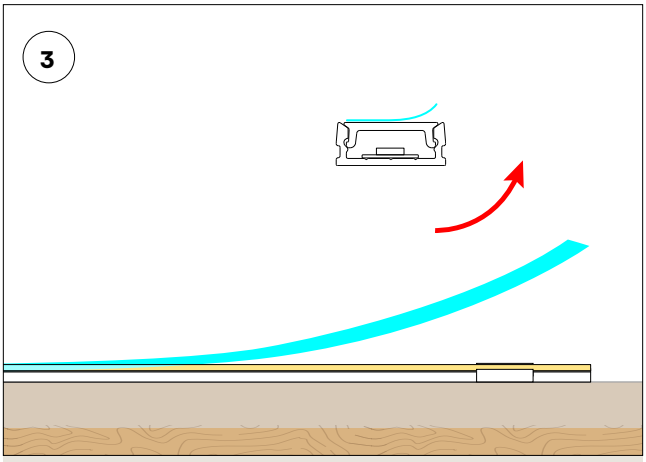

Remove protective film from the surface of the extrusion’s lens.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

THIN


Field Assembled Extrusion Installation Instructions

SURFACE MOUNTING METHOD: **MAGNET MOUNT**

- One magnet clip per foot
- MMA-01 comes in 12” pieces; use at least one clip per MMA-01 accessory
- MMA-01 can be cut into smaller pieces, if desired

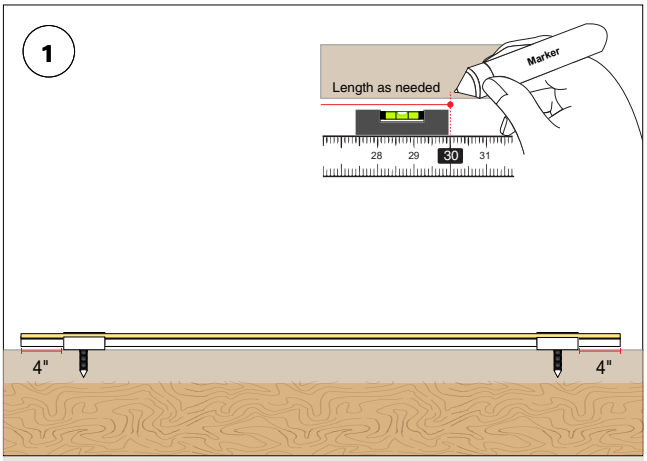

Determine the THIN extrusion(s) location and positioning on desired surface; evenly distribute clips. Make any necessary reference markings to indicate where each clip is to be secured in place.

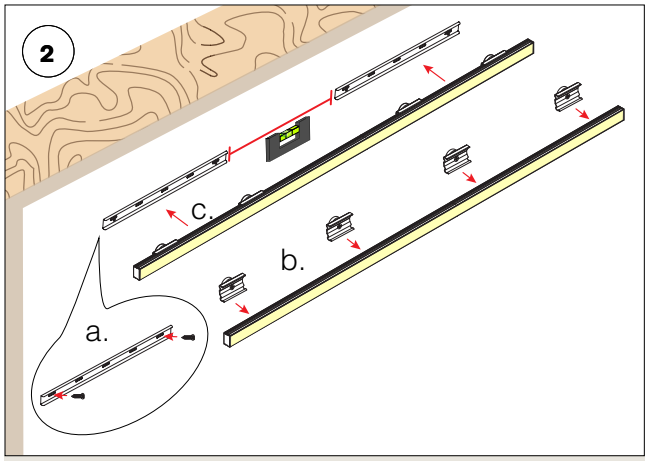


a. Mount the two #6 flat head screws into the 12” magnet mount accessory bracket through the slotted holes at each end. Ensure the screw head is flush with the magnet mount bracket.

b. Snap the magnet clips onto the backside of the extrusion. They should be offset to the accessory bracket screws to maximize magnetic connection.

c. Place the assembled extrusion into the magnet mount bracket.

NOTE: If surface application requires a longer screw, the screw size must be a #6 Flat Head.

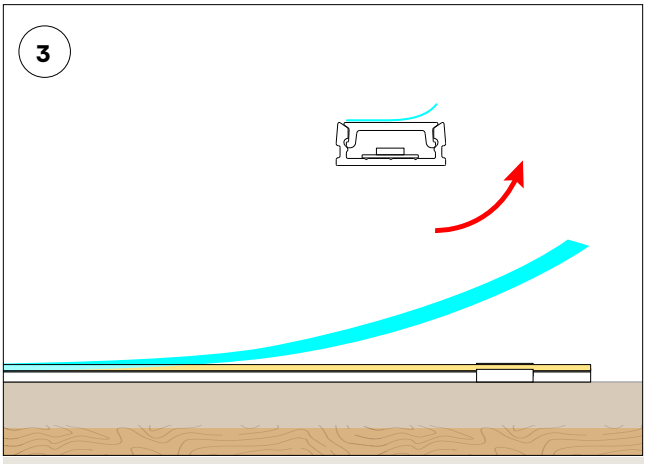


Remove protective film from the surface of the extrusion’s lens.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

SURFACE MOUNTING METHOD: **LOW PROFILE MAGNET MOUNT**

- One magnet clip per foot
- MMA-04 comes in 12" pieces; use at least one clip per MMA-04 accessory
- MMA-04 can be cut into smaller pieces, if desired

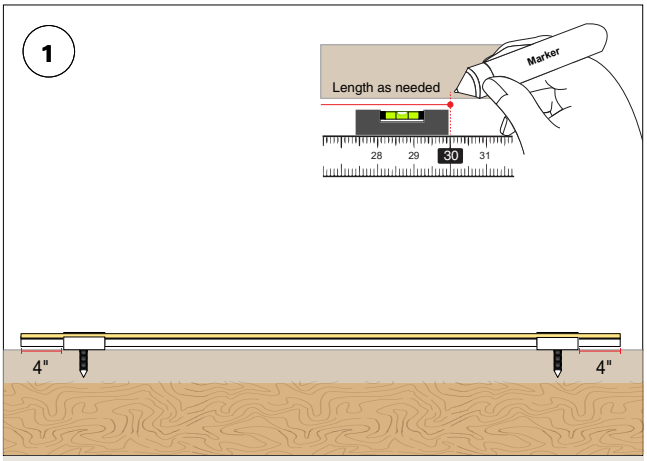

Determine the THIN fixture(s) location and positioning on desired surface. Make any necessary reference markings to indicate where the magnet mount accessory bracket is to be secured in place.

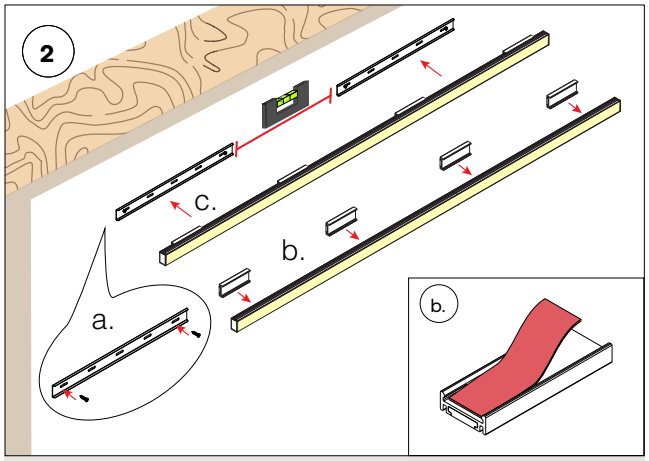


a. Mount the two #6 flat head screws into the magnet mount accessory bracket through the slotted holes at each end. Ensure the screw head is flush with the magnet mount bracket.

b. Snap the magnet clips onto the backside of the fixture. They should be offset to the accessory bracket screws to maximize magnetic connection. If the clip does not fit securely onto the extrusion, apply the provided foam onto the inner face of the magnet clip.

c. Place the assembled fixture into the magnet mount bracket.

NOTE: If surface application requires a longer screw, the screw size must be a #6 Flat Head.

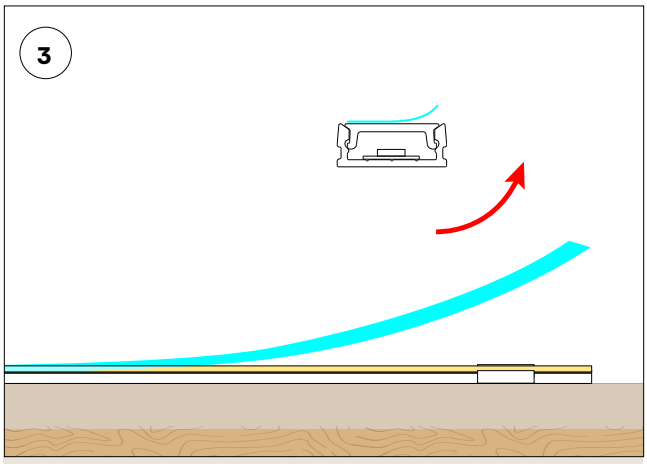

Remove protective film from the surface of the fixture's lens.

© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting


THIN

Field Assembled Extrusion Installation Instructions

RECESSED MOUNTING METHOD: **MILLWORK**

- One magnet clip per foot
- MMA-01 comes in 12" pieces; use at least one clip per MMA-01 accessory
- MMA-01 can be cut into smaller pieces, if desired


1

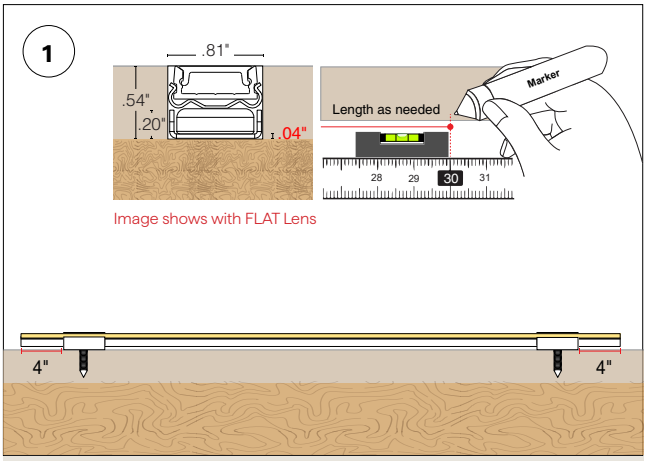

Determine the THIN extrusion(s) location and positioning on desired surface; evenly distribute clips. Make any necessary reference markings to indicate where each clip is to be secured in place.

NOTE: Depth of the channel in the millwork is dependent on overall height with the magnet clip and Magnet Mount Accessory.

2

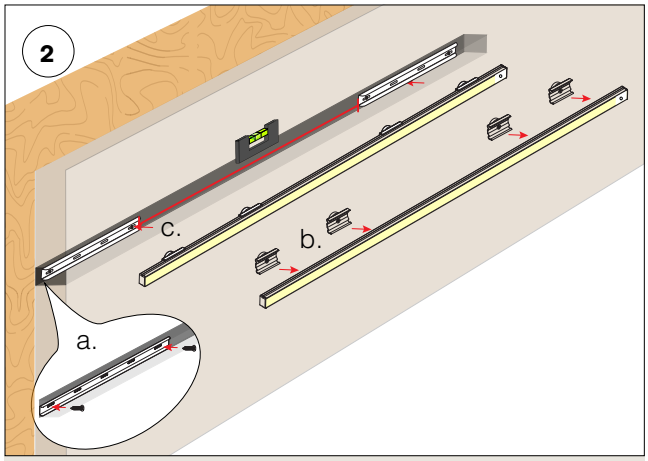


a. Mount the two #6 flat head screws into the 12" magnet mount accessory bracket through the slotted holes at each end. Ensure the screw head is flush with the magnet mount bracket.

b. Snap the magnet clips onto the backside of the extrusion. They should be offset to the accessory bracket screws to maximize magnetic connection.

c. Place the assembled extrusion into the magnet mount bracket.

NOTE: If surface application requires a longer screw, the screw size must be a #6 Flat Head.

3

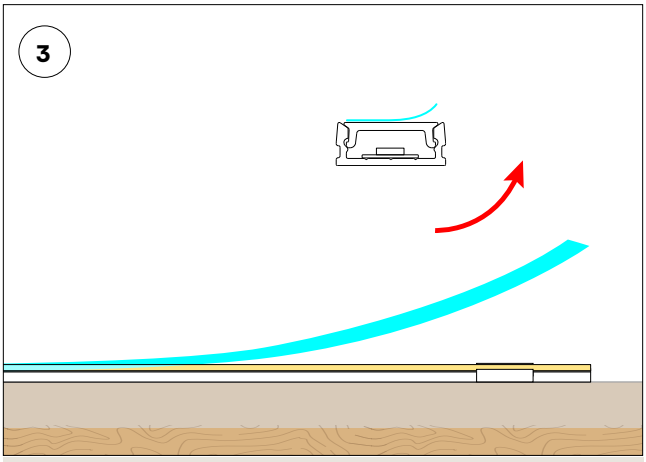

Remove protective film from the surface of the extrusion's lens.


© 2026 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting

MATERIAL RECYCLING

LINEAR FIXTURES/EXTRUSIONS

You may be done with your products, but chances are they still have more to give. Follow these instructions to break down and sort recyclable components. Check with local recycling collection to ensure they accept the materials listed below.

Additionally, Q-Tran offers a Takeback Program. Contact factory for information.

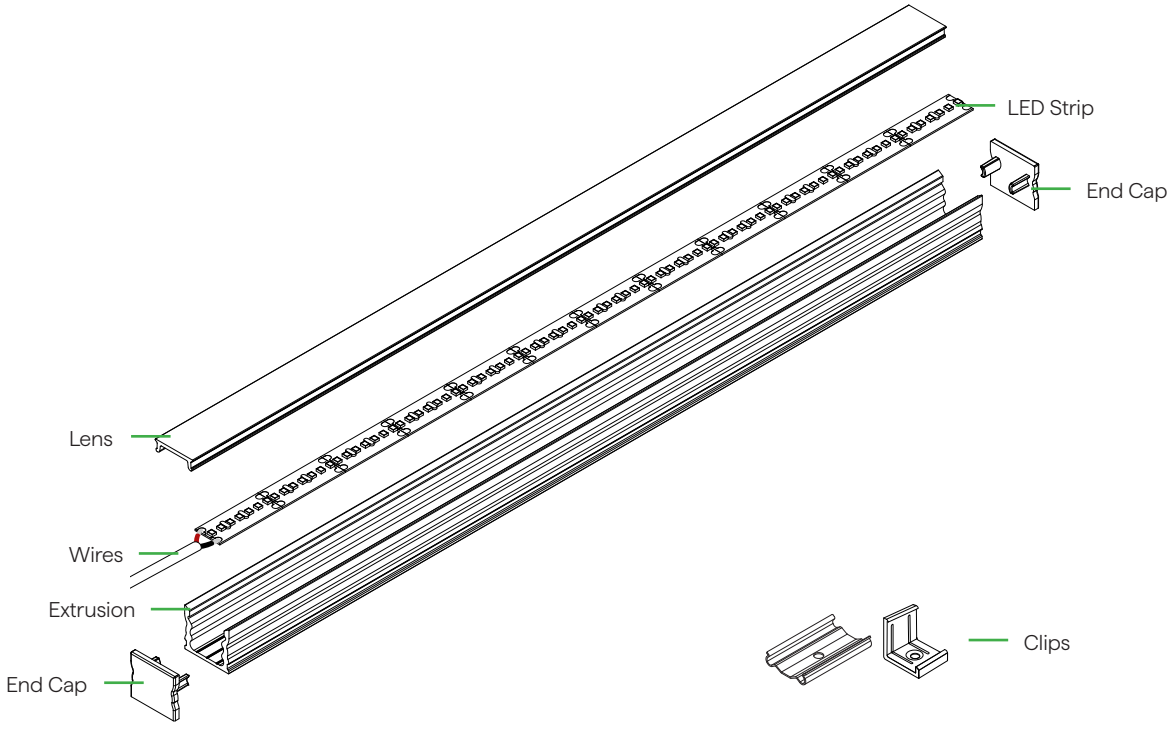

7	E	41	40
Lens Plastic End Caps Plastic Clips	LED Strip Wires	Extrusion Metal End Caps	Stainless Steel Clips

© 2024 QTL. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | sales@QTL.lighting | QTL.lighting